

2481-906/11
plusline

INSTRUCTION MANUAL

This instruction manual applies to machines from the following serial numbers onwards:

2 216 531 →



This Instruction Manual is valid for all models and subclasses listed in the chapter "**Specifications**".

The reprinting, copying or translation of PFAFF Instruction Manuals, whether in whole or in part, is only permitted with our previous authorization and with written reference to the source.

**PFAFF Industriesysteme
und Maschinen AG**

Hans-Geiger-Str. 12 - IG Nord
D-67661 Kaiserslautern

		Chapter – Page
	Contents	Chapter – Page
1	Safety	1 - 1
1.01	Directives	1 - 1
1.02	General notes on safety	1 - 1
1.03	Safety symbols	1 - 2
1.04	Important points for the user	1 - 2
1.05	Operating and specialist personnel	1 - 3
1.05.01	Operating personnel	1 - 3
1.05.02	Specialist personnel	1 - 3
1.06	Danger	1 - 4
2	Proper use	2 - 1
3	Specifications	3 - 1
3.01	PFAFF 2481-906/11	3 - 1
3.02	Models and subclasses	3 - 1
4	Disposal of machine	4 - 1
5	Transport, packaging and storage	5 - 1
5.01	Transportation to customer's premises	5 - 1
5.02	Transport within the customer's premises	5 - 1
5.03	Disposal of the packaging	5 - 1
5.04	Storage	5 - 1
6	Explanation of the symbols	6 - 1
7	Control elements	7 - 1
7.01	On/off switch	7 - 1
7.02	Keys on machine head	7 - 1
7.03	Pedal	7 - 2
7.04	Lever for lifting the presser foot	7 - 2
7.05	Knee switch	7 - 3
7.06	Control panel	7 - 4
7.06.01	Screen displays	7 - 4
7.06.02	Function keys	7 - 4
8	Mounting and commissioning the machine	8 - 1
8.01	Mounting	8 - 1
8.01.01	Adjusting the table-top height	8 - 1
8.01.02	Mounting the spool holder	8 - 2
8.01.03	Connecting the plug-in connections and earth cables	8 - 3
8.02	Commissioning	8 - 4
8.03	Switching the machine on/off	8 - 4
8.04	Start inhibitor	8 - 5
8.04.01	Mounting the start inhibitor	8 - 5

Contents

	Contents	Chapter – Page
8.04.02	Checking the function of the start inhibitor	8 - 5
8.05	Table top cutout	8 - 6
9	Preparation	9 - 1
9.01	Inserting the needle	9 - 1
9.02	Winding the bobbin thread, adjusting the thread tension	9 - 2
9.03	Removing/Inserting the bobbin case	9 - 3
9.04	Inserting the bobbin in the bobbin case	9 - 3
9.05	Threading the bobbin case / Adjusting the bobbin thread tension	9 - 4
9.06	Threading the needle thread	9 - 5
9.07	Entering the stitch length	9 - 6
9.08	Entering the maximum stitch length	9 - 6
9.09	Entering the maximum speed	9 - 7
9.10	Setting the remaining stitches for the bobbin thread control	9 - 7
9.11	Entering the start and end backtacks	9 - 8
10	Sewing	10 - 1
10.01	Manual sewing	10 - 1
10.02	Programmed sewing	10 - 2
10.03	Error messages	10 - 3
11	Input	11 - 1
11.01	Seam program input	11 - 1
11.02	Example of a seam program input	11 - 1
12	Care and Maintenance	12 - 1
12.01	Cleaning the machine	12 - 1
12.02	Topping up the oil tank	12 - 2
13	Adjustment	13 - 1
13.01	Notes on adjustment	13 - 1
13.02	Tools, gauges and other accessories	13 - 1
13.03	Abbreviations	13 - 1
13.04	Control and adjustment aids	13 - 2
13.05	Adjusting the basic machine	13 - 3
13.05.01	Basic position of the machine drive unit	13 - 3
13.05.02	Preadjusting the needle height	13 - 4
13.05.03	Neutral position of the bottom feed dog	13 - 5
13.05.04	Zero position of the needle feed	13 - 6
13.05.05	Feeding motion of the bottom feed dog	13 - 7
13.05.06	Feeding motion of the needle feed	13 - 8
13.05.07	Lifting stroke of the bottom feed dog	13 - 9
13.05.08	Height of the bottom feed dog / Position in the needle plate cutout	13 - 10
13.05.09	Needle in needle hole centre	13 - 11
13.05.10	Hook shaft bearing and toothed belt tension	13 - 12

	Contents	Chapter – Page
13.05.11	Hook lubrication	13 - 13
13.05.12	Needle rise, hook-to-needle clearance, needle height and bobbin case position finger ..	13 - 14
13.05.13	Thread check spring and slack thread regulator	13 - 16
13.05.14	Presser foot clearance	13 - 17
13.05.15	Setting the zero point of the feed regulator	13 - 18
13.05.16	Stitch length adjustment forwards and in reverse	13 - 19
13.05.17	Bobbin winder	13 - 20
13.05.18	Mechanical limiting of the stitch length	13 - 21
13.05.19	Presser foot pressure	13 - 22
13.06	Adjusting the thread trimming device -900/24	13 - 23
13.06.01	Adjusting the solenoid / preliminary adjustment of the control cam	13 - 23
13.06.02	Lateral alignment of the thread catcher	13 - 24
13.06.03	Knife position	13 - 25
13.06.04	Front point of reversal of the thread catcher	13 - 26
13.06.05	Manual trimming check	13 - 27
13.06.06	Thread tension release	13 - 28
13.06.07	Readjusting the control cam	13 - 29
13.07	Function control of the bobbin thread monitor	13 - 30
13.08	Parameter settings	13 - 31
13.08.01	Example of a parameter input	13 - 31
13.08.02	Selecting the user level	13 - 32
13.08.03	List of parameters	13 - 33
13.09	Explanation of the error messages	13 - 40
13.10	Service functions	13 - 41
13.11	Internet update of the machine software	13 - 46
14	Wearing parts	14 - 1
15	Circuit diagrams	15 - 1

1 Safety

1.01 Directives

This machine is constructed in accordance with the European regulations contained in the conformity and manufacturer's declarations.

In addition to this Instruction Manual, also observe all generally accepted, statutory and other regulations and legal requirements and all valid environmental protection regulations!

The regionally valid regulations of the social insurance society for occupational accidents or other supervisory organizations are to be strictly adhered to!

1.02 General notes on safety

- This machine may only be operated by adequately trained operators and only after having completely read and understood the Instruction Manual!
- All Notes on Safety and Instruction Manuals of the motor manufacturer are to be read before operating the machine!
- The danger and safety instructions on the machine itself are to be followed!
- This machine may only be used for the purpose for which it is intended and may not be operated without its safety devices. All safety regulations relevant to its operation are to be adhered to.
- When exchanging sewing tools (e.g. needle, roller presser, needle plate and bobbin), when threading the machine, when leaving the machine unattended and during maintenance work, the machine is to be separated from the power supply by switching off the On/Off switch or by removing the plug from the mains!
- Everyday maintenance work is only to be carried out by appropriately trained personnel!
- Repairs and special maintenance work may only be carried out by qualified service staff or appropriately trained personnel!
- Work on electrical equipment may only be carried out by appropriately trained personnel!
- Work is not permitted on parts and equipment which are connected to the power supply! The only exceptions to this rule are found in the regulations EN 50110.
- Modifications and alterations to the machine may only be carried out under observance of all the relevant safety regulations!
- Only spare parts which have been approved by us are to be used for repairs! We expressly point out that any replacement parts or accessories which are not supplied by us have not been tested and approved by us. The installation and/or use of any such products can lead to negative changes in the structural characteristics of the machine. We are not liable for any damage which may be caused by non-original parts.

1.03 Safety symbols



Danger!
Points to be observed.



Danger of injury for operating and specialist personnel!



Electric voltage!
Danger to operating or technical staff!



Caution

Do not operate without finger guard and safety devices.
Before threading, changing bobbin and needle, cleaning etc. **switch off main switch.**

1.04 Important points for the user

- This Instruction Manual is an integral part of the machine and must be available to the operating personnel at all times.
- The Instruction Manual must be read before operating the machine for the first time.
- The operating and specialist personnel is to be instructed as to the safety equipment of the machine and regarding safe work methods.
- It is the duty of the user to only operate the machine in perfect running order.
- It is the obligation of the user to ensure that none of the safety mechanisms are removed or deactivated.
- It is the obligation of the user to ensure that only authorized persons operate and work on the machine.

Further information can be obtained from your PFAFF agent.

1.05 Operating and specialist personnel

1.05.01 Operating personnel

Operating personnel are persons responsible for the equipping, operating and cleaning of the machine as well as for taking care of problems arising in the sewing area.

The operating personnel is required to observe the following points and must:

- always observe the Notes on Safety in the Instruction Manual!
- never use any working methods which could adversely affect the safety of the machine!
- not wear loose-fitting clothing or jewelry such as chains or rings!
- also ensure that only authorized persons have access to the potentially dangerous area around the machine!
- always immediately report to the person responsible any changes in the machine which may limit its safety!

1.05.02 Specialist personnel

Specialist personnel are persons with a specialist education in the fields of electrics, electronics and mechanics. They are responsible for the lubrication, maintenance, repair and adjustment of the machine.

The specialist personnel is obliged to observe the following points and must:

- always observe the Notes on Safety in the Instruction Manual!
- switch off the On/Off switch before carrying out adjustments or repairs, and ensure that it cannot be switched on again unintentionally!
- wait until the luminous diode on the control box is no longer blinking or on before beginning adjustment or repair work.
- never work on parts which are still connected to the power supply! Exceptions are explained in the regulations EN 50110.
- replace the protective coverings and close the electrical control box after all repairs or maintenance work!

1.06

Danger



A working area of **1 meter** is to be kept free both in front of and behind the machine while it is in operation so that it is always easily accessible.



Never reach into the sewing area while sewing! Danger of injury by the needle!



Never leave objects on the table while adjusting the machine settings! Objects can become trapped or be slung away! Danger of injury!

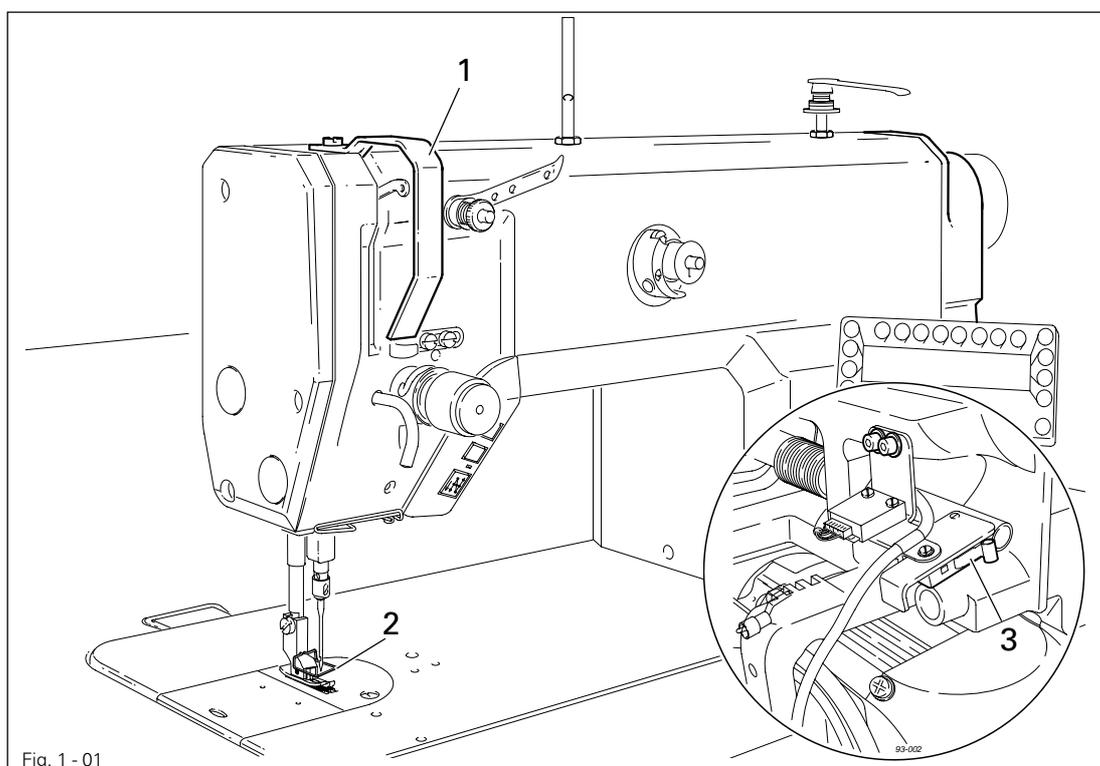


Fig. 1 - 01



Do not operate the machine without its take-up lever guard **1!**
Danger of injury due to the motion of the take-up lever!



Do not operate the machine without the finger guard **2!**
Danger of injury by the needle!



Do not start the machine without start inhibitor **3!**
Danger of injury if the machine is started accidentally!

2

Proper use

The PFAFF 2481-906/11 is an ultra high-speed, single needle sewing machine with compound feed.

The machine is used in industry for sewing lockstitch seams.



Any and all uses of this machine which have not been approved of by the manufacturer are considered to be inappropriate! The manufacturer cannot be held liable for any damage caused by the inappropriate use of the machine! The appropriate use of the machine includes the observance of all operational, adjustment, maintenance and repair measures required by the manufacturer!

3 Specifications *

3.01 PFAFF 2481-906/11

Stitch type: 301 (lockstitch)

Needle system: 134

Needle size in 1/100 mm:

Model A: 60 - 70

Model B: 80 - 100

Effective balance wheel diameter: 65 mm

Presser foot clearance: 9 - 13 mm

Clearance width: 260 mm

Clearance height: 125 mm

Bed plate dimensions: 476 x 177 mm

Sewing head dimensions:

Length: ca. 550 mm

Width: ca. 180 mm

Height (above table): ca. 300 mm

Max. stitch length: 6.0 mm

Max. speed: 4500 spm ▲

Connection data:

Operating voltage: 230 V ± 10 %, 50/60 Hz

Max. power consumption: 400 VA

Fuse protection: 1 x 16 A, inert

Leakage current ≤ 5 mA♦

Ambient temperature

85% rel. humidity (condensation not permitted): 5 - 40° C

Noise data:

Noise emission level at workplace with a sewing speed of 3200 spm: $L_{pA} < 81$ dB(A) ■

(Noise measurement in accordance with DIN 45 635-48-A-1, ISO 11204, ISO 3744, ISO 4871)

Net weight of sewing head: ca. 30 kg

Gross weight of sewing head: ca. 38 kg

* Subject to alterations

♦ Due to the use of network filters there is a nominal leakage current of ≤ 5 mA.

▲ Depending on the stitch length, the max. speed is reduced automatically within the max. preset value.

■ $K_{pA} = 2.5$ dB

.02 Models and subclasses

Additional equipment:

4 Disposal of machine

- The proper disposal of the machine is the responsibility of the customer.
- The materials used in the machines are steel, aluminium, brass and various plastics. The electrical equipment consists of plastics and copper.
- The machine is to be disposed of in accordance with the locally valid environmental protection regulations. If necessary, a specialist is to be commissioned.



Special care is to be taken that parts soiled with lubricants are separately disposed of in accordance with the locally valid pollution control regulations!

5 Transport, packaging and storage

5.01 Transportation to customer's premises

The machines are delivered completely packed.

5.02 Transport within the customer's premises

The manufacturer bears no liability for transport within the customer's premises or to the individual locations of use. Make sure that the machines are always transported upright.

5.03 Disposal of the packaging

The packaging of these machines consists of paper, cardboard and VCE fiber. The proper disposal of the packaging is the responsibility of the customer.

5.04 Storage

The machine can be stored for up to 6 months if not in use. During this time it should be protected from dust and moisture.

For longer storage the individual parts of the machine, especially the moving parts, must be protected from corrosion, e.g. by a film of oil.

Explanation of the symbols

6 Explanation of the symbols

In the following section of this Instruction Manual, certain tasks or important pieces of information are accentuated by symbols.

The symbols used have the following meanings:



Note, information



Cleaning, care




Lubrication, greasing



Servicing, repairing, adjustment, maintenance
(only to be carried out by specialist personnel)

7 Control elements


7.01 On/off switch

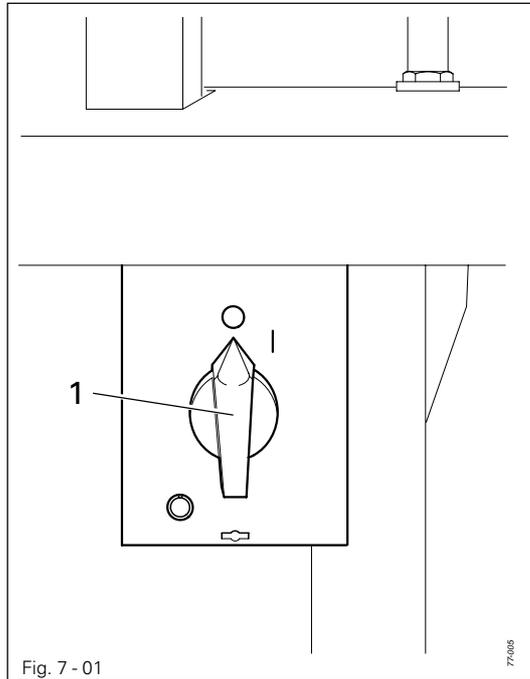

Before switching on the machine, raise the take-up lever as far as possible.

- The machine can be switched on or off by turning the on/off switch 1.

7.02 Keys on machine head

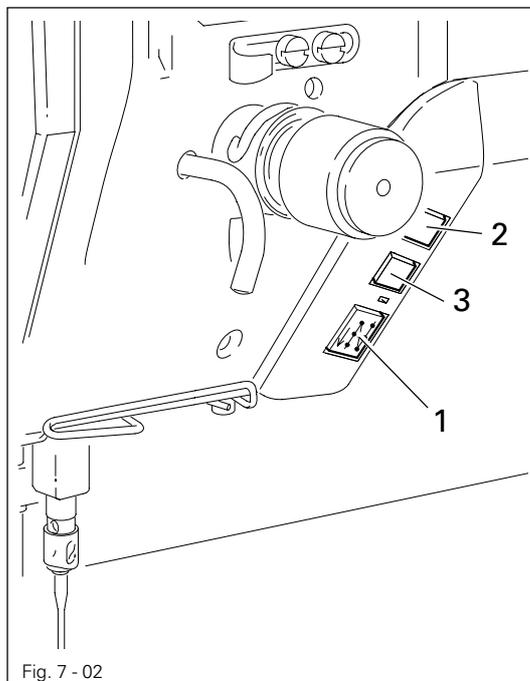


- By operating the respective keys, the following functions are carried out:

Key 1: Reverse sewing

Key 2: Raise the needle, without thread trimming


Key 3: Bartack suppression

7.03 Pedal

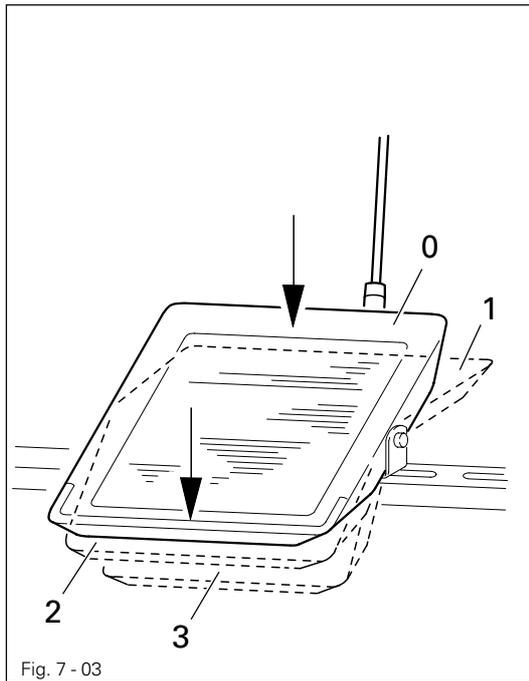


- 0 = Neutral position
- 1 = Sewing
- 2 = Raise presser foot
- 3 = Cut thread / reset bobbin thread monitor or bobbin rest thread count function

7.04 Lever for lifting the presser foot

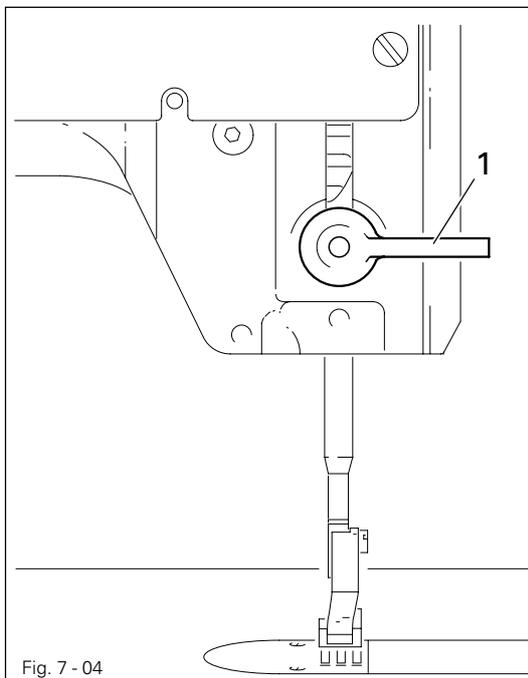

- The presser foot is raised by turning lever 1.

7.05 Knee switch

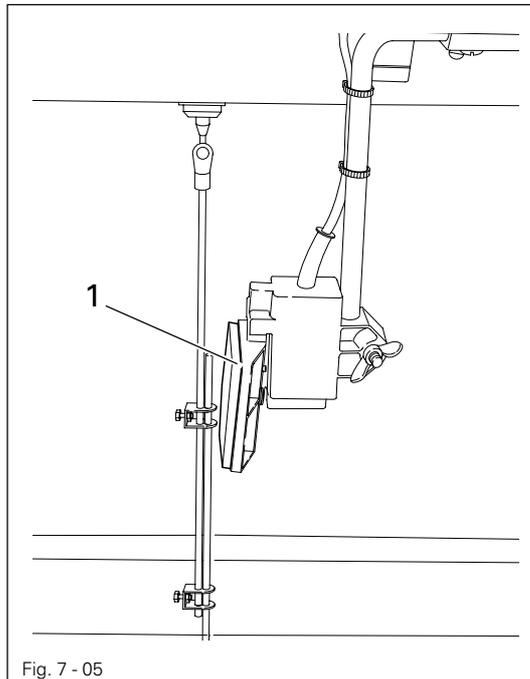


- After knee switch 1 has been pressed, the maximum stitch length is used for the next seam section.



The value for the maximum stitch length is set with parameter "849", see **Chapter 9.08 Entering the maximum stitch length.**

7.06 Control panel

The control panel is used to create and alter seam programs, enter parameter values and read error messages and service settings.

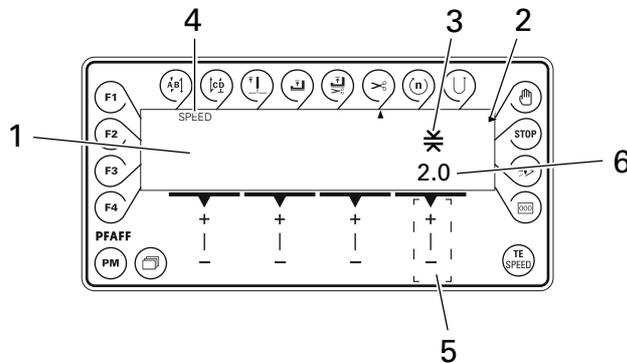


The control panel consists of display 1 and the function keys described below. Display 1 consists of a two-row, alpha-numerical display with 16 symbols per row. The special symbols 3 and texts 4 show the respective status of the function keys and the operating modes of the machine.

During the power-on phase the control panel automatically switches on all LCD segments and the horn. Afterwards the lettering PFAFF appears on the display, until the higher-ranking control unit sends commands to the control panel.

7.06.01 Screen displays

- Activated functions are displayed with a triangular marking 2 below or next to the respective function key.
- In the sewing mode all relevant sewing data is displayed and these can be changed directly, depending on the status of the machine, see also **Chapter 10 Sewing**.
- During the parameter input the selected parameter number with the corresponding value is displayed, see **Chapter 13.08 Parameter settings**.
- During the seam program input the inputs are carried out in relevant input menus, see **Chapter 11.01 Seam program input**.

7.06.02 Function keys



The function keys described below are used basically to switch machine functions on and off.

If a corresponding value has to be set for the activated function, this is carried out with the corresponding +/- key. For example, by pressing and holding the +/- key 5, the numerical value 6 shown above the key is changed slowly to begin with. If the +/- key 5 is held down longer, the numerical value 6 is changed more quickly.



Start backtacks

- If this key is pressed, the backtacks at the beginning of the seam (start backtacks) are switched on or off. The number of forward stitches (A) or reverse stitches (B) for the start backtacks can be changed by pressing the +/- key underneath. To convert from double backtack to single backtack set the number of stitches for the corresponding seam section at zero.



End backtacks

- If this key is pressed, the backtacks at the end of the seam (end backtacks) are switched on or off. The number of reverse stitches (C) or forward stitches (D) can be changed by pressing the +/- key underneath. To convert from double backtack to single backtack set the number of stitches for the corresponding seam section at zero.



Needle position

- If this key is pressed the "needle raised after sewing stop" function is switched on or off. When the function is switched on, the needle positions at t.d.c. after sewing stops.



Foot position after stop

- If this key is pressed the "foot raised after sewing stop" function is switched on or off. When the function is switched on, the presser foot is raised after sewing stops.



Foot position after trimming

- If this key is pressed the "foot raised after thread trimming" function is switched on or off. When the function is switched on, the presser foot is raised after thread trimming.



Thread trimmer

- If this key is pressed the thread trimming function is switched on or off.



Speed

- If this key is pressed the corresponding function is switched on or off. When the function is switched on, the current seam section is sewn at the speed entered irrespective of the pedal position (Parameter "222", see **Chapter 13.11 Parameter settings**).



Reverse sewing

- If this key is pressed the corresponding function is switched on or off. When the function is switched during programmed sewing, the corresponding seam section is sewn in reverse.



Manual seam end

- If this key is pressed the corresponding function is switched on or off. When the function is switched on, the move to the next seam section is not carried out by stitch counting or sensor, but manually with the use of the pedal (position "-2").



Programmed stop

- If this key is pressed the corresponding function is switched on or off. When the function is switched on, the machine stops automatically at the end of a seam section.



Sensor

- No function



Stitch counting

- If this key is pressed the corresponding function is switched on or off. When the function is switched on, the machine moves to the next seam section after sewing the number of stitches entered.



TE/Speed

- If this key is pressed once while the machine is in the sewing mode, the input menu for the maximum speed is selected. If no input is made within 5 seconds, the sewing mode is selected again.
- If this key is pressed twice (within 5 seconds) while the machine is in the sewing mode, the machine switches to parameter input.
- If this key is pressed once while the machine is in the parameter input mode, the altered values are stored and the sewing mode is selected.



Scrolling

- If this key is pressed the machine scrolls among the displays (parameters), if more than 4 parameters are directly accessible in the sewing mode.



PM

- If this key is pressed the programmed sewing function is switched on or off. When the function is switched on, the letters "PM" appear on the display of the control panel. The parameters related to the program are shown in the alpha-numerical part of the display.



F1

- F1

If this key is pressed the service menu is selected, see **Chapter 13.10 Service functions**.



F2

- No function



F3

- No function



F4

- If this key is pressed, the next bartack is not sewn.

8 Mounting and commissioning the machine



The machine must only be mounted and commissioned by qualified personnel!
All relevant safety regulations are to be observed!



If the machine is delivered without a table, be sure that the frame and the table top which you intend to use can hold the weight of the machine and the motor. It must be ensured that the supporting structure is sufficiently sturdy, even during sewing operations.


8.01 Mounting

The necessary electricity supply must be available at the machine's location. Also, a stable and horizontal surface as well as adequate lighting are required at the location.



Depending on the type of table, the method of packaging used may require that the table top be lowered for transport. The following is a description of how to adjust the height of the table top.


8.01.01 Adjusting the table-top height

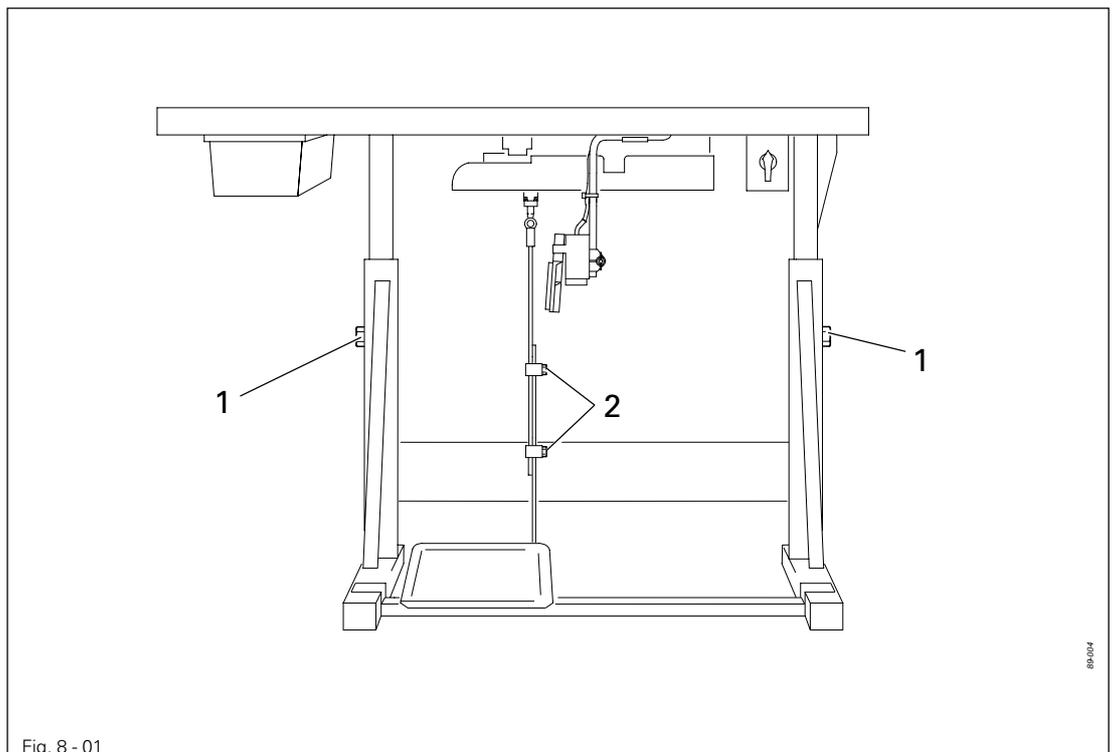

- Loosen screws **1** and **2** and set the desired table-top height
- Tighten screws **1** well.
- Adjust the pedal to the desired position and tighten screw **2**.


Mounting and commissioning the machine

8.01.02 Mounting the spool holder

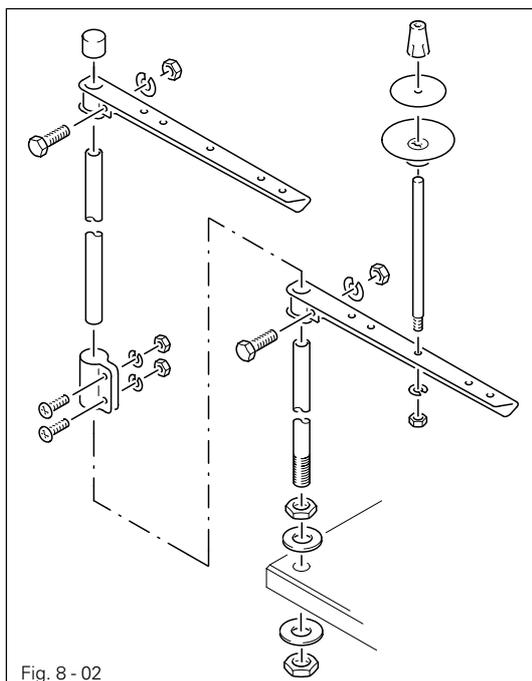

- Mount the spool holder as shown in Fig. 8-02.
- Insert the spool holder into the hole in the table top and fasten it with the nuts enclosed.


8.01.03 Connecting the plug-in connections and earth cables

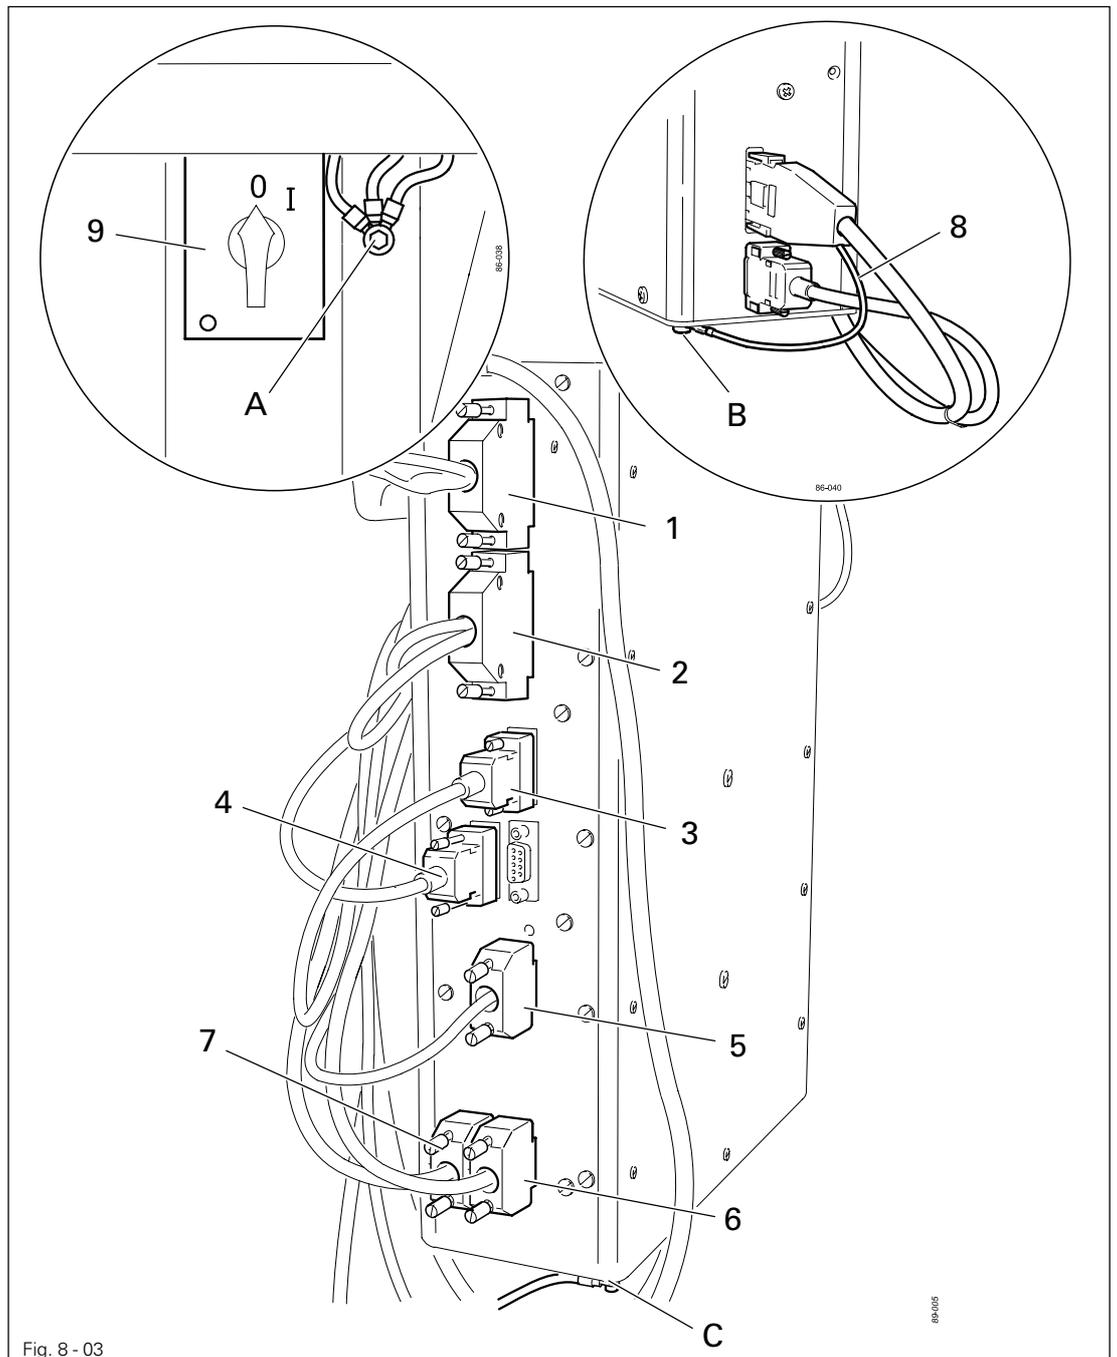

- Connect plugs 1-7 as labelled to the control box.
- Screw the earth cable from the sewing head to earth point A.
- Screw the earth cable 8 from the motor to earth point B.
- Connect earth point C and earth point A with an earth cable.
- Fasten the earth cable of the main switch 9 to earth point A.

Mounting and commissioning the machine

8.02 Commissioning

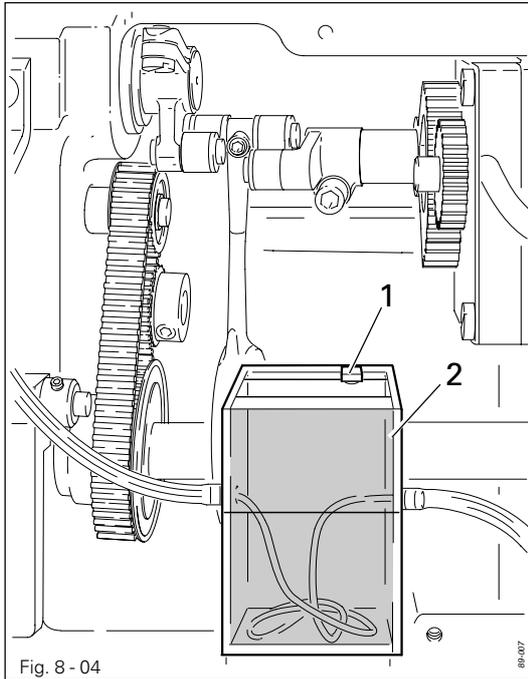

- Before commissioning the machine remove plug 1 from the oil tank 2.



Danger of damage to the machine!

Plug 1 serves as a safety device for transportation and should not be used during sewing operations.


- Examine the machine, in particular the electric cables for any damage.
- Clean the machine thoroughly, see also **Chapter 12 Care and Maintenance**.
- Have qualified personnel check whether the machine can be operated with the available voltage and whether it is connected properly. If there are any irregularities do not operate the machine under any circumstances.

8.03 Switching the machine on/off

- Switch the machine on or off (see **Chapter 7.01 On/off switch**).


8.04 Start inhibitor

8.04.01 Mounting the start inhibitor

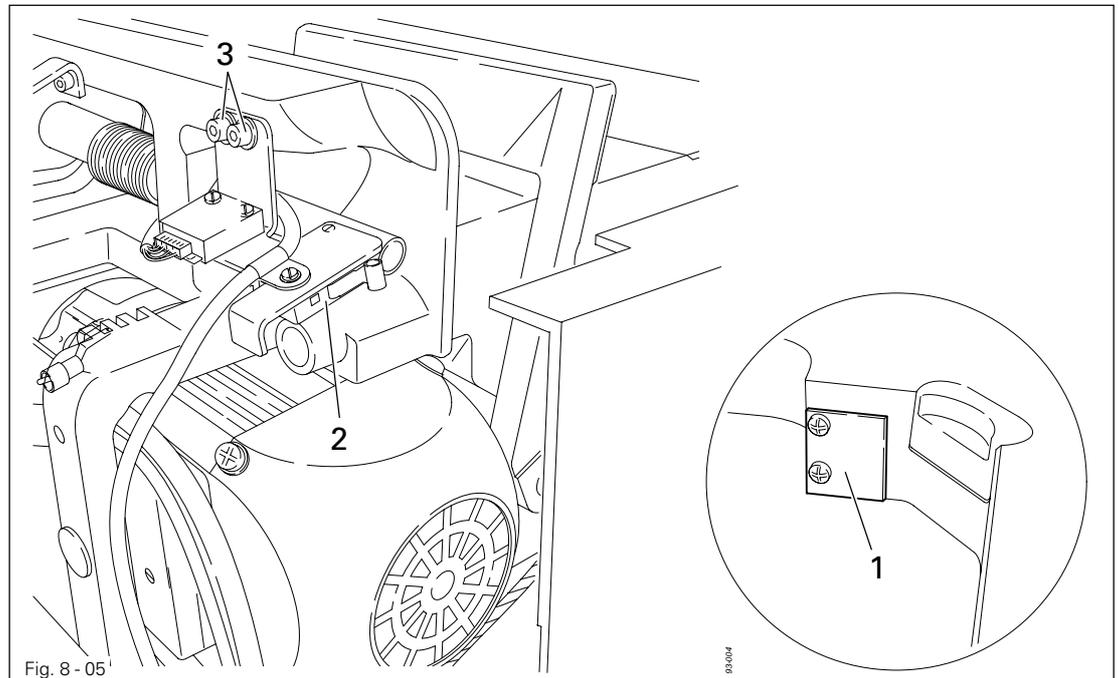

- For machines delivered without a table, the plate 1 from the accessories should be mounted, so that it is on a level with the bottom edge of the table top and with the left edge of the table top cutout.
- Set the machine into the table top.
- After loosening screws 3, move switch 2 until it is touching plate 1.
- In this position tighten screws 3.

8.04.02 Checking the function of the start inhibitor

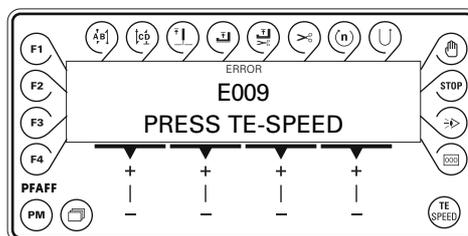

- Switch the machine on at the main switch and tilt it over. The error message "E009" must appear on the control panel.
- If the message does not appear, check the setting of the start inhibitor as described in **Chapter 8.01.04 Mounting the start inhibitor**.
- Set the sewing head upright and acknowledge the error message. The machine is ready for operation again.



9

Preparation




All regulations and instructions in this Instruction Manual are to be observed!
Special attention is to be paid to the safety regulations!



All preparation work is only to be carried out by appropriately trained personnel.
Before all preparation work, the machine is to be separated from the electricity supply by removing the plug from the mains or switching off the On/Off switch!

9.01

Inserting the needle

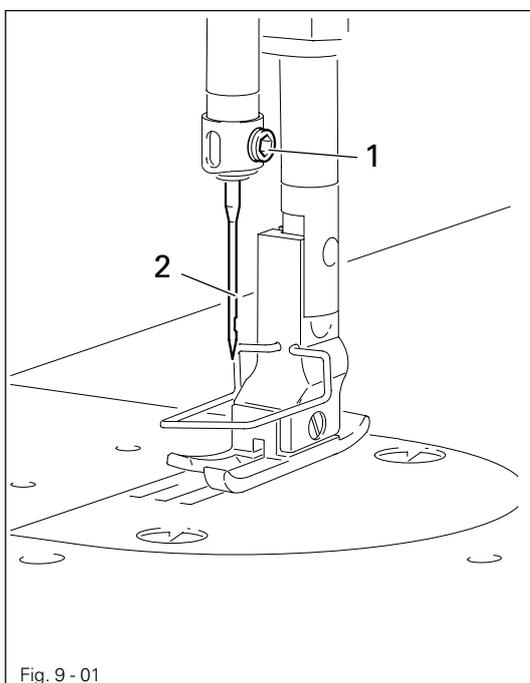

Switch off the machine!
Danger of injury due to unintentional starting of the machine!

Use only system 134 needles.

- Raise needle bar.
- Loosen screw 1 and insert needle 2 until you feel it stop.
- Tighten screw 1.



The selection of the correct needle depends on the model of the machine and the material and threads being sewn (see chapter 3 Specifications).

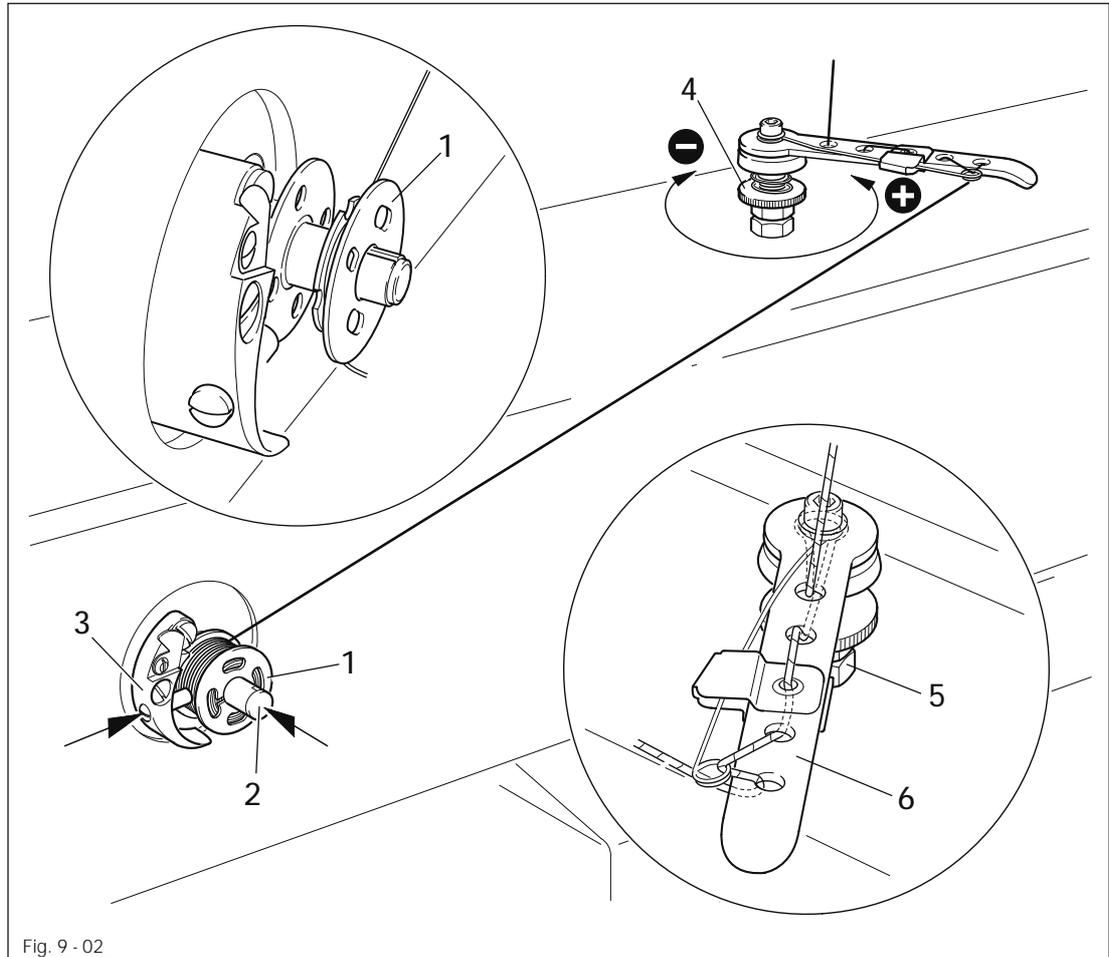


Fig. 9 - 02

- Fit empty bobbin 1 onto bobbin winder spindle 2 with the rest thread chamber on the outside.
- Thread the thread as shown in the above illustration and wind it round the bobbin 1 a few times in an anti-clockwise direction.
- Switch on the bobbin winder by pressing bobbin winder spindle 2 and lever 3 simultaneously.



The bobbin fills up during sewing.



If the machine is only run for bobbin winding (without sewing), a hook base must be fitted in the hook.


Otherwise a jammed thread may damage the hook!

- The tension of the thread on bobbin 1 can be adjusted with knurled screw 4.
- The bobbin winder stops automatically when bobbin 1 is full.

If the thread is wound unevenly:

- Loosen nut 5.
- Turn thread guide 6 accordingly.
- Tighten nut 5..

9.03 Removing/Inserting the bobbin case

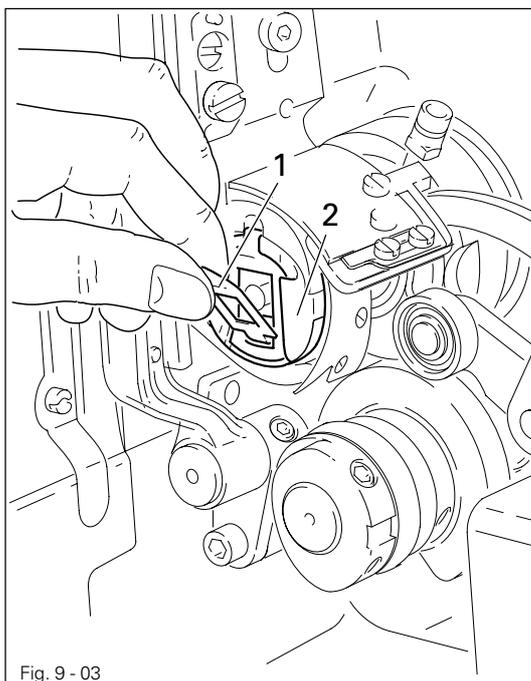

Switch off the machine!
 Danger of injury due to
 unintentional starting of the
 machine!

Removing the bobbin case:

- Tilt back the machine.
- Raise latch 1 and remove bobbin case 2.

Inserting the bobbin case:


- Press bobbin case 2 until you feel it snap into the bobbin case base.

Return the machine to its
 upright position using **both**
 hands!



Danger of injury by crushing
 between the machine and the
 table top!


9.04 Inserting the bobbin in the bobbin case

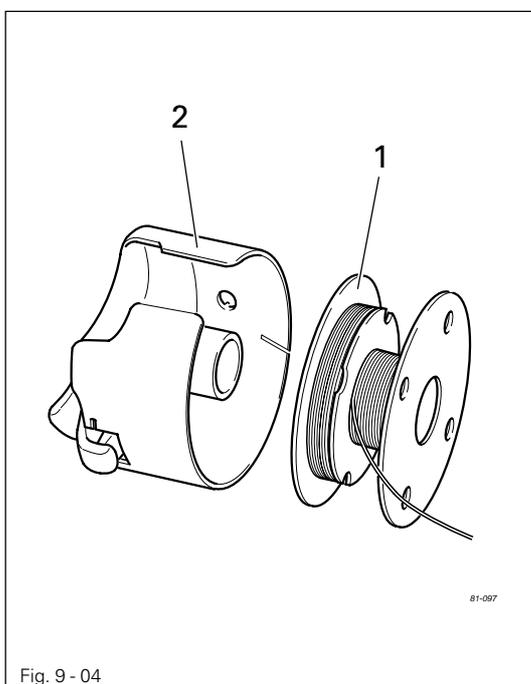

- Insert bobbin 1 into the bobbin case 2 as shown in the opposite illustration.

9.05

Threading the bobbin case / Adjusting the bobbin thread tension

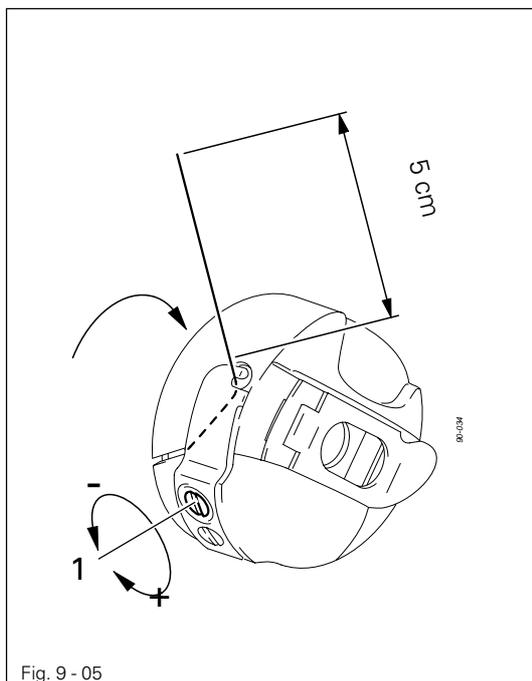


- Pass the thread through the slot under the spring as shown in the opposite illustration.
- Adjust the thread tension by turning screw 1.



When the thread is pulled, the bobbin must rotate in the direction of the arrow.

9.06 Threading the needle thread

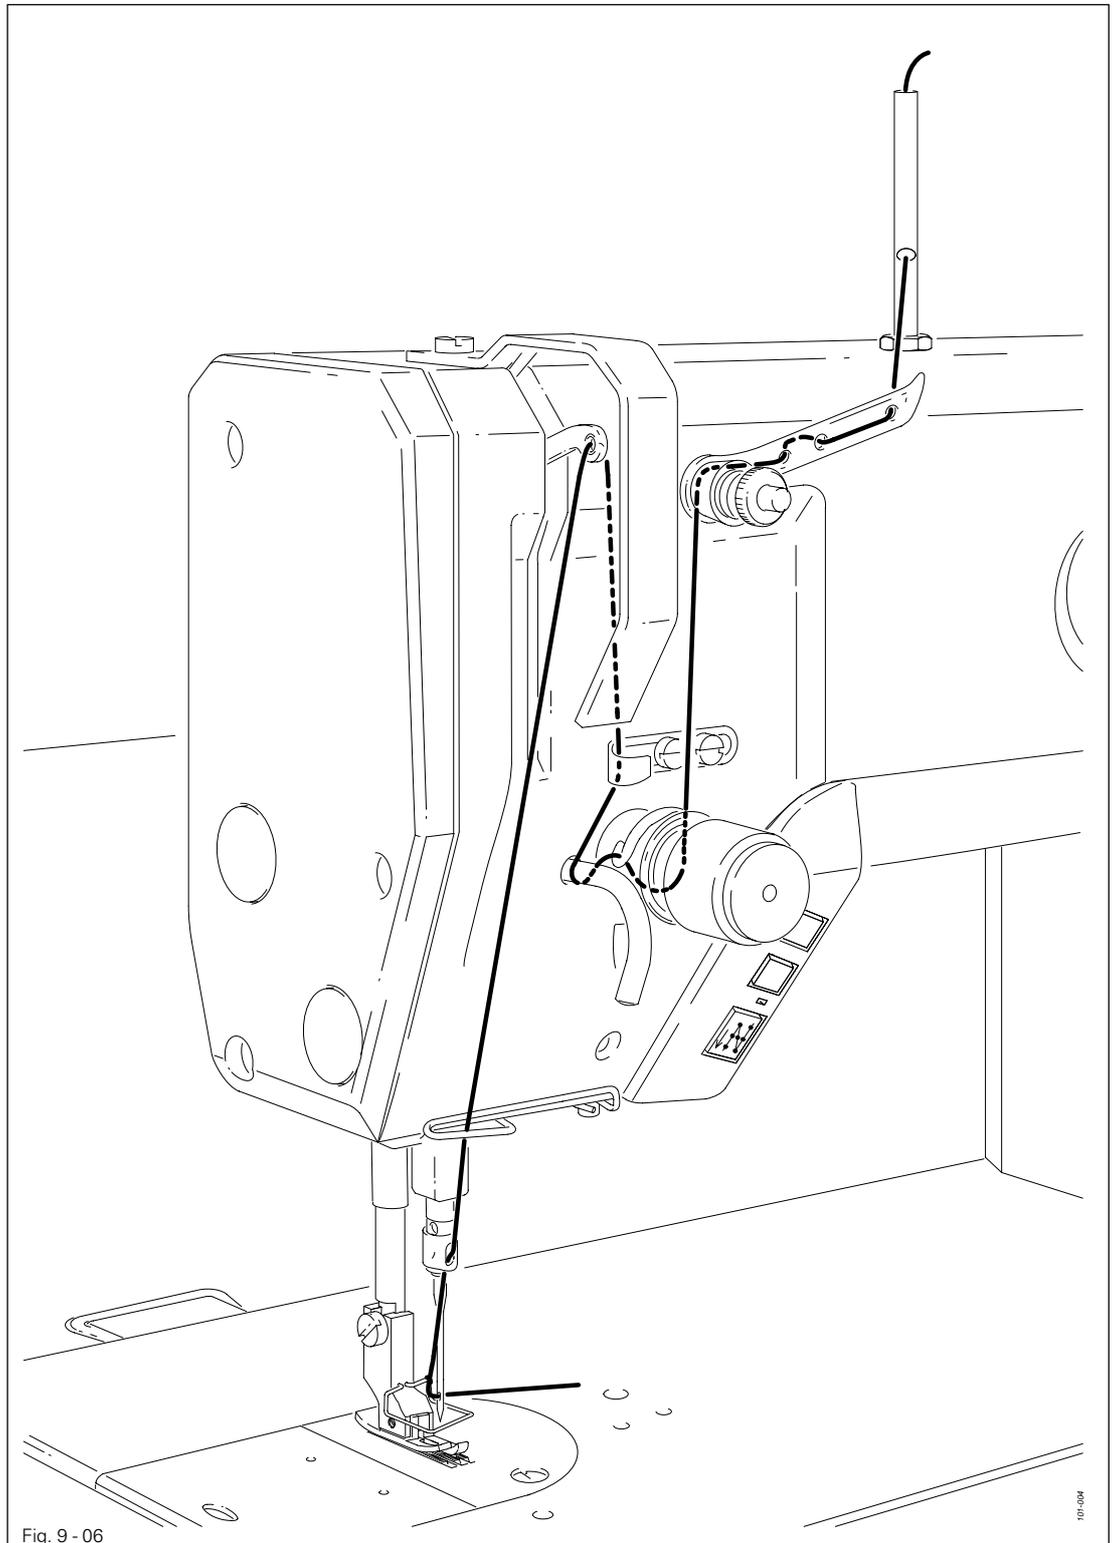


Switch off the machine!
Danger of injury due to unintentional starting of the machine!

- Thread the machine as shown in Fig. 9-06.

9.07 Entering the stitch length

- Switch on the machine.
After the machine has been switched on, the current stitch length is displayed.

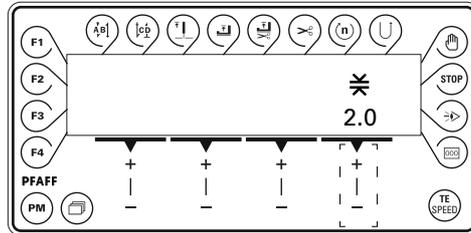


- ✂ ● Adjust the stitch length by pressing the corresponding +/- key.


9.08 Entering the maximum stitch length

- Switch on the machine.
- Press the **TE/Speed** key twice to enter the parameter input function.
The status text "TE" appears on the display and the pedal functions are blocked to prevent the machine starting accidentally.

2 x 

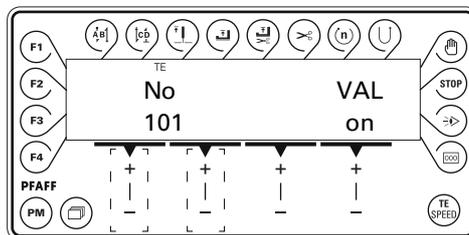

- No ● Select the parameter "849" by pressing the corresponding +/- key.

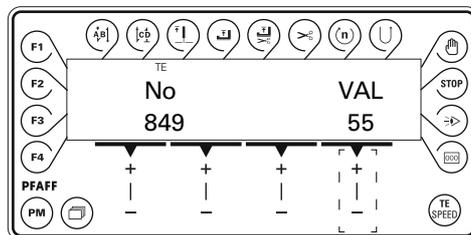

- VAL ● By pressing the corresponding +/- key select the desired value for the maximum stitch length.
-  ● By pressing the **TE/Speed** key the value is taken over and the machine changes to the sewing mode.




The maximum stitch length can be called up with the knee switch, see **Chapter 7.05 Knee switch**.

9.09 Entering the maximum speed

- Switch on the machine.



- Press the **TE/Speed** key to call up the input menu for the maximum speed. The status texts "Speed" and "TE" appear on the display.

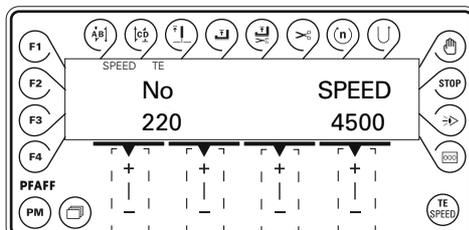

- SPEED** ● Set the maximum speed by pressing the corresponding +/- key.


9.10 Setting the remaining stitches for the bobbin thread control

When the bobbin thread monitor signals that the bobbin thread has been used up, there is still a little thread on the bobbin.

- Switch on the machine.



- Press the **TE/Speed** key twice to enter the parameter input function.
- Select mechanic level "B", see **Chapter 13.08.02 Selecting the user level**.

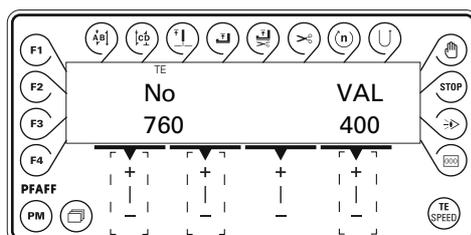

- No** ● Select the parameter "760" by pressing the corresponding +/- key.

- VAL** ● By pressing the corresponding +/- key set the number of remaining stitches which can still be sewn after the detection of the bobbin thread monitor (depends on the thread size).




- By pressing the **TE/Speed** key the value is taken over and the machine changes to the sewing mode.



The bobbin thread rest counter can only be used when parameter "660" is set at "1", see **Chapter 13.08 Parameter settings**.

9.11 Entering the start and end backtacks


- Switch on the machine.

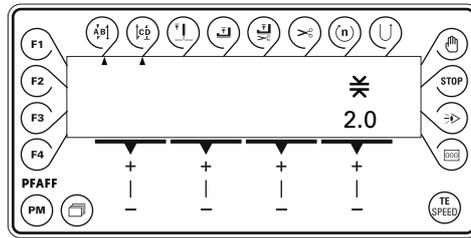

- Switch on the corresponding function by pressing the **start backtack** and/or **end backtack** keys. (Arrow appears under the corresponding function key.)



- Change to the input menu for start and end backtacks by pressing the **scroll** key.

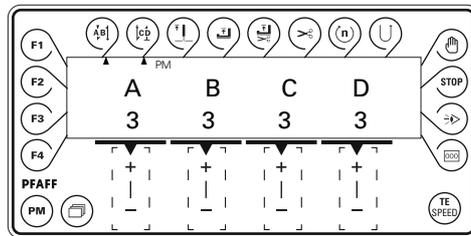

- A** ● By pressing the corresponding +/- key select the desired value for the number of forward stitches (A) of the start backtack.
- B** ● By pressing the corresponding +/- key select the desired value for the number of reverse stitches (B) of the start backtack.
- C** ● By pressing the corresponding +/- key select the desired value for the number of reverse stitches (C) of the end backtack.
- D** ● By pressing the corresponding +/- key select the desired value for the number of forward stitches (D) of the end backtack.



- Call up the stitch length input menu again by pressing the **scroll** key.

10 Sewing

In the sewing mode all relevant settings for the sewing operation are displayed. Functions can be switched on or off by pressing a key. Values for the most important parameters can be changed directly.


In this mode a difference is made between **manual sewing** and **programmed sewing**. To change from manual to programmed sewing, press the PM key. In programmed sewing the text "PM" appears on the display. The program numbers 1 – 15 can each be used for one seam program with up to 15 seam sections.

PM

10.01 Manual sewing


After the machine has been switched on (**Chapter 7.01 Main switch**) and the manual sewing mode has been selected with the **PM** key, the display appears for entering the stitch length, also see **Chapter 9.07 Entering the stitch length**.

PM

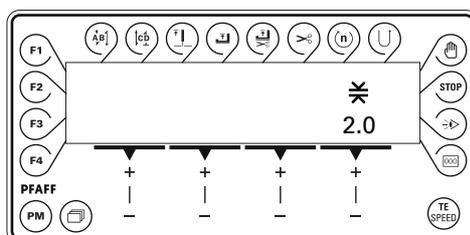

If the backtack function is switched on, the display appears for entering the backtack values, also see **Chapter 9.08 Entering the start and end backtacks**.

It is possible to switch from one display to the other by pressing the scroll key.

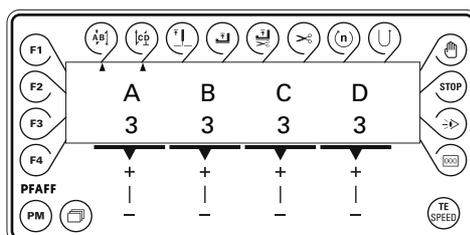

Further functions in manual sewing, also see **Chapter 7.06.02 Function keys**:

- | | | | |
|--|-------------------------------|--|---|
| | Start backtacks on/off | | Presser foot raised at end of seam on/off |
| | End backtacks on/off | | Thread trimming on/off |
| | Needle position raised on/off | | Reverse sewing on/off |
| | Presser foot raised on/off | | |


Sewing is carried out with the pedal functions, see **Chapter 7.03 Pedal**.

10.02 Programmed sewing

In programmed sewing various seam programs can be called up by selecting the corresponding program number. A number of seam sections with corresponding functions can be allocated to each seam program. The number of possible seam programs and seam sections is set with the parameters "492" or "493", see **Chapter 13.08 Parameter settings**. In addition to just sewing, that is to say working through seam programs, in programmed sewing seam programs can be entered and altered, also see **Chapter 11.01 Entering seam programs**.



After the machine has been switched on (**Chapter 7.01 Main switch**) and the programmed sewing mode has been selected with the **PM** key, the display appears for selecting the program number, seam section and stitch length.

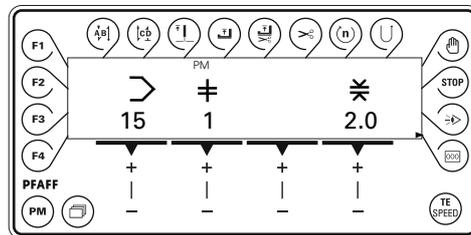

If other functions, such as sensor or stitch count have been activated, it is possible to switch to other displays for entering corresponding values by pressing the **scroll** key.



The number of backtack stitches is set in manual sewing, see **Chapter 9.11 Entering the start and end backtacks**. The values entered apply to all seam programs.

Functions in programmed sewing, also see **Chapter 7.06.02 Function keys**:

- | | | | |
|--|--|--|---------------------------------|
| | Start backtacks on/off | | Fixed speed on/off |
| | End backtacks on/off | | Reverse sewing direction on/off |
| | Needle position raised on/off | | Manual seam end on/off |
| | Presser foot raised on/off | | Programmed stop on/off |
| | Presser foot raised after thread trimming on/off | | Stitch count on/off |
| | Thread trimming on/off | | |

Sewing is carried out with the pedal functions, see **Chapter 7.03 Pedal**.




If several seam sections belong to one seam program, the separate seam sections are sewn automatically one after the other.

10.03 Error messages

If a fault occurs, the text "ERROR" appears on the display, together with an error code and short instructions. An error message is caused by incorrect settings, faulty elements or seam programs as well as by overload conditions.

For an explanation of the error codes see **Chapter 13.09 Explanation of the error messages**.

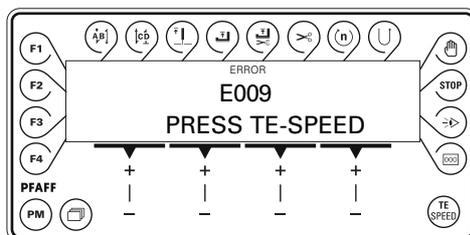

- Correct the error.
- Acknowledge error correction by pressing the **TE/Speed** key.




11 Input

In this chapter the input of seam programs is described.

11.01 Seam program input

- Switch on the machine.
- Press the PM key to call up programmed sewing. The text "PM" must appear on the display.

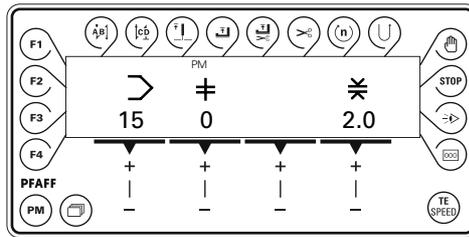


After selecting programmed sewing, seam programs can be entered. The input is carried out by switching functions on or off or by entering values for the seam section of a seam program. All functions available in programmed sewing can be used for the seam program input, see **Chapter 10.02 Programmed sewing**.

The seam program input is described in the following example.

11.02 Example of a seam program input

A seam program consists of the program number and at least one seam section with allocated functions. Below is an example of a seam program input for a pocket pouch with basted pocket opening.

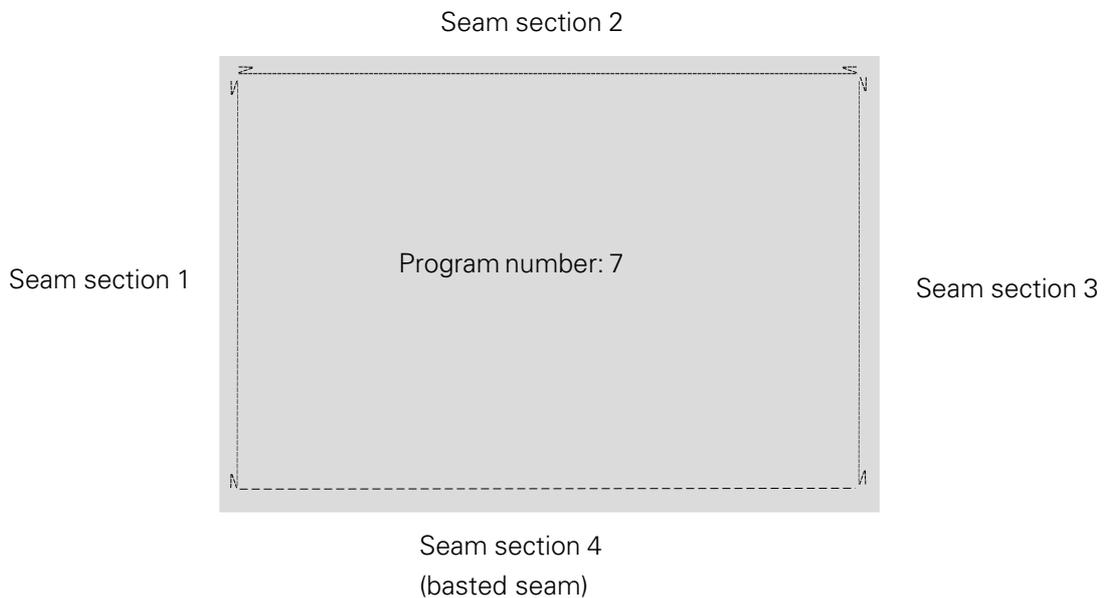

Overview of the input steps (example)

Schritt	➤	≠	≠	A/B	C/D							STOP			
1	7	0	2.5	-	-	-	-	-	-	-	-	-	-	-	-
2	7	1	2.5	●	●	-	-	●	●	-	-	-	-	●/25	-
3	7	2	2.5	●	●	-	-	●	●	-	-	-	-	●/57	-
4	7	3	2.5	●	●	-	-	●	●	-	-	-	-	●/25	-
5	7	4	6.0	-	-	-	-	●	●	-	-	-	-	●/23	-
6	7	5	0.0	-	-	-	-	-	-	-	-	-	-	-	-
7	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
8	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
9	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
10	-	-	-												


Entering programmed sewing

- Switch on the machine.



- Press the PM key.


The text "PM" must appear on the display.

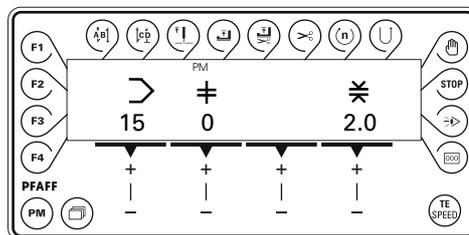

Selecting the program number




- Select program number "7" with the corresponding +/- key.

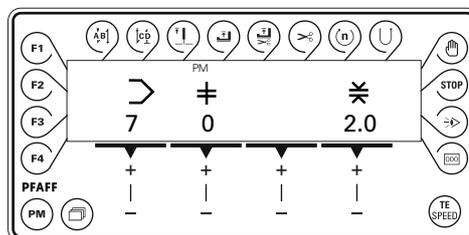

Selecting the stitch length

- ✂ ● Set the value for the stitch length at "2.5" with the corresponding +/- key.

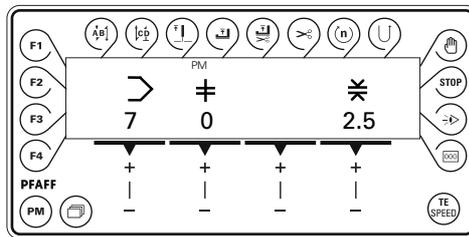

- 📄 ● Press the **scroll** key to select further seam parameters.




The values entered in the seam section "0" apply for all following seam sections, if these are not altered within the individual seam sections.

- 📄 ● Press the **scroll** key to select the first seam section.

Selecting seam section 1

- ✂ ● Select seam section "1" with the corresponding +/- key.

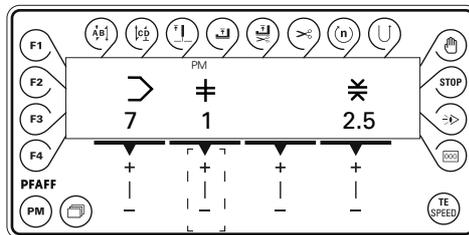

Selecting the functions for seam section 1

- The backtacking function at the beginning of the seam (start backtacks) should be switched on.
- The thread should be trimmed the end of the seam section.
- The presser foot should be raised after thread trimming.
- The end of the seam section should be recognised by stitch counting (25 stitches).
- The backtacking function at the end of the seam (end backtacks) should be switched on.



- Press the **start backtack** key to switch on the backtacking function at the beginning of the seam. To enter the number of stitches for start and end backtacks see **Chapter 9.11 Entering start and end backtacks**.



- Press the **thread trimming** key to trim the thread automatically at the end of the seam.




- By pressing it, switch on the **foot position after trimming** key to raise the presser foot after thread trimming.



- Press the **stitch counting** key to enable recognition of the end of the seam section by the number of stitches.

Selecting seam section 2


- Select seam section "2" with the corresponding +/- key.

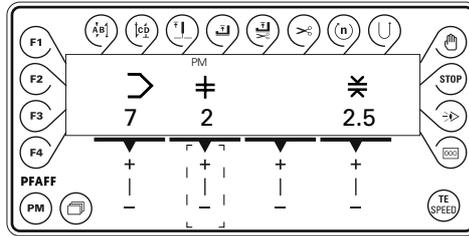


Selecting the functions for seam section 2

- The backtacking function at the beginning of the seam (start backtacks) should be switched on.
- The thread should be trimmed the end of the seam section.
- The presser foot should be raised after thread trimming.
- The end of the seam section should be recognised by stitch counting (57 stitches).
- The backtacking function at the end of the seam (end backtacks) should be switched on.


- Press the **start backtack** key to switch on the backtacking function at the beginning of the seam. To enter the number of stitches for start and end backtacks see **Chapter 9.11 Entering start and end backtacks**.
- Press the **thread trimming** key to trim the thread automatically at the end of the seam.
- By pressing it, switch on the **foot position after trimming** key to raise the presser foot after thread trimming.
- Press the **stitch counting** key to enable recognition of the end of the seam section by the number of stitches.
- Press the **end backtack** key to switch on the backtacking function at the end of the seam. To enter the number of stitches for start and end backtacks see **Chapter 9.11 Entering start and end backtacks**.

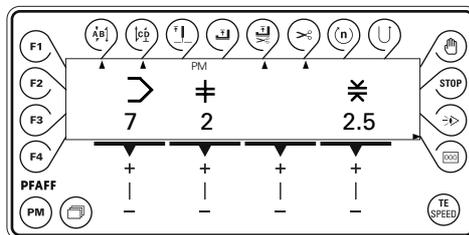

- Press the **scroll** key to enter the number of stitches.

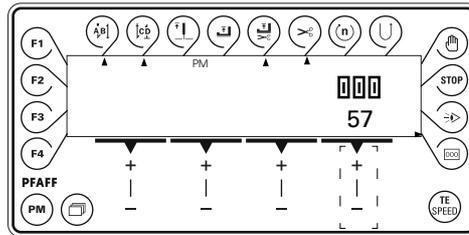


- With the corresponding +/- key enter the value "57" for the number of stitches.
- Press the **scroll** key to be able to select the next seam section.

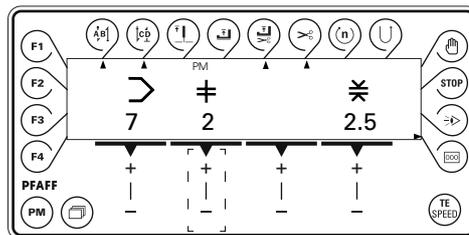

Selecting seam section 3

- Select seam section "3" with the corresponding +/- key.

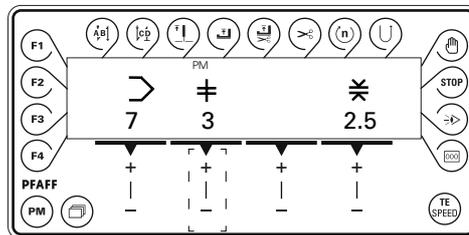


Selecting the functions for seam section 3

- The backtacking function at the beginning of the seam (start backtacks) should be switched on.
- The thread should be trimmed the end of the seam section.
- The presser foot should be raised after thread trimming.
- The end of the seam section should be recognised by stitch counting (25 stitches).
- The backtacking function at the end of the seam (end backtacks) should be switched on.


- Press the **start backtack** key to switch on the backtacking function at the beginning of the seam. To enter the number of stitches for start and end backtacks see **Chapter 9.11 Entering start and end backtacks**.
- Press the **thread trimming** key to trim the thread automatically at the end of the seam.
- By pressing it, switch on the **foot position after trimming** key to raise the presser foot after thread trimming.
- Press the **stitch counting** key to enable recognition of the end of the seam section by the number of stitches.



- Press the **end backtick** key to switch on the backtacking function at the end of the seam. To enter the number of stitches for start and end backticks see **Chapter 9.11 Entering start and end backticks**.

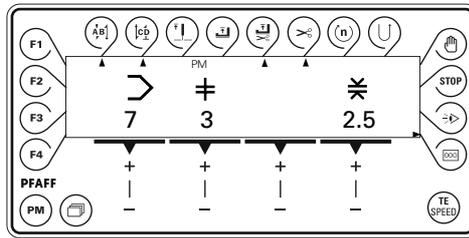


- Press the **scroll** key to enter the number of stitches.

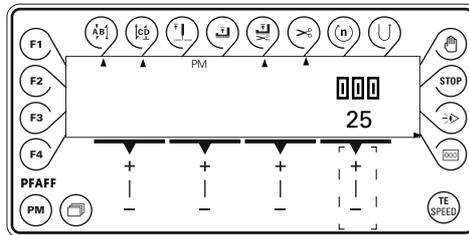

- With the corresponding **+/-** key enter the value "25" for the number of stitches.




- Press the **scroll** key to be able to select the next seam section.

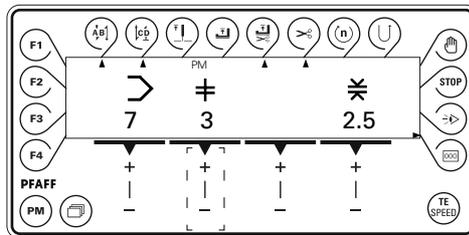

Selecting seam section 4



- Select seam section "4" with the corresponding **+/-** key.

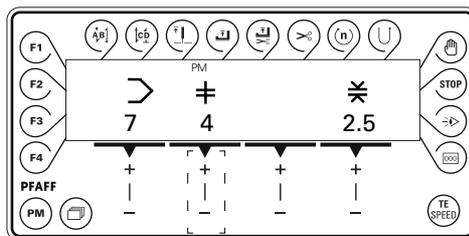

Selecting the functions for seam section 4

- The thread should be trimmed the end of the seam section.
- The presser foot should be raised after thread trimming.
- The stitch length should be **6.0 mm**.
- The end of the seam section should be recognised by stitch counting (23 stitches).




- Press the **thread trimming** key to trim the thread automatically at the end of the seam.




- By pressing it, switch on the **foot position after trimming** key to raise the presser foot after thread trimming.




- Press the **stitch counting** key to enable recognition of the end of the seam section by the number of stitches.

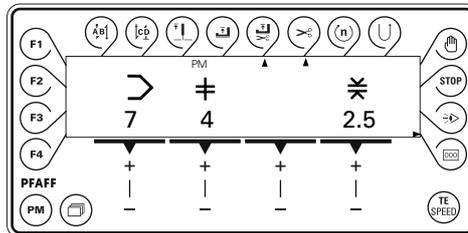

- With the corresponding +/- key set the value for the stitch length at **"6.0"**.

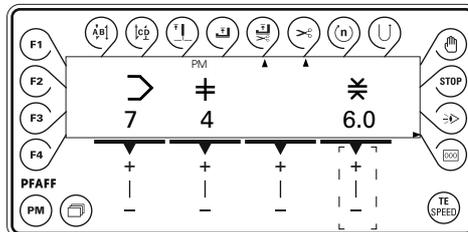


- Press the **scroll** key to enter the number of stitches.

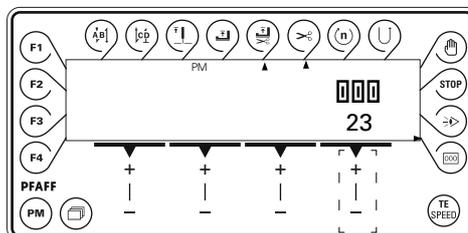

- With the corresponding +/- key enter the value **"23"** for the number of stitches.




- Press the **scroll** key to be able to select the next seam section.

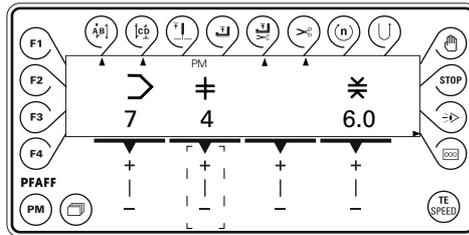

Closing the seam program

- Select seam section "5" with the corresponding +/- key.

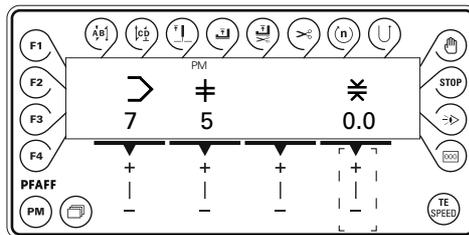


- With the corresponding +/- key set the value for the stitch length at "0.0".



By setting the stitch length in seam section 5 at zero, seam section 4 is recognised as the last seam section of the seam program and the seam program input is concluded.

Sewing a test seam

- With the corresponding +/- key select the seam section "0" or "1".

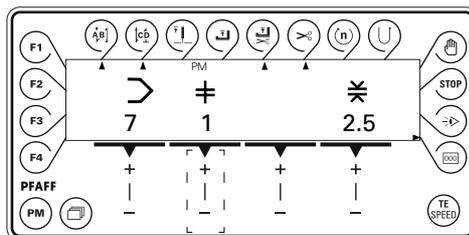

- Using the pedal functions, sew a test seam.


12 Care and Maintenance

Cleaning	daily, several times if in continuous operation
Checking the oil level	every 3 months ▲



▲ These maintenance intervals are calculated for the average running time of a single shift operation. If the machine is operated more than this, shorter intervals are recommended.

12.01 Cleaning the machine

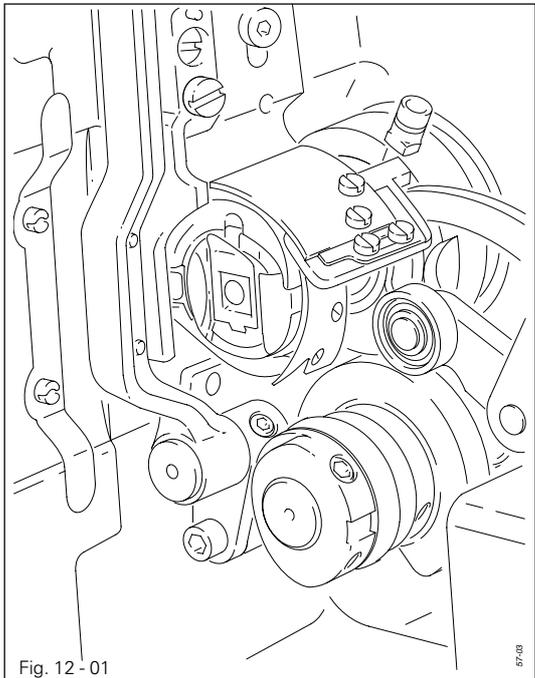

Switch off the machine!
Danger of injury due to unintentional starting of the machine!

- Tilt back the machine.
- Clean the hook and hook compartment daily, more often if in continuous operation.



Return the machine to its upright position using **both** hands!
Danger of injury by crushing between the edge of the machine and the table top!

12.02 Topping up the oil tank

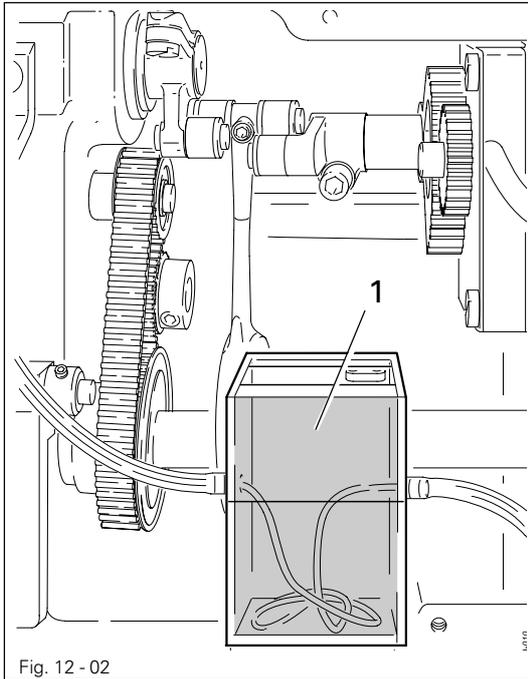


Fig. 12 - 02



The oil reservoir must always have oil in it.


- Whenever it is necessary to refill the reservoir, tilt back the machine and let it rest on the sewing head support.
- Fill oil through hole 1 into the reservoir 2 up to the level of the front edge (see arrow).



Return the machine to its upright position using **both** hands!
Danger of injury by crushing between the machine and the table top!



Only use oil with a mean viscosity of $10.0 \text{ mm}^2/\text{s}$ at 40°C and a density of 0.847 g/cm^3 at 15°C .



We recommend PFAFF sewing machine oil, part no. 280-1-120 105.

13 Adjustment



No C-clamp should be fastened to the needle bar of the PFAFF 2481-906/11.
This could cause damage to the special coating of the needle bar.

13.01 Notes on adjustment

All following adjustments are based on a fully assembled machine and may only be carried out by expert staff trained for this purpose.

Machine covers, which have to be removed and replaced to carry out checks and adjustments, are not mentioned in the text.

The order of the following chapters corresponds to the most logical work sequence for machines which have to be completely adjusted. If only specific individual work steps are carried out, both the preceding and following chapters must be observed.

Screws, nuts indicated in brackets () are fastenings for machine parts, which must be loosened before adjustment and tightened again afterwards.



Unless stated otherwise, during all adjustment work the machine must be disconnected from the electric and pneumatic power supply!
Danger of injury if the machine is started accidentally!

13.02 Tools, gauges and other accessories

- 1 set of screwdrivers with blade widths from 2 to 10 mm
- 1 set of wrenches with jaw widths from 7 to 14 mm
- 1 set of Allen keys from 1.5 to 6 mm
- 1 metal ruler, part no. 08-880 218-00
- 1 feed dog adjustment gauge, part no. 61-111 639-71
- 1 locking pin (5 mm diameter), part no. 13-033 346-05
- 1 adjustment gauge, part no. 61-111 639-70
- 1 adjustment gauge for tightening the belt of the hook drive, part no. 61-111 639-76
- Threads and test material

13.03 Abbreviations

TDC = top dead center


BDC = bottom dead center

13.04

Control and adjustment aids



The positions required during adjustment can be fixed with the help of adjustment pin 1 (part no. 13-033 346-05) and, if necessary, adjustment gauge 3 (part no. 61-111 639-73).

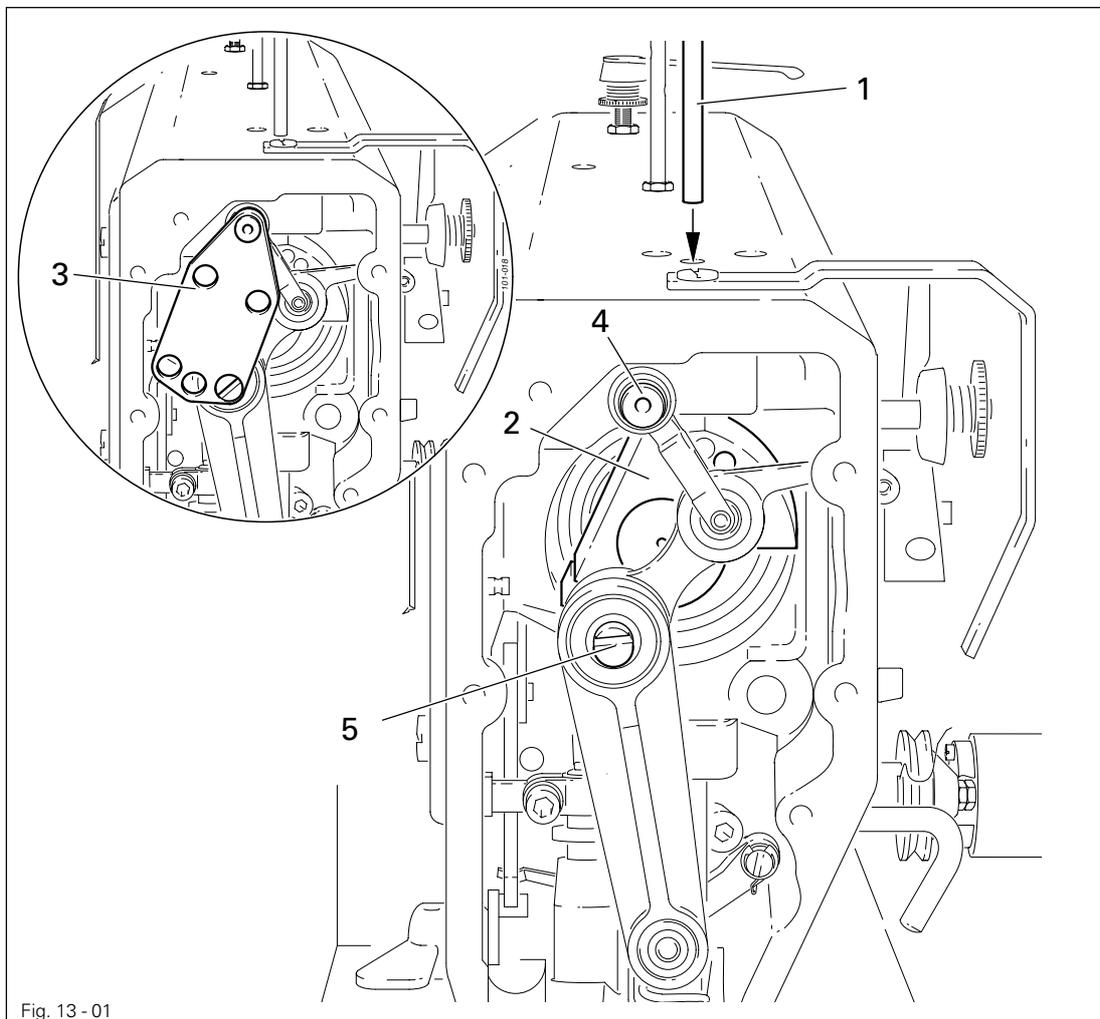

Needle bar position 1.8 mm past b.d.c.

- Turn the balance wheel until the needle bar is approximately in the required position.
- Insert adjustment pin 1 in the hole.
- Move the balance wheel fractionally to and fro until adjustment pin 1 engages in crank 2.

Needle bar position 0.6 mm past b.d.c.

- Bring the needle bar approximately into the required position.
- Fit adjustment gauge 3 to pins 4 and 5, paying attention to the right side (for 30 mm or 36 mm needle bar stroke).

13.05 Adjusting the basic machine


13.05.01 Basic position of the machine drive unit



This adjustment is only necessary, if toothed belt **2** was removed.

Requirement

When the needle bar is positioned 0.6 mm past b.d.c., the markings **3** and **4** should be in alignment.

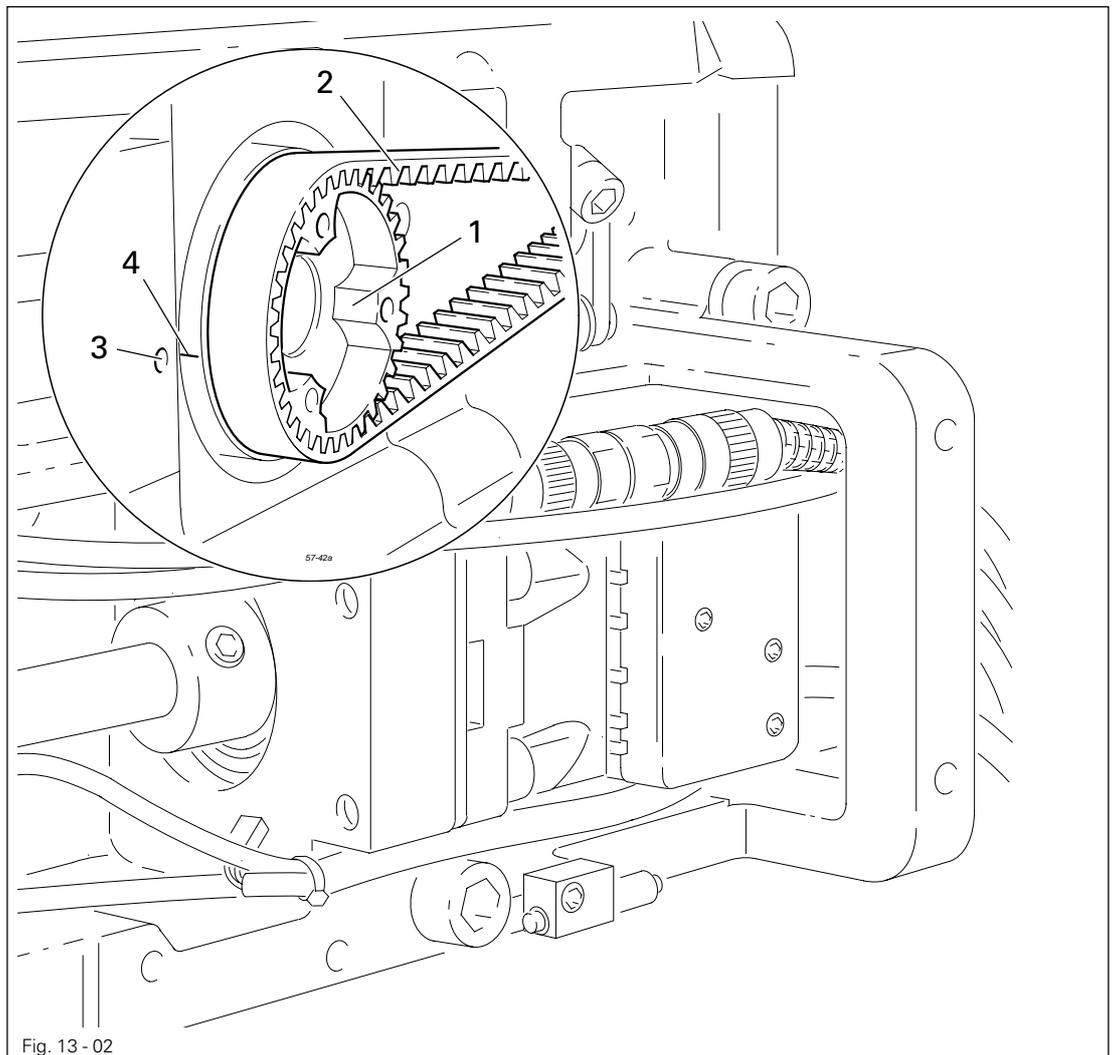

- Bring needle bar to 0.6 mm past b.d.c.
- Adjust the toothed belt wheel 1 according to the **requirement** and slide on toothed belt 2.



When installing the motor pay attention to the correct position of shaft flange, shock absorber and motor flange!




The second screw on the toothed belt wheel **1** is a conical screw.

Adjustment

13.05.02 Preadjusting the needle height

Requirement

When the needle bar is positioned 1.8 mm above BDC, the mark on the needle bar **1** must be flush with the bottom edge of the needle bar frame **3**.

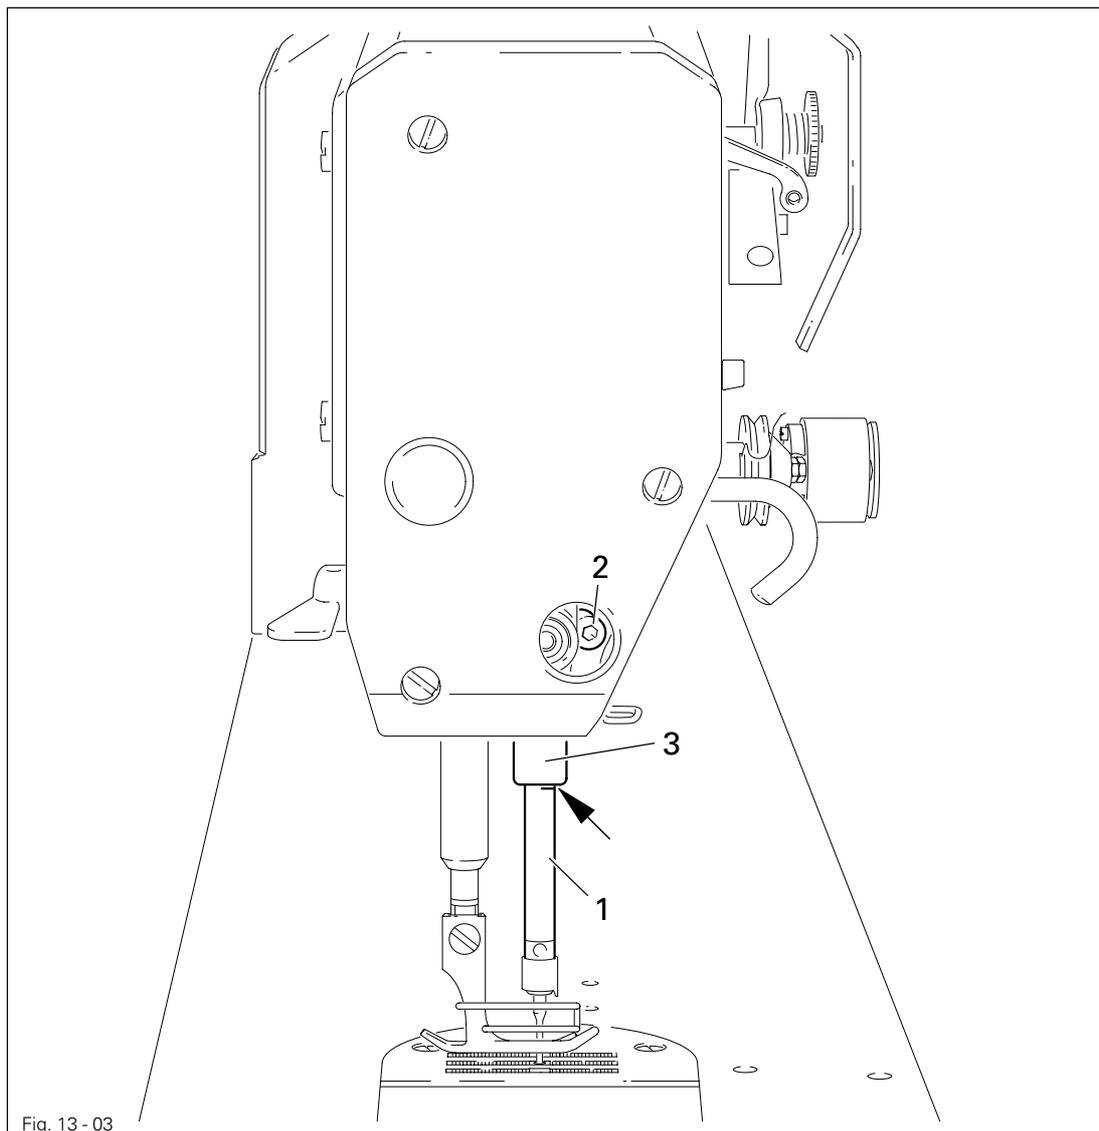

- Set needle bar at 1.8 mm past b.d.c. and block machine with blocking pin, see **Chapter 13.04 Checking and adjusting aids**.
- Move needle bar **1** (screw **2**), without turning it, according to the requirement.

13.05.03 Neutral position of the bottom feed dog

Requirement

With the stitch length set at "0"

1. The marking on the toothed segment **1** should be positioned in the centre of the toothed wheel shaft **3**.
2. Cranks **4** and **6** should be in alignment and there should be no feeding motion of the bottom feed dog when the balance wheel is turned.

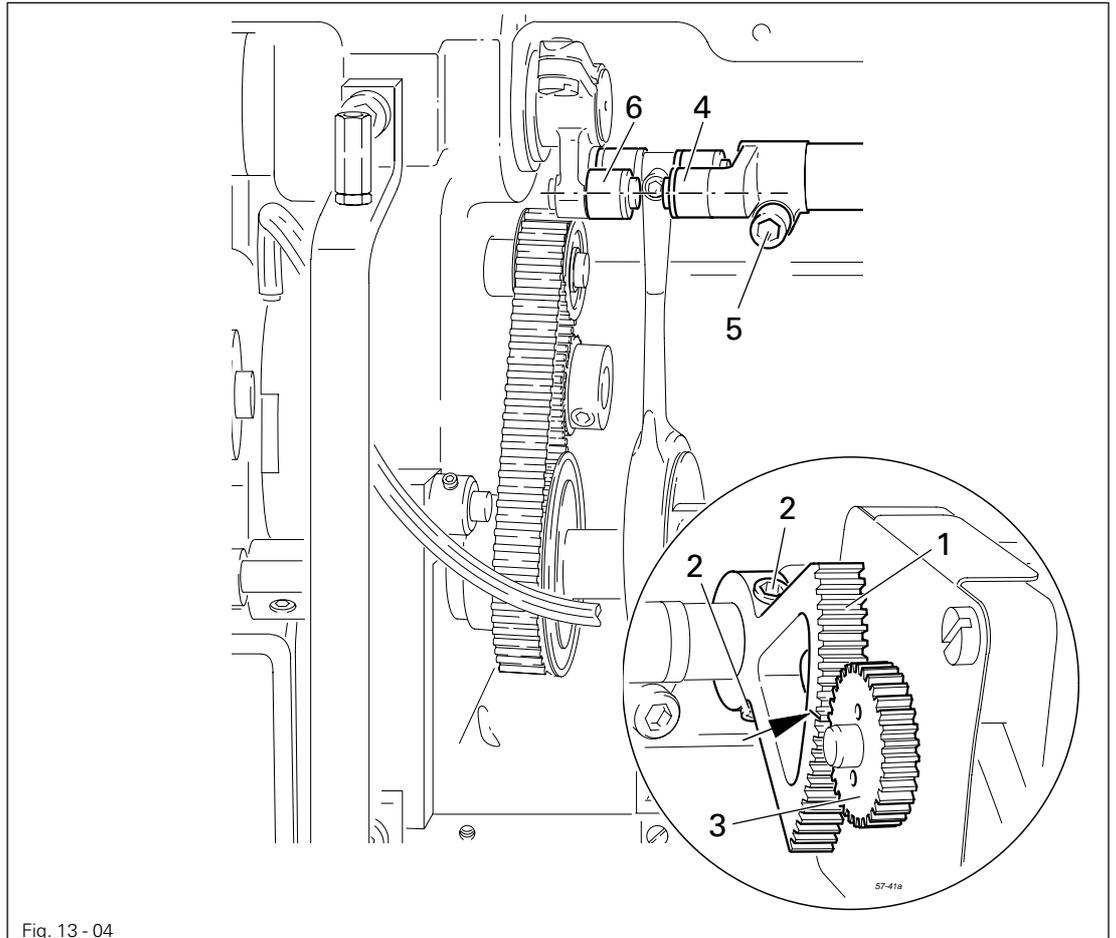


Fig. 13 - 04




- Switch on the machine.
- On the control panel set the stitch length at "0" and turn the balance wheel until the stitch length control motor reacts.
- Make sure that parameter **834** is set at "0", see **Chapter 13.08 Parameter settings**.
- Adjust tooth segment **1** (screws **2**) according to **requirement 1**, without turning toothed wheel **3**.
- Adjust crank **4** (screws **5**) according to **requirement 2**.
- Switch off the machine.

13.05.04 Zero position of the needle feed

Requirement

When the stitch length is set at "0", there should be no feeding motion of the needle bar when the balance wheel is turned.

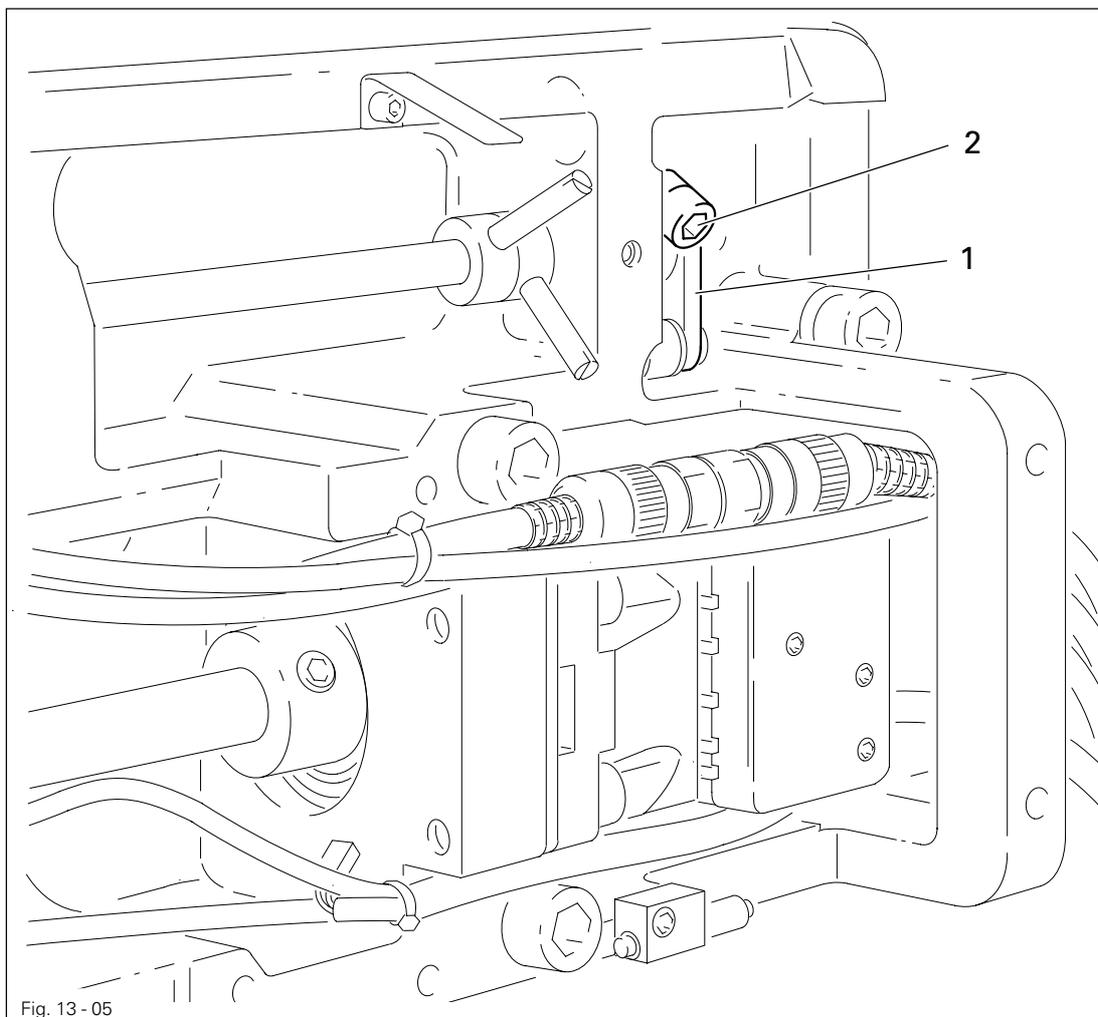

- Switch on the machine.
- On the control panel set the stitch length at "0" and turn the balance wheel until the stitch length control motor reacts.
- Make sure that parameter **834** is set at "0", see **Chapter 13.08 Parameter settings**.
- Adjust crank **1** (screw **2**) according to the **requirement**.
- Switch off the machine.

13.05.05 Feeding motion of the bottom feed dog

Requirement

With the needle bar positioned **0.6 mm past b.d.c.** the bottom feed dog should not move, when shaft **3** is turned backwards and forwards.

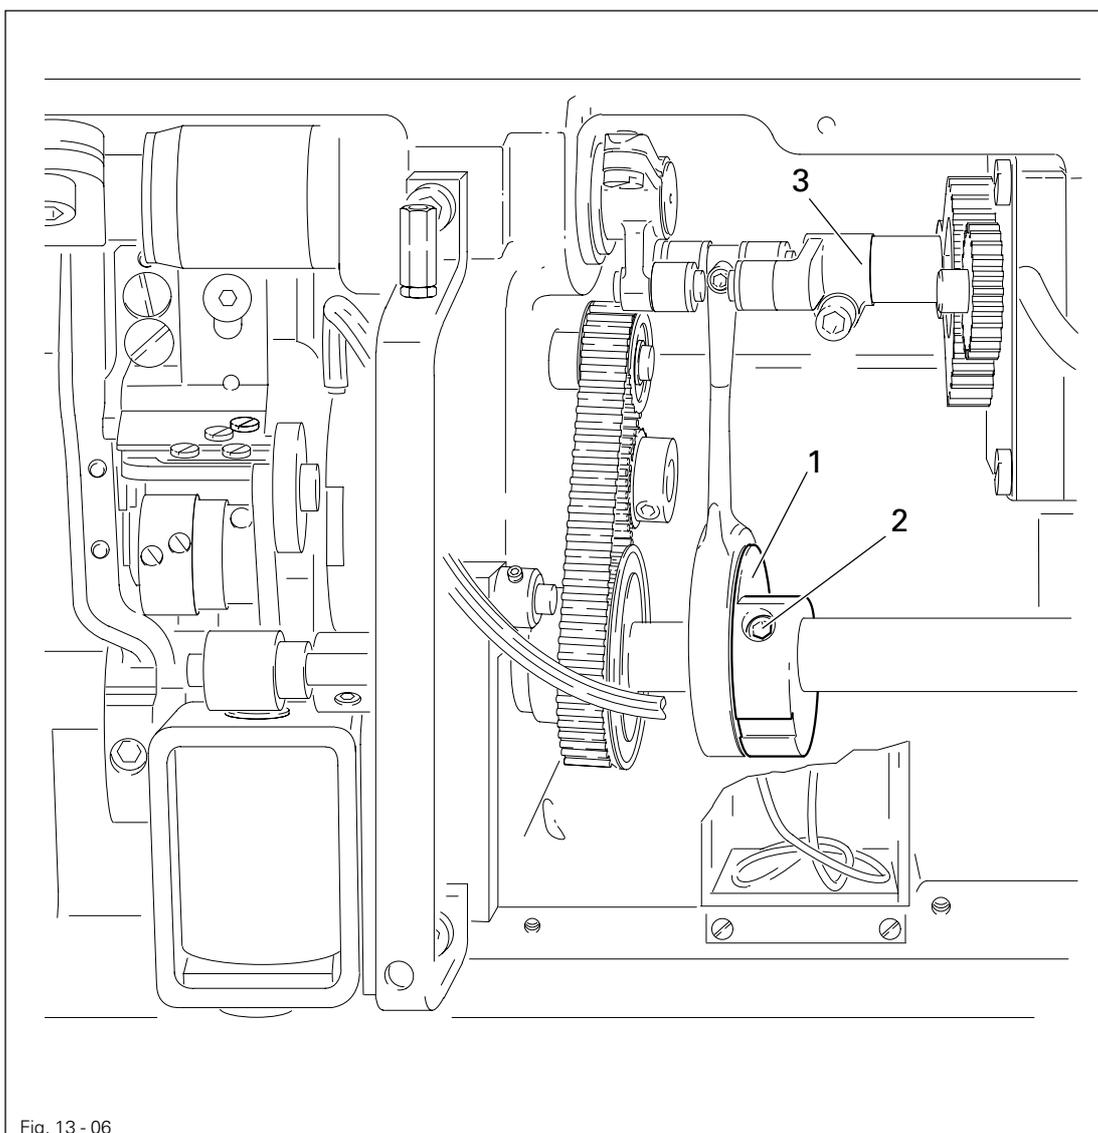


Fig. 13 - 06




- Position the needle bar at 0.6 mm past b.d.c.
- Adjust eccentric **1** (screws **2**) according to the **requirement**, without moving it sideways.

Adjustment

13.05.06 Feeding motion of the needle feed

Requirement

With the needle bar positioned **0.6 mm past b.d.c.** the needle should not move, when shaft **3** is turned backwards and forwards.

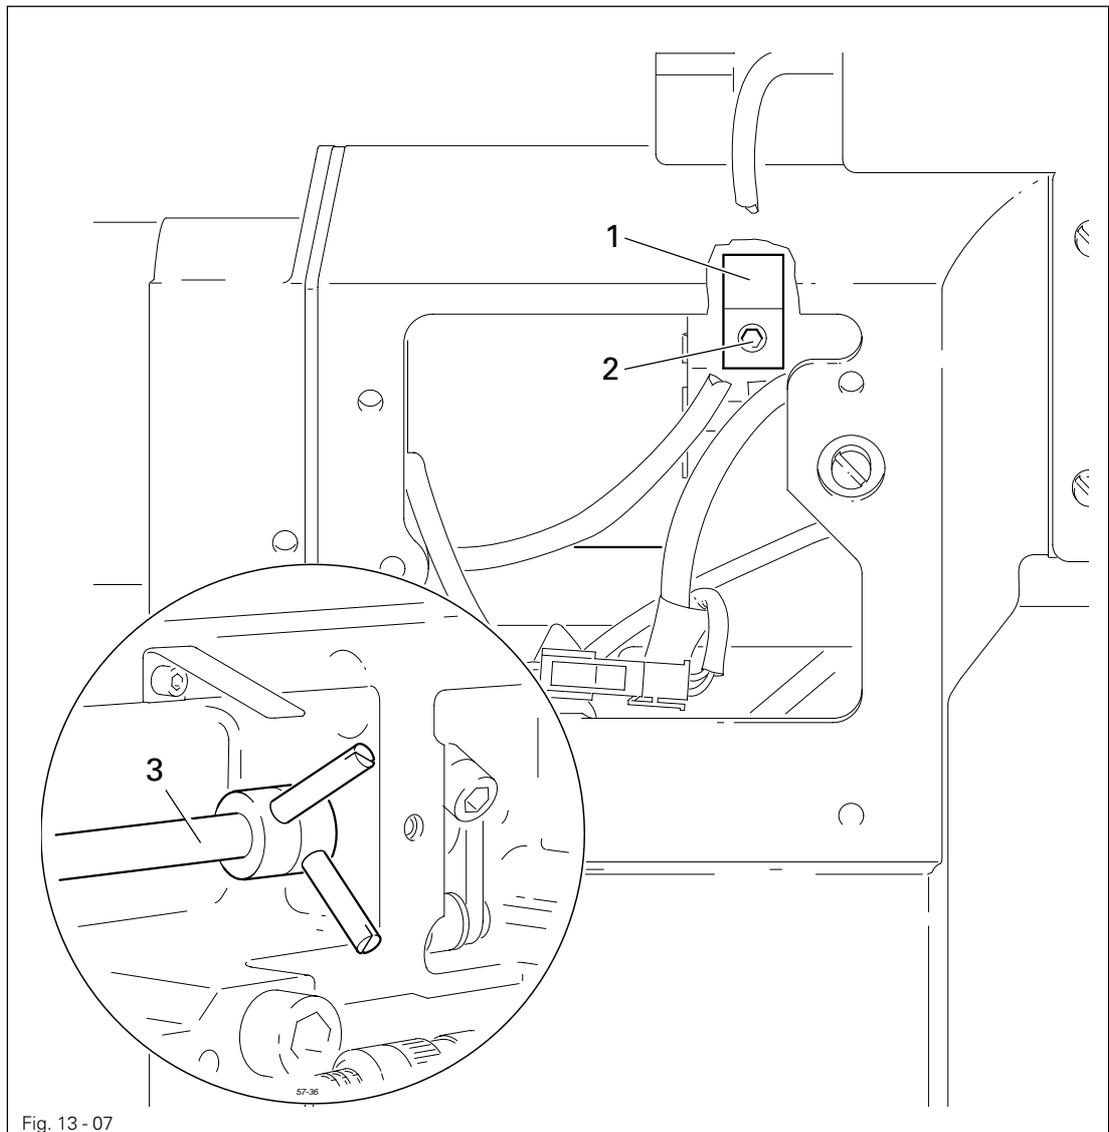

- Position the needle bar at 0.6 mm past b.d.c.
- Adjust eccentric **1** (screws **2**) according to the **requirement**.

13.05.07 Lifting stroke of the bottom feed dog

Requirement

When the needle bar is positioned **0.6 mm past b.d.c.** and the stitch length is set at "0"

1. The bottom feed dog should be at the top of its stroke and
2. The control cam **3** should be resting on the feed lifting eccentric **1**.

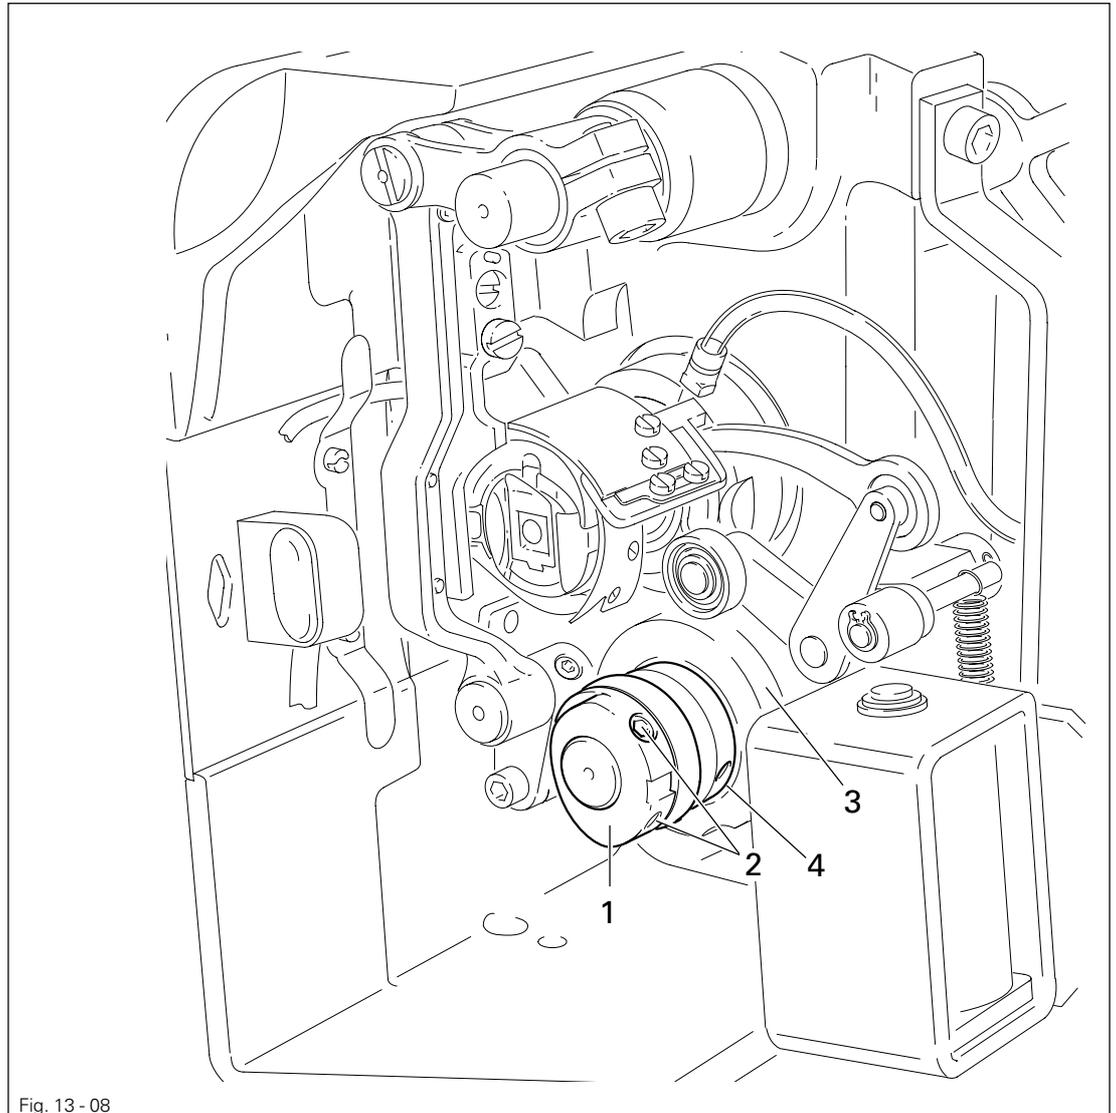


Fig. 13 - 08



Before starting the adjustment, disconnect the pedal rods!
 Danger of injury in the machine suddenly starts up!

- Switch on the machine.
- Set the stitch length at "0" and bring the needle bar to 0.6 mm past b.d.c.
- Turn the balance wheel until the stitch length control motor reacts.
- Adjust eccentric **1** (screws **2**) according to **requirement 1**.
- Adjust control cam **3** (screws **4**) according to **requirement 2** and switch off the machine.

13.05.08 Height of the bottom feed dog / Position in the needle plate cutout

Requirement

At the top of its stroke, when the stitch length is set at "0", the bottom feed dog 1

1. Should be positioned in the centre of the needle plate cutout as seen from the side and in feeding direction and
2. Rest on the feed dog adjustment gauge 2 over its whole length.

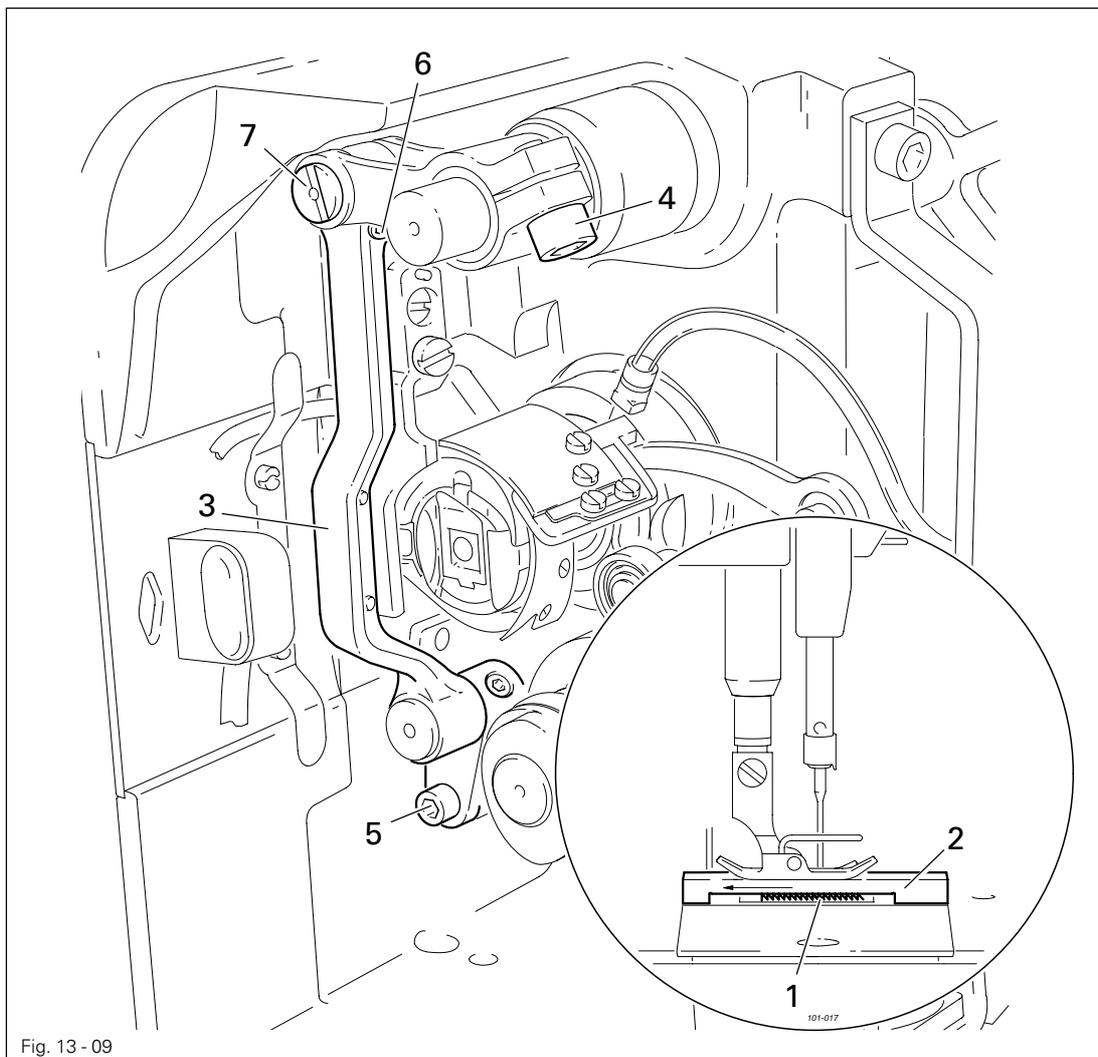


Fig. 13 - 09




Before starting the adjustment, disconnect the pedal rods!
Danger of injury in the machine suddenly starts up!

- Switch on the machine and set the stitch length at "0".
- Turn the balance wheel until the stitch length control motor reacts.
- Bring the bottom feed dog 1 to the top of its stroke.
- Raise the presser foot, position the feed dog adjustment gauge 2 over the needle plate cutout with its front edge flush with the edge of the needle plate, as shown in Fig. 13-09, and lower the presser foot.
- Adjust bracket 3 (screw 4) according to **requirement 1**.
- Adjust bracket 3 or eccentric 7 (screws 5 and 6) according to **requirement 2**.
- Switch off the machine.

13.05.09 Needle in needle hole centre

Requirement

The needle should enter the needle hole exactly in the centre.

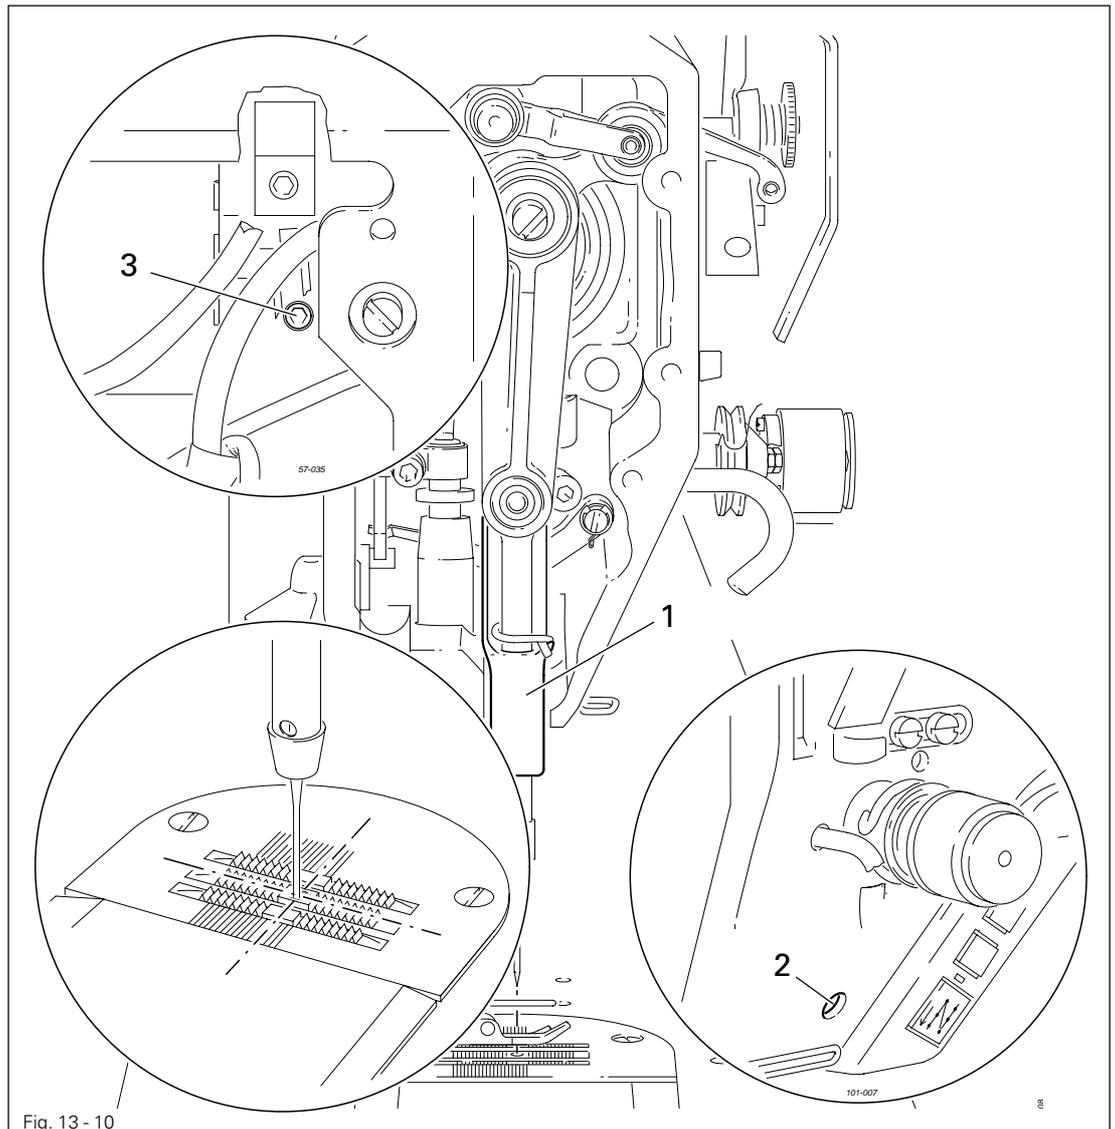

Before starting the adjustment, disconnect the pedal rods!
 Danger of injury in the machine suddenly starts up!

- Switch on the machine.
- On the control panel set the stitch length at "0" and turn the balance wheel until the stitch length control motor reacts.
- By turning the balance wheel position the needle in the needle hole.
- Adjust needle bar frame 1 (screws 2 and 3) according to the **requirement**.
- Switch off the machine.

13.05.10 Hook shaft bearing and toothed belt tension

Requirement

1. The front edge of the hook shaft **5** should be at a distance of **14.5 mm** from the centre of the needle, whereby the groove in the hook shaft bearing **1** (see arrow) should be parallel to the bed-plate and point in the opposite direction to the sewing direction.
2. The toothed belt should be tightened so that when the gauge is placed on it, the marking in the gauge window should match the marking on the bushing.

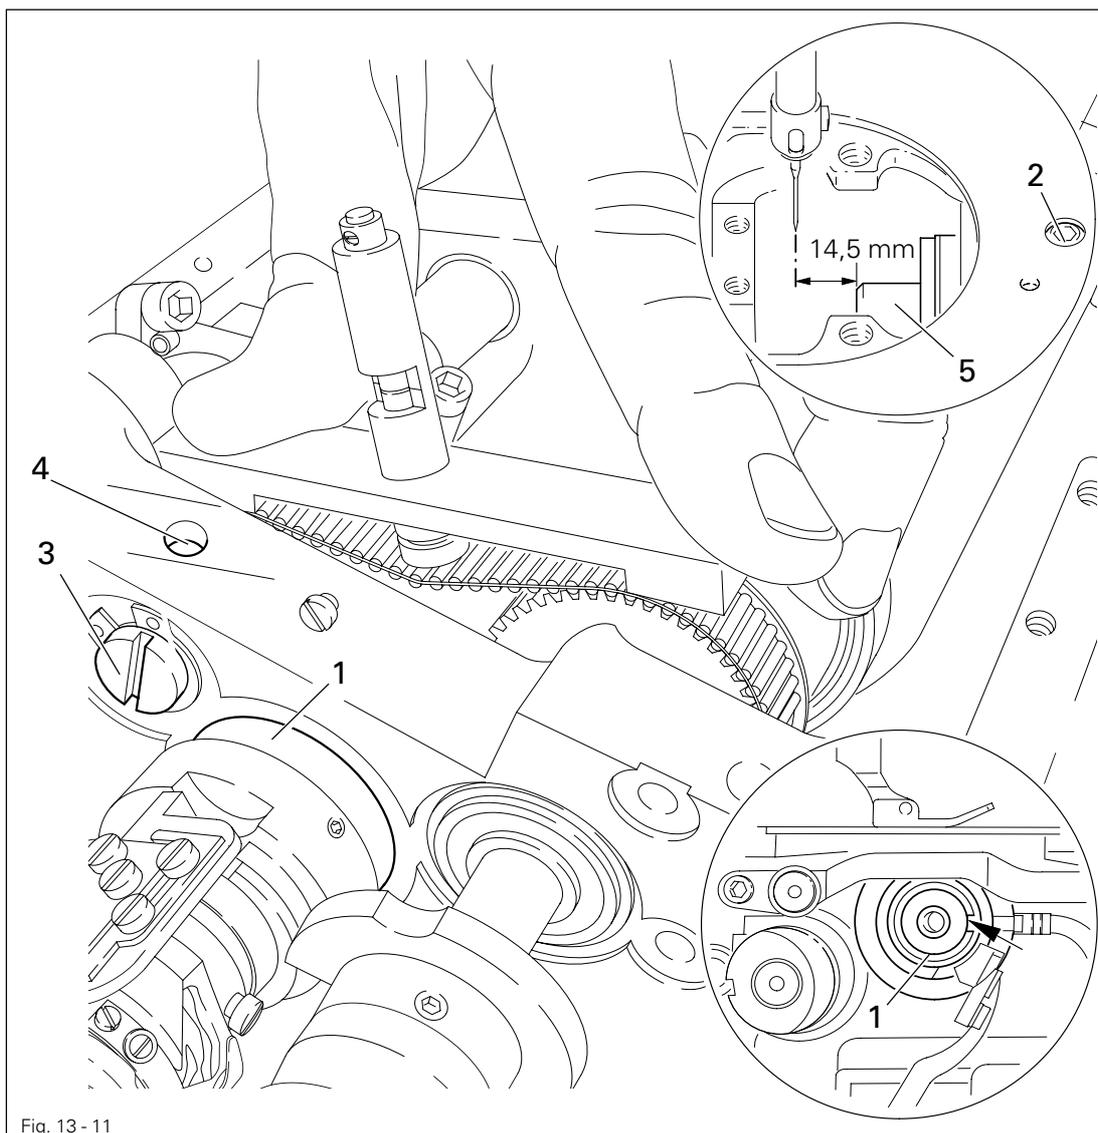


Fig. 13 - 11



- Align the hook bearing shaft **1** (screw **2**) in accordance with **requirement 1**.
- Press the gauge (part no. 61-111 639-76) onto the toothed belt, so that it is centred to it and touching the bearing on the rock shaft. The gauge window must point towards the hook.
- Turn eccentric **3** (screw **4**) clockwise in accordance with **requirement 2**, taking care that the axial position of eccentric **3** is not changed.

13.05.11 Hook lubrication

Requirement

1. The centrifugal disk **1** must be positioned **1.5 mm** in front of the oil ring **3**.
2. When the machine is running at full speed, **after approx. 10 seconds** a mark should be made by a fine stripe of oil on the strip of paper placed over the needle plate cutout.

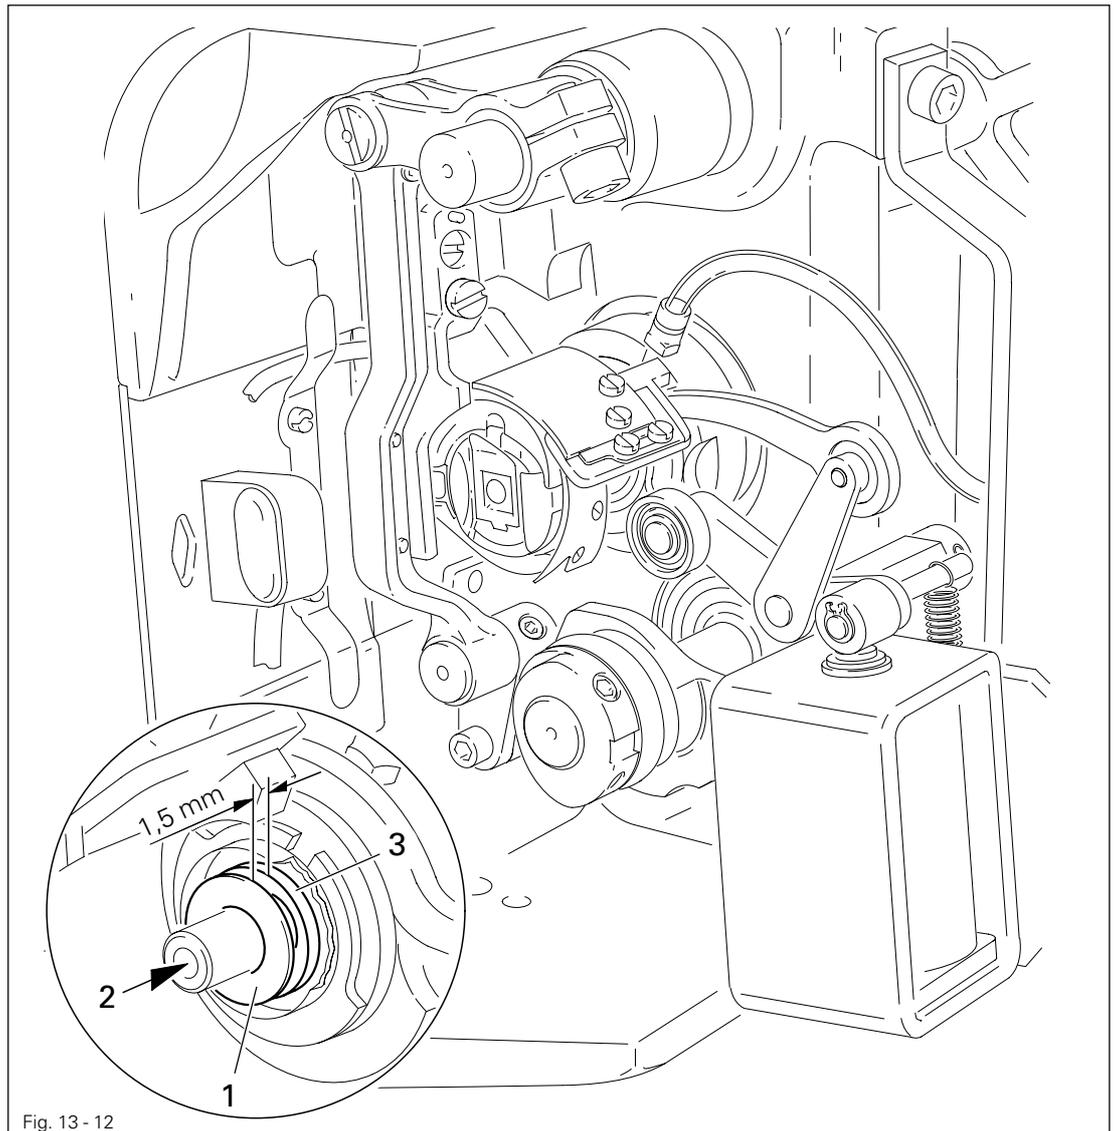


Fig. 13 - 12



The adjustment is only necessary if the wick has been replaced.
When replacing the wick, make sure that the new wick is impregnated with oil.



- Move the centrifugal disk **1** (screw **2**) according to **requirement 1**.
- Check **requirement 2**. If necessary, move centrifugal disk **1**.

Adjustment

13.05.12 Needle rise, hook-to-needle clearance, needle height and bobbin case position finger

Requirement

With the needle at 1.8 mm after BDC,

1. the hook point **6** must point to the middle of the needle and be at a distance of **0.05 mm - 0.1 mm** to the clearance cut of the needle, and
2. the top edge of the needle eye must be **0.8 mm** below the hook point.
3. Between the projection of the bobbin case position finger **4** and the bottom of the retaining groove there should be a distance of **0.5 mm**.

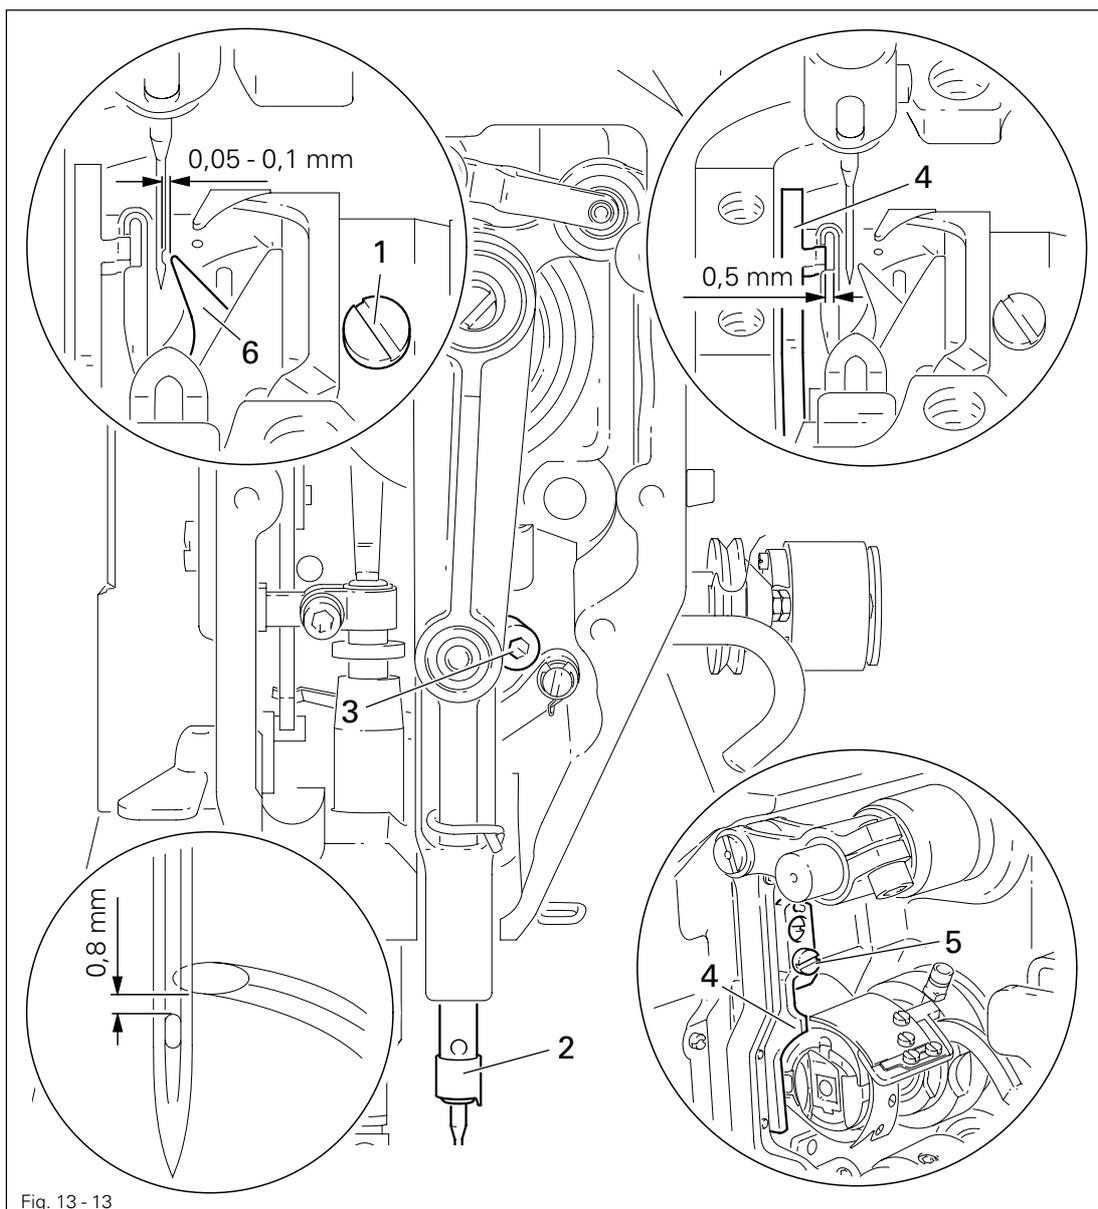


Fig. 13 - 13



- Switch on the machine.
- On the control panel set the stitch length at "0" and turn the balance wheel until the stitch length control motor reacts.
- Switch off the machine.
- Using the adjustment pin, position the needle bar at 1.8 mm after BDC.
- Adjust the hook according to **requirement 1**.

- Tighten screw 1.
- Move needle bar 2 (screw 3) without turning it according to requirement 2.
- Align bobbin case position finger 4 (screw 5) according to requirement 3.

13.05.13 Thread check spring and slack thread regulator

Requirement

1. The motion of the thread check spring must be completed when the needle point enters the material (spring stroke approx. **7 mm**).
2. When the thread loop is at its largest when going around the hook, the thread check spring must have moved by approx. **1 mm**.

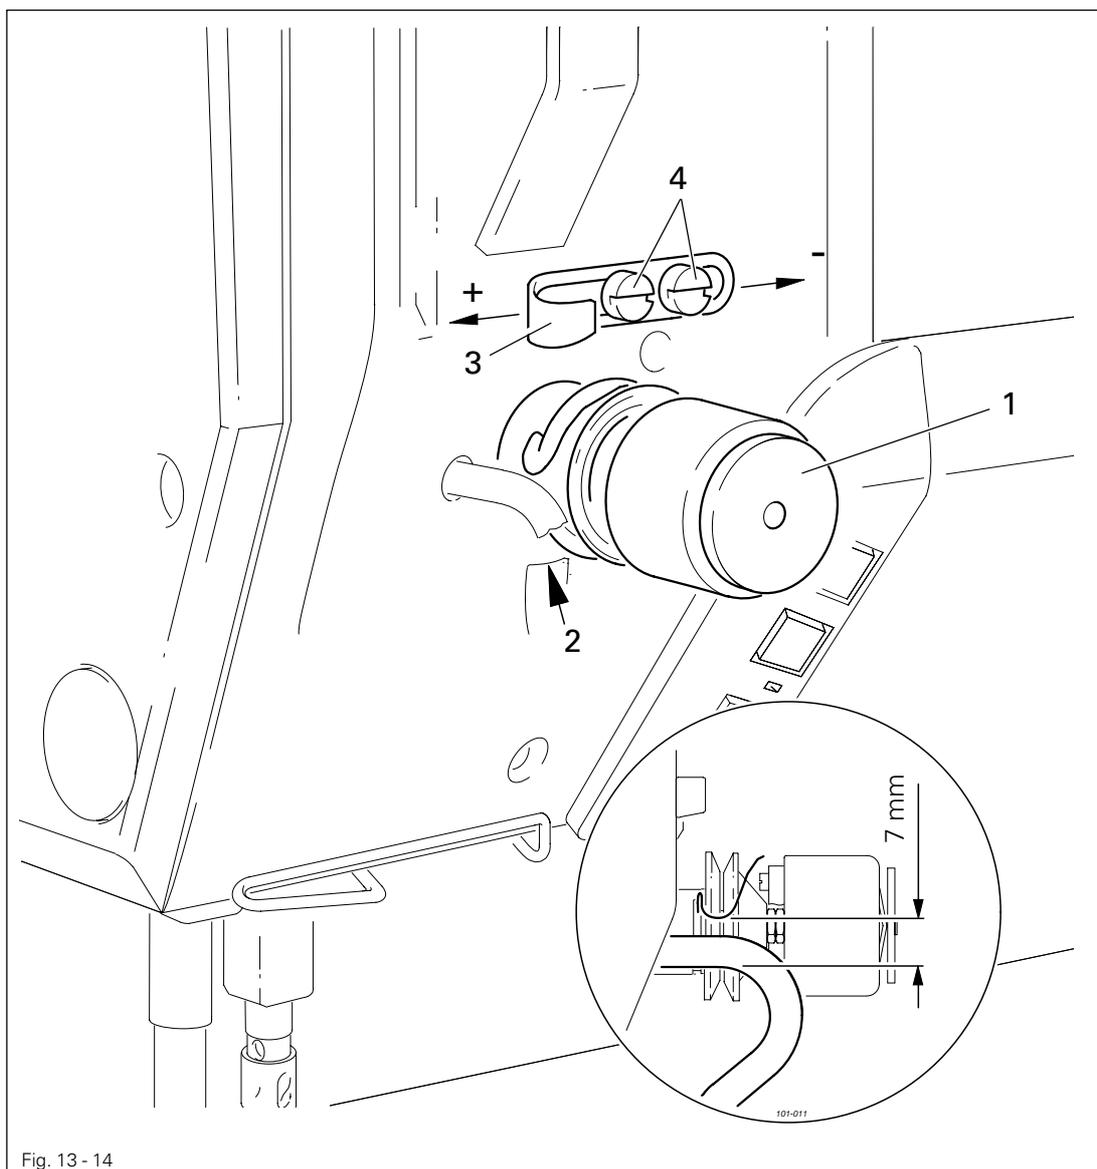


Fig. 13 - 14



- Turn thread tension **1** (screw **2**) according to **requirement 1**.
- Turn thread tension **3** (screw **4**) according to **requirement 2**.



Due to technical sewing reasons it may be necessary to deviate from the spring stroke indicated above.

Move the slack thread regulator **3** (screw **4**) toward the "**+**" (= more thread) or toward the "**-**" (= less thread)

13.05.14 Presser foot clearance

Requirement

1. When the automatic presser foot lift is operated, the clearance between the presser foot and the needle plate should be **7 mm**.
2. When the hand lever is raised, the clearance between the presser foot and the needle plate should be **5 mm**.

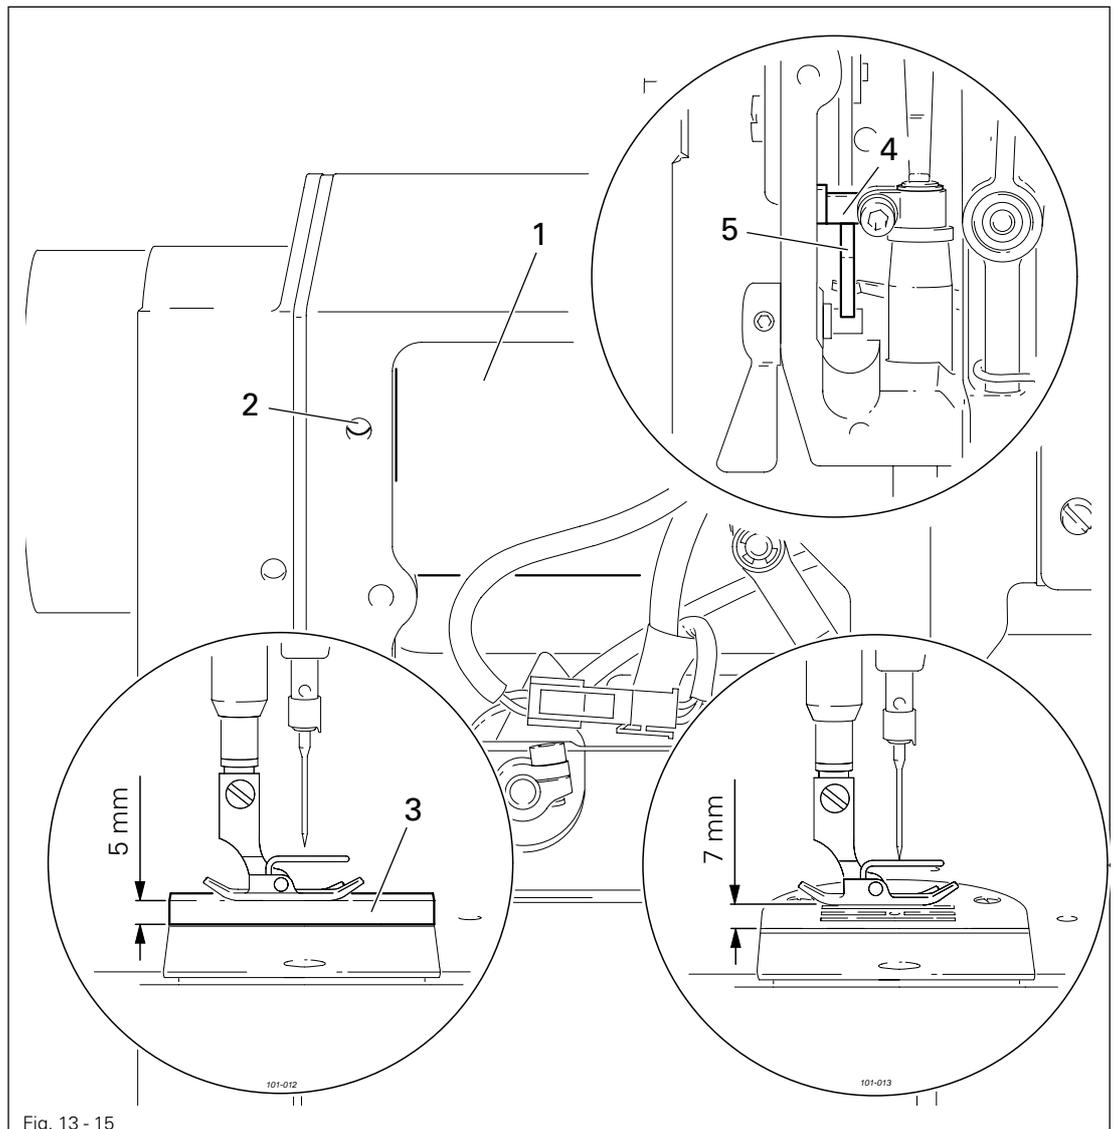


Fig. 13 - 15



- Adjust solenoid 1 (screw 2) in accordance with **requirement 1**.
- Raise the hand lever and place adjustment gauge 3 (part no. 61-111 639-70) under the presser foot in accordance with **requirement 2**.
- Move presser bar lifting lever 4 against lifting piece 5.



Make sure that the needle is in the centre of the presser foot.


13.05.15 Setting the zero point of the feed regulator

Requirement


When the stitch length is set at "0", at maximum speed (4500 spm) the needle should always penetrate in the same place.



- Unthread the machine.
- Switch on the machine.
- Place the workpiece under the presser foot.
- Let the machine sew at maximum speed and check the **requirement**.
(The workpiece should not move).

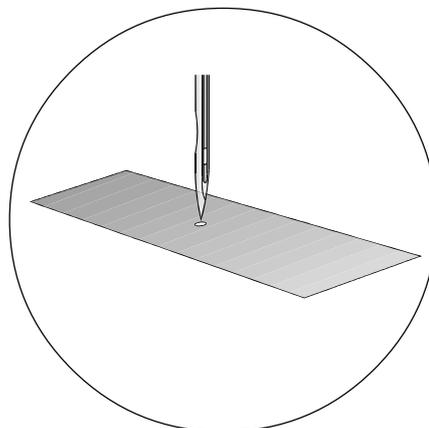

- Change the value for parameter **834** within the permissible values in accordance with the **requirement**.

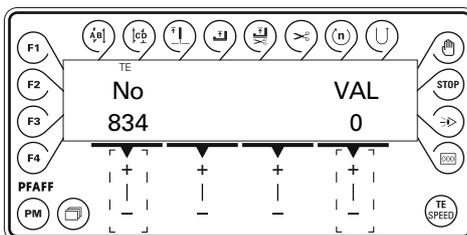

The permissible values for parameter **834** are "1", "0" or "-1".

If the zero point of the feed regulator cannot be set by selecting one of the permissible values, the mechanical setting must be checked or corrected, see **Chapter 13.05.03 Zero position of the bottom feed dog**.



The zero position of the feed regulator is always recognisable in a range of 3 values. When making the adjustment, select the middle value.

- Switch off the machine.



Find more information on how to select and alter parameters and about descriptions (functions) of the individual parameters in **Chapter 13.08 Parameter settings**.

13.05.16 Stitch length adjustment forwards and in reverse

Requirement

At a maximum speed of 400 spm, the stitch length selected on the control panel should not differ from the actual stitch length when sewing forwards or in reverse.



- Thread the machine.
- Switch on the machine.
- Select the stitch length being used on the control panel.
- With parameter **607** limit the maximum speed to 400 spm.
- Set parameter **846** at **100**.
- Place the workpiece under the presser foot.
- Sew a seam with at least 20 stitches.
- Measure the length of the seam over 20 stitches and calculate the actual stitch length.
- If the difference, measured over 20 stitches, is larger than +/- 0.5 mm, the value for parameter 846 must be corrected.
- Take the value for parameter **846** from the table or calculate it with the aid of the formula:

$$\frac{\text{Set stitch length}}{\text{Actual stitch length}} \times 100$$

Stitch length 3,0 mm		Stitch length 2,5 mm		Stitch length 2,0 mm		Stitch length 1,5 mm	
Length over 20 stitches	Value for parameter 846 / 847	Length over 20 stitches	Value for parameter 846 / 847	Length over 20 stitches	Value for parameter 846 / 847	Length over 20 stitches	Value for parameter 846 / 847
58.5	102	48.5	103	38.5	104	28.5	105
59.0	102	49.0	102	39.0	103	29.0	103
59.5	101	49.5	101	39.5	101	29.5	102
60.0	100	50.0	100	40.0	100	30.0	100
60.5	99	50.5	99	40.5	99	30.5	98
61.0	98	51.0	98	41.0	97	31.0	97
61.5	98	51.5	97	41.5	96	31.5	95
62.0	97	52.0	96	42.0	95	32.0	94
62.5	96	52.5	95	42.5	94	32.5	92
63.0	95	53.0	94	43.0	93		
63.5	94	53.5	93	43.5	92		
64.0	94	54.0	93				
64.5	93	54.5	92				
65.0	92						

- Select the calculated value for parameter **846** and switch off the machine.





The adjustment of the reverse stitch length is carried out as described in the above work steps under parameter "847", with the reverse feed key pressed, see **Chapter 7.02 Keys on the machine head**. More information about selecting and changing parameters and explanations (functions) of the individual parameters is contained in **Chapter 13.08 Parameter settings**.

13.05.17 Bobbin winder

Requirement

1. With the bobbin winder on, the drive wheel 1 must engage reliably.
2. With the bobbin winder off, the friction wheel 5 must not be driven by the drive wheel 1.
3. The eccentric pin 3 should be positioned in the centre of the large bobbin chamber.

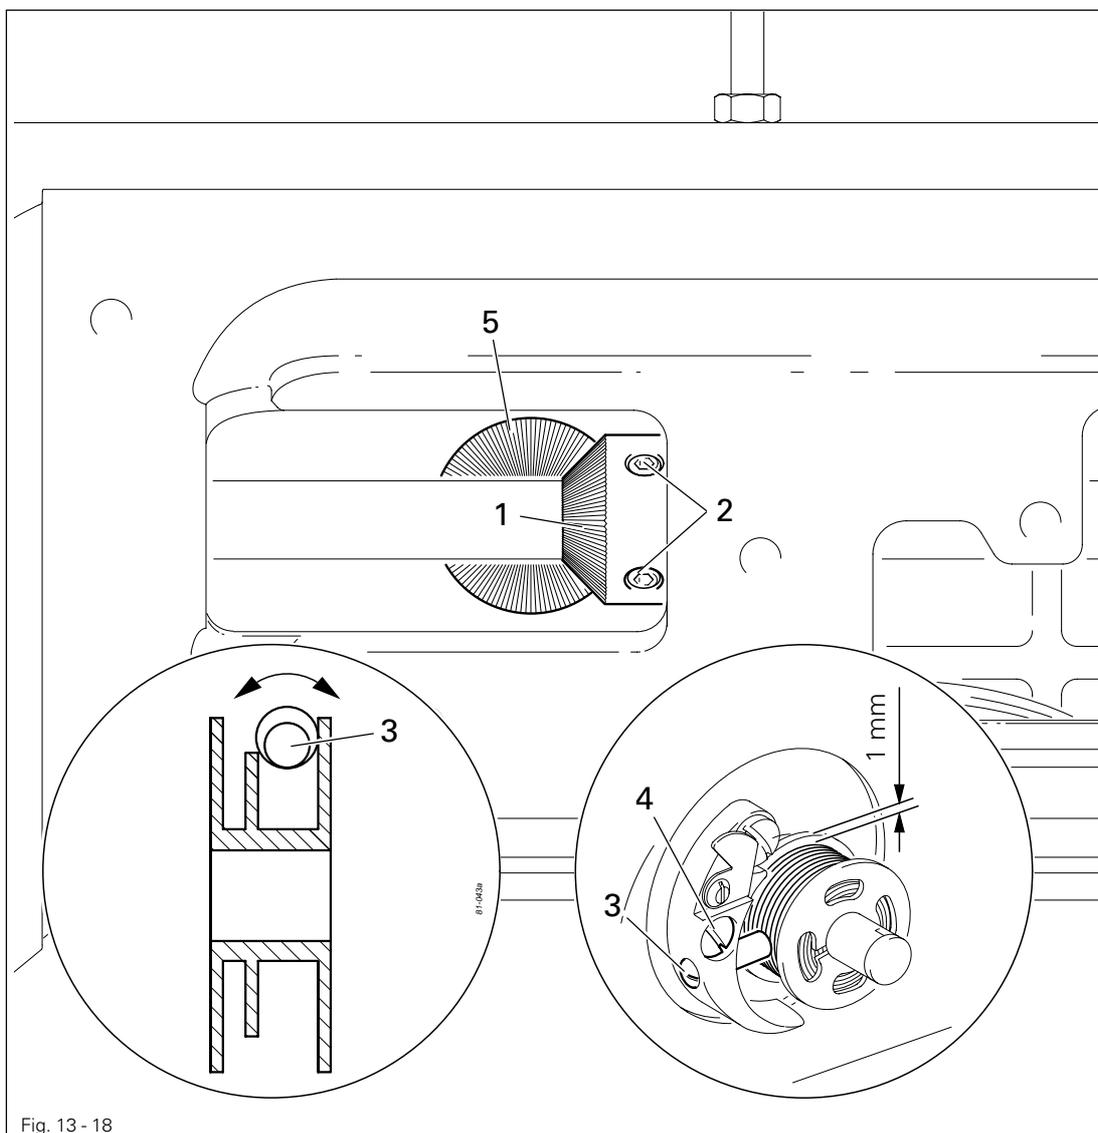


- Move drive wheel 1 (screws 2) in accordance with **requirement 1 and 2**.
- Place a bobbin on the bobbin winder, thread the bobbin and switch on the bobbin winder.
- Adjust pin 3 (screw 4) in accordance with **requirement 2** and turn it in accordance with **requirement 3**.

13.05.18 Mechanical limiting of the stitch length

Requirement

1. With the maximum stitch length set, the feed dog should not touch the needle plate cut-out when sewing forwards and in reverse.
2. The screws of the stops **1** (forwards sewing) and **3** (reverse sewing) should each have a clearance of **0.3 mm** to the corresponding metal edge.

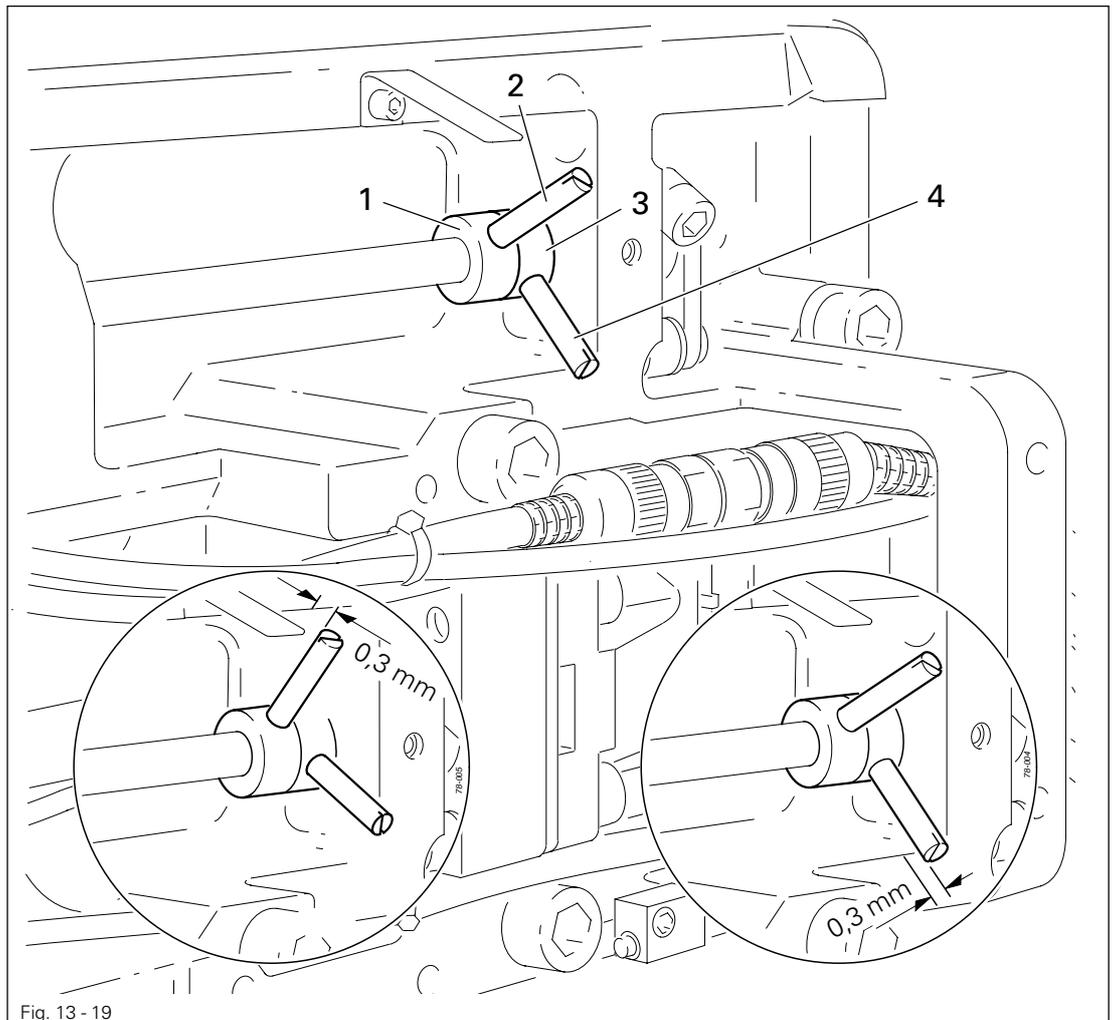

- Switch on the machine and set parameter **849** in accordance with **requirement 1**, see **Chapter 13.11 Parameter settings**.
- Select the maximum stitch length on the control panel.
- Adjust stop **1** (screw **2**) in accordance with **requirement 2**.
- Holding down the reverse sewing key, sew 2 stitches, see **Chapter 7.02 Keys on the machine head**.
- Adjust stop **3** (screw **4**) in accordance with **requirement 2**.
- Switch off the machine.

Adjustment

13.05.19 Presser foot pressure

Requirement

The material must be fed reliably. In the process, pressure marks on the material must not be made.

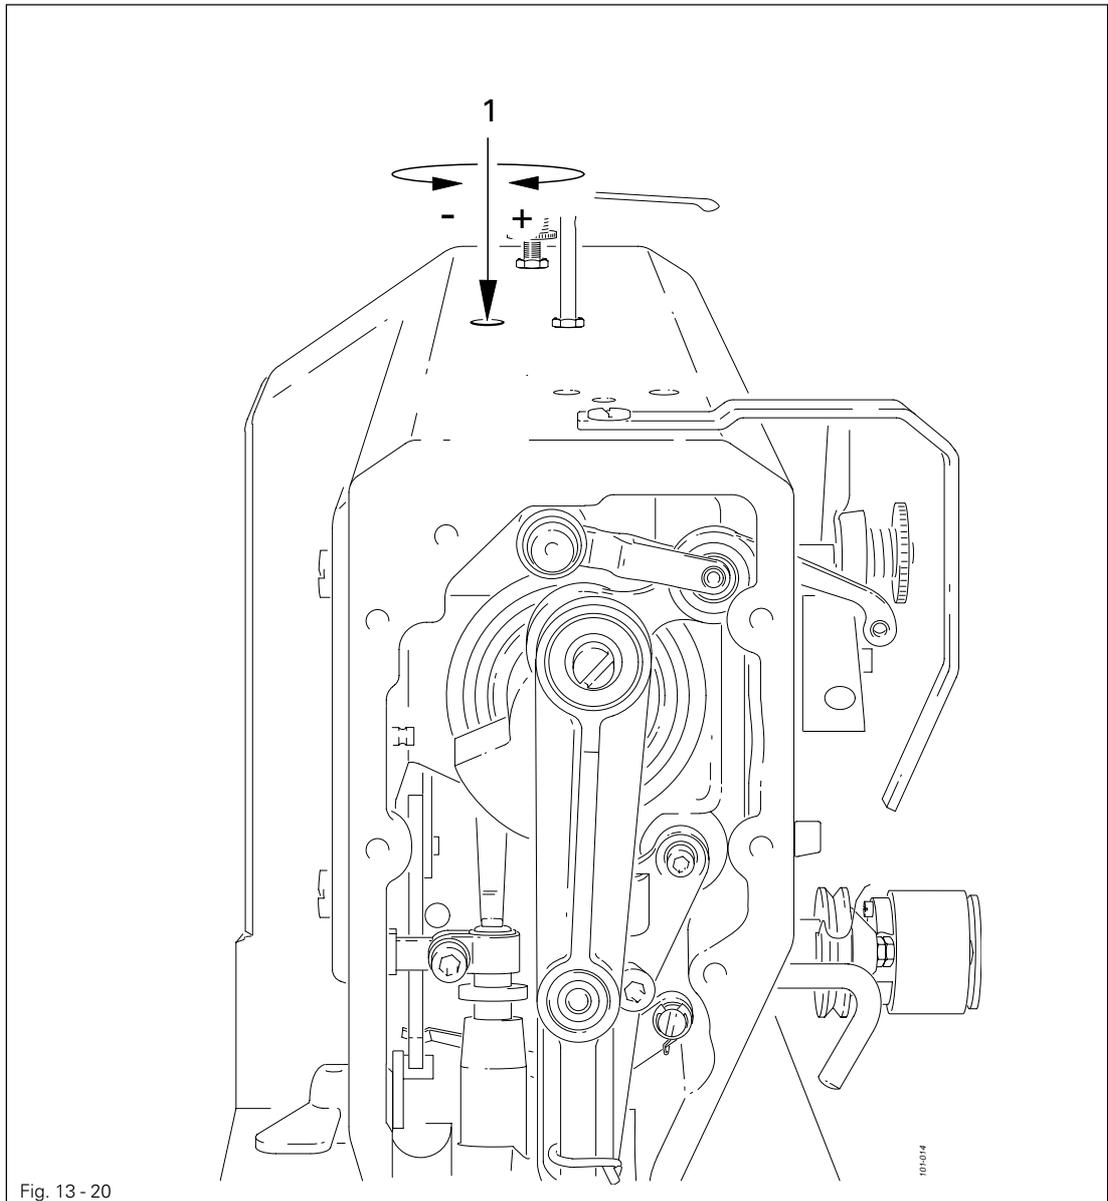


Fig. 13 - 20




- Turn screw 1 in accordance with the **requirement**.

13.06 Adjusting the thread trimming device -900/24

13.06.01 Adjusting the solenoid / preliminary adjustment of the control cam

Requirement

1. When solenoid **3** is completely extended, roller lever **4** should be at the lowest point of the control cam.
2. When the needle bar is positioned at 1.8 mm after b.d.c. (needle rise position), roller lever **4** should engage in the appropriate recess of the control cam.

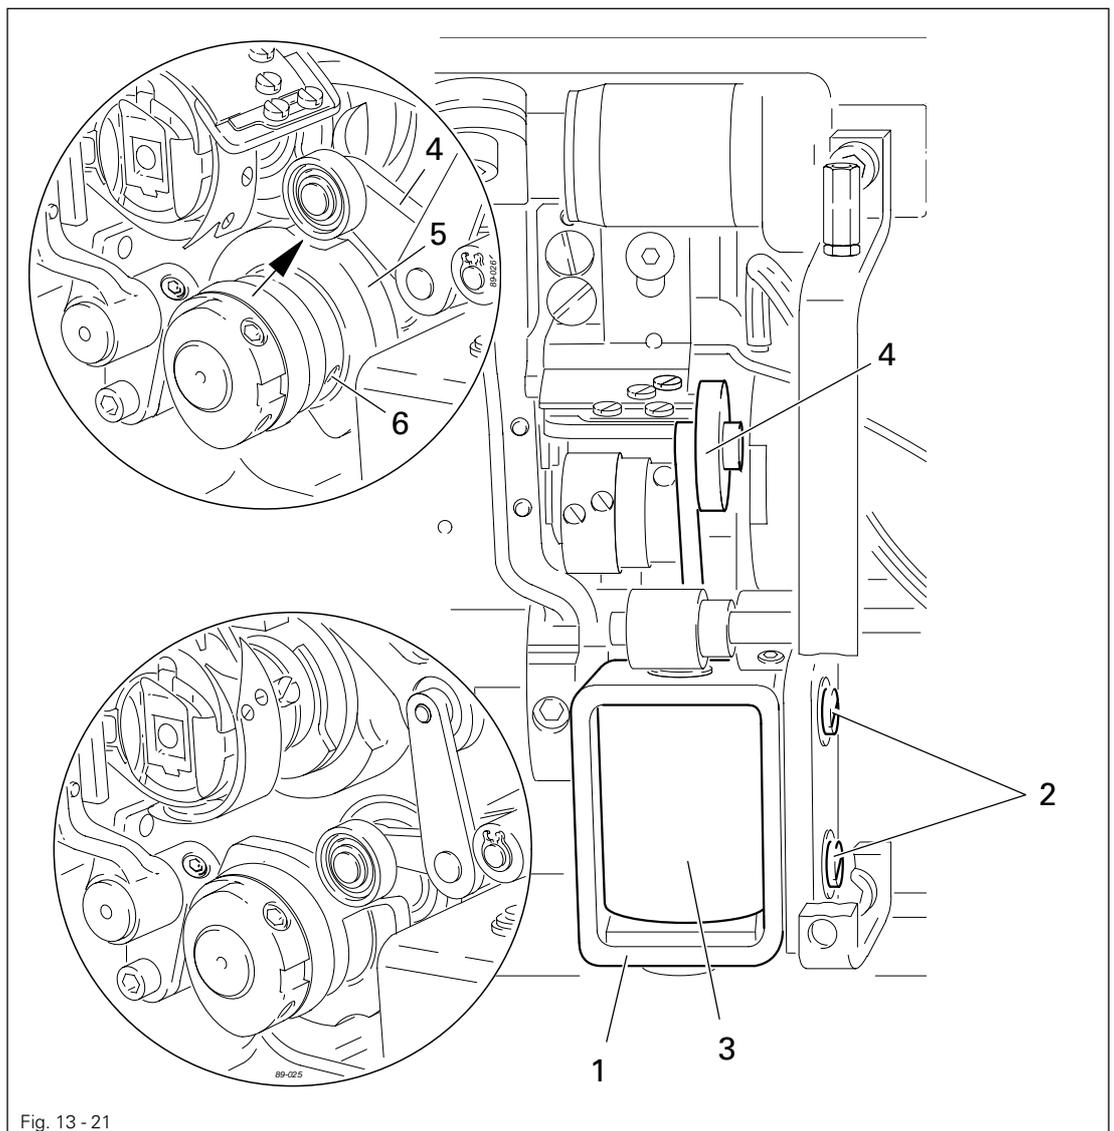


- Adjust solenoid holder **1** (screws **2**) in accordance with requirement 1.
- Adjust control cam **5** (screws **6**) in accordance with requirement 2.

Adjustment

13.06.02 Lateral alignment of the thread catcher

Requirement

1. The tip of the thread catcher 5 must point exactly to the center of the needle.
2. The thread catcher 5 must be horizontal. It must not graze anything when it is operating.

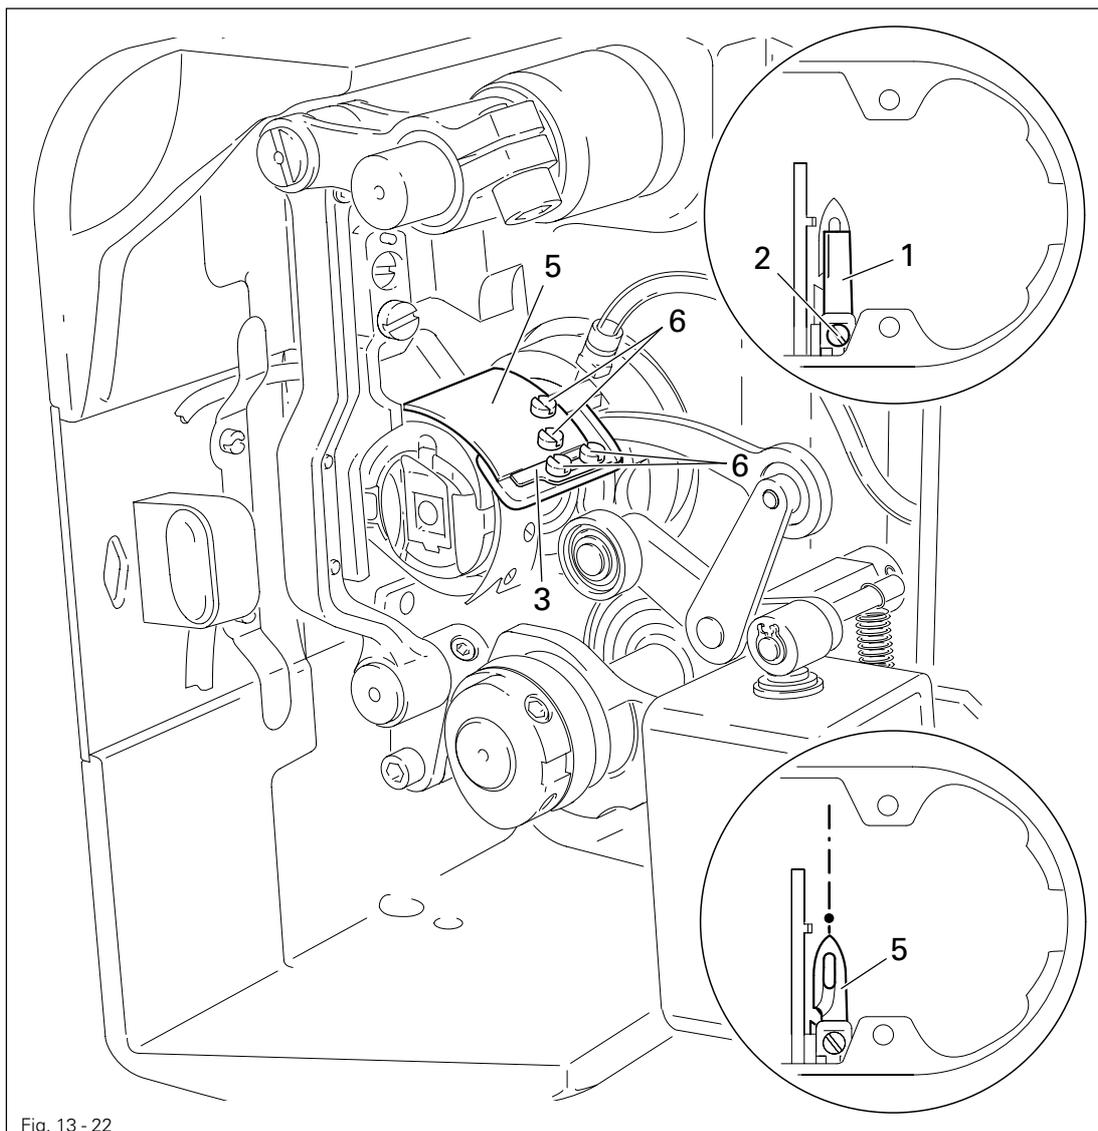

- Remove knife 1 (screw 2).
- Move needle bar to its BDC.
- Loosen stop 3 (screws 4).
- Position thread catcher 5 (screw 6) manually in front of the needle.
- Align thread catcher 5 (screws 7) according to the **requirements**.



For further adjustments, leave knife 1 removed and stop 3 loosened.

13.06.03 Knife position

Requirement

1. There must be a distance of **4 mm** between the cutting edge of the knife and the needle.
2. The right edge of the knife **1** must not extend beyond the right edge of the thread catcher (see arrow).

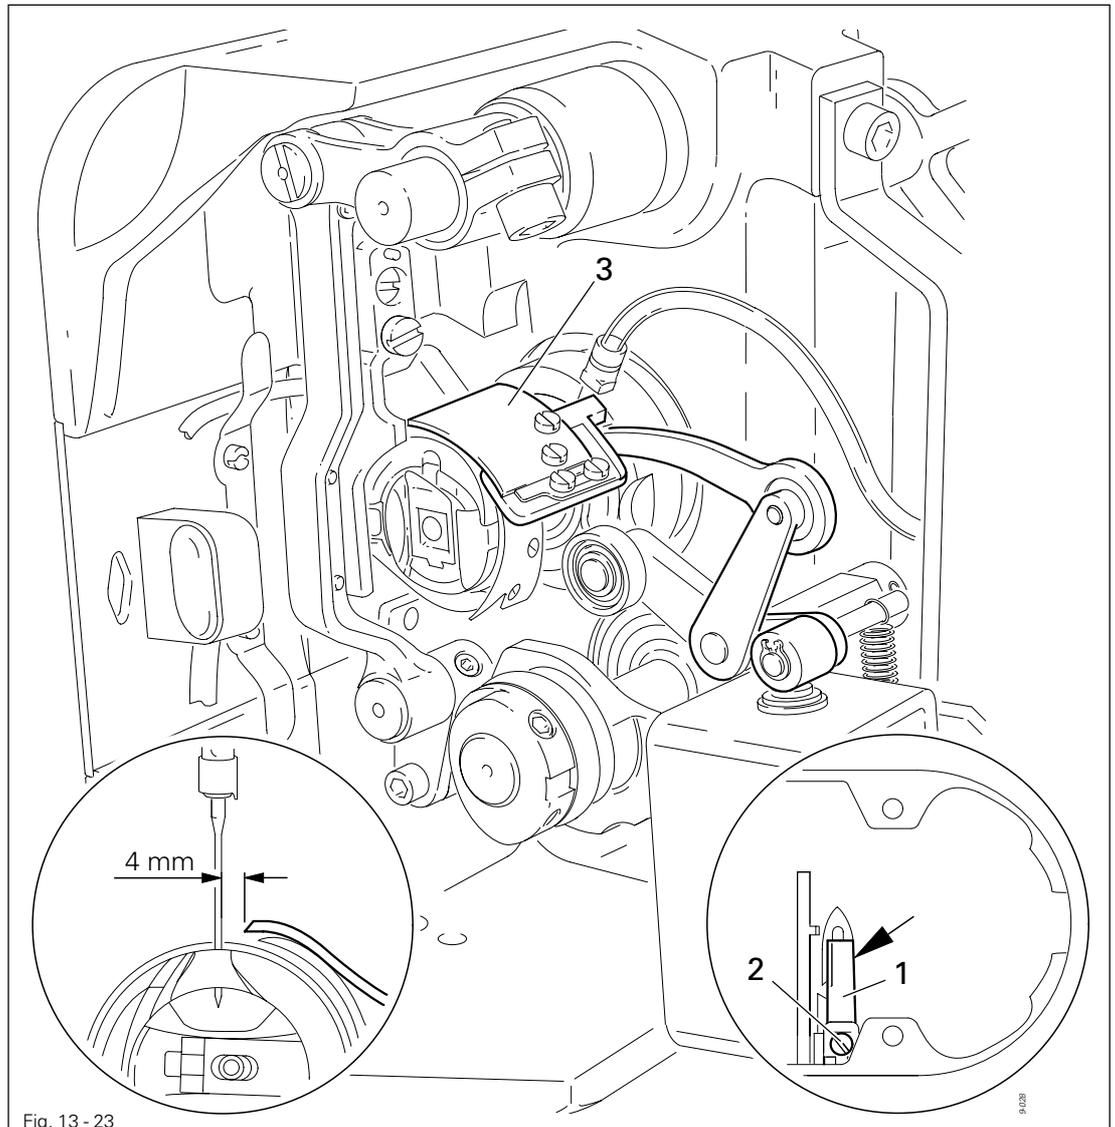


Fig. 13 - 23



- Bring the needle bar to BDC.
- Slide knife **1** under the locking tab and align according to **requirement 1**.
- Tighten screw **2** lightly.
- Adjust thread catcher carrier **3** by hand until the wedge point in the thread catcher is positioned just in front of the cutting edge of the knife.
- Align knife **1** according to **requirement 2** and tighten screw **2**.

Adjustment

13.06.04 Front point of reversal of the thread catcher

Requirement

At the front point of reversal of thread catcher 4, the tip of the thread catcher cutout should be 1 mm in front of the bobbin case position finger 5.

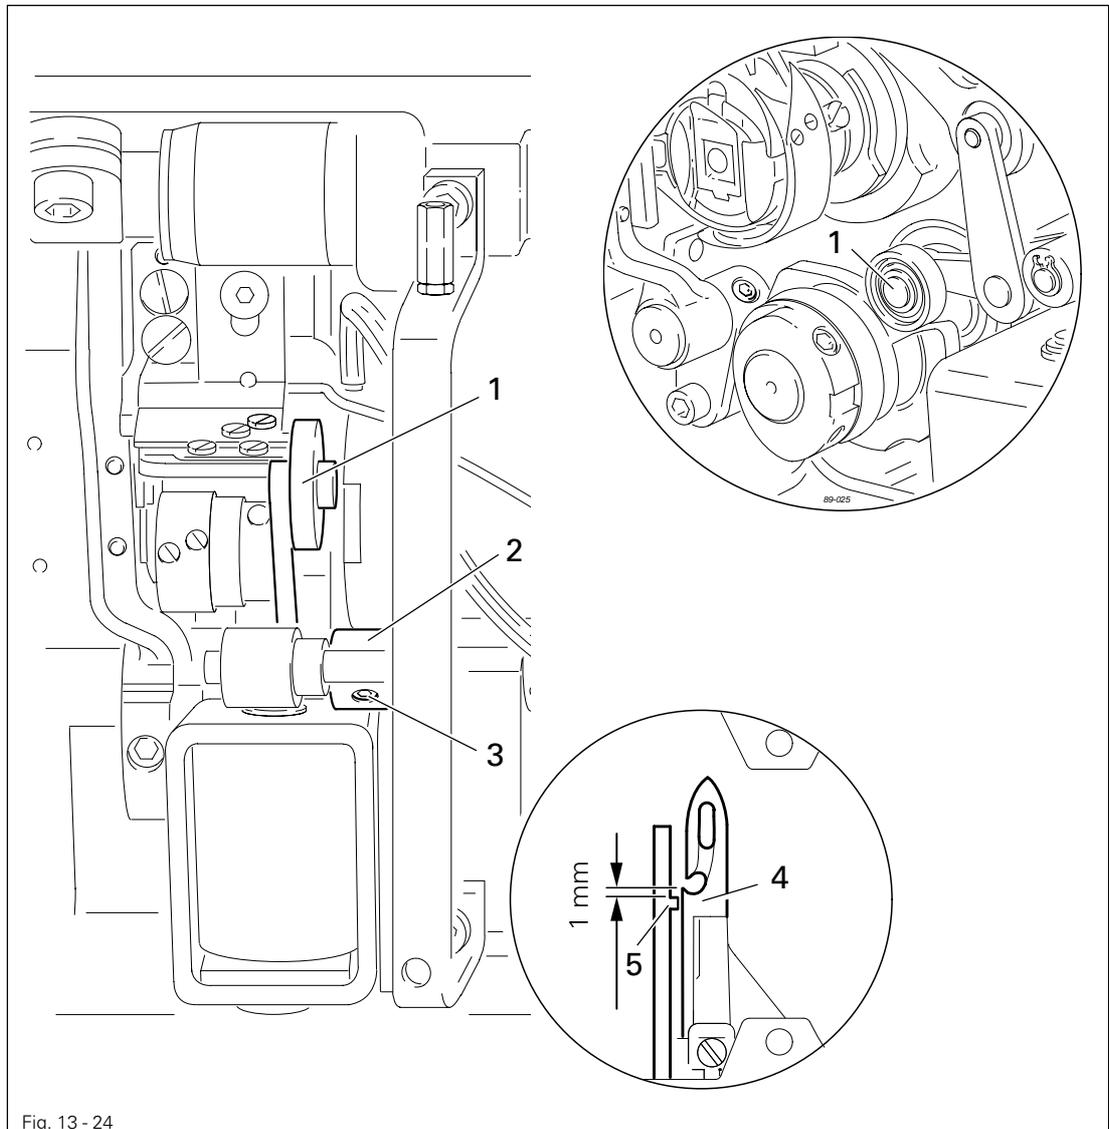


Fig. 13 - 24



- Position roller lever 1 at the lowest point of the control cam.
- Adjust bush 2 (screws 3) according to the requirement.

13.06.05 Manual trimming check

Requirement

Two threads must be cut perfectly both left and right in the cutout of thread catcher 1.

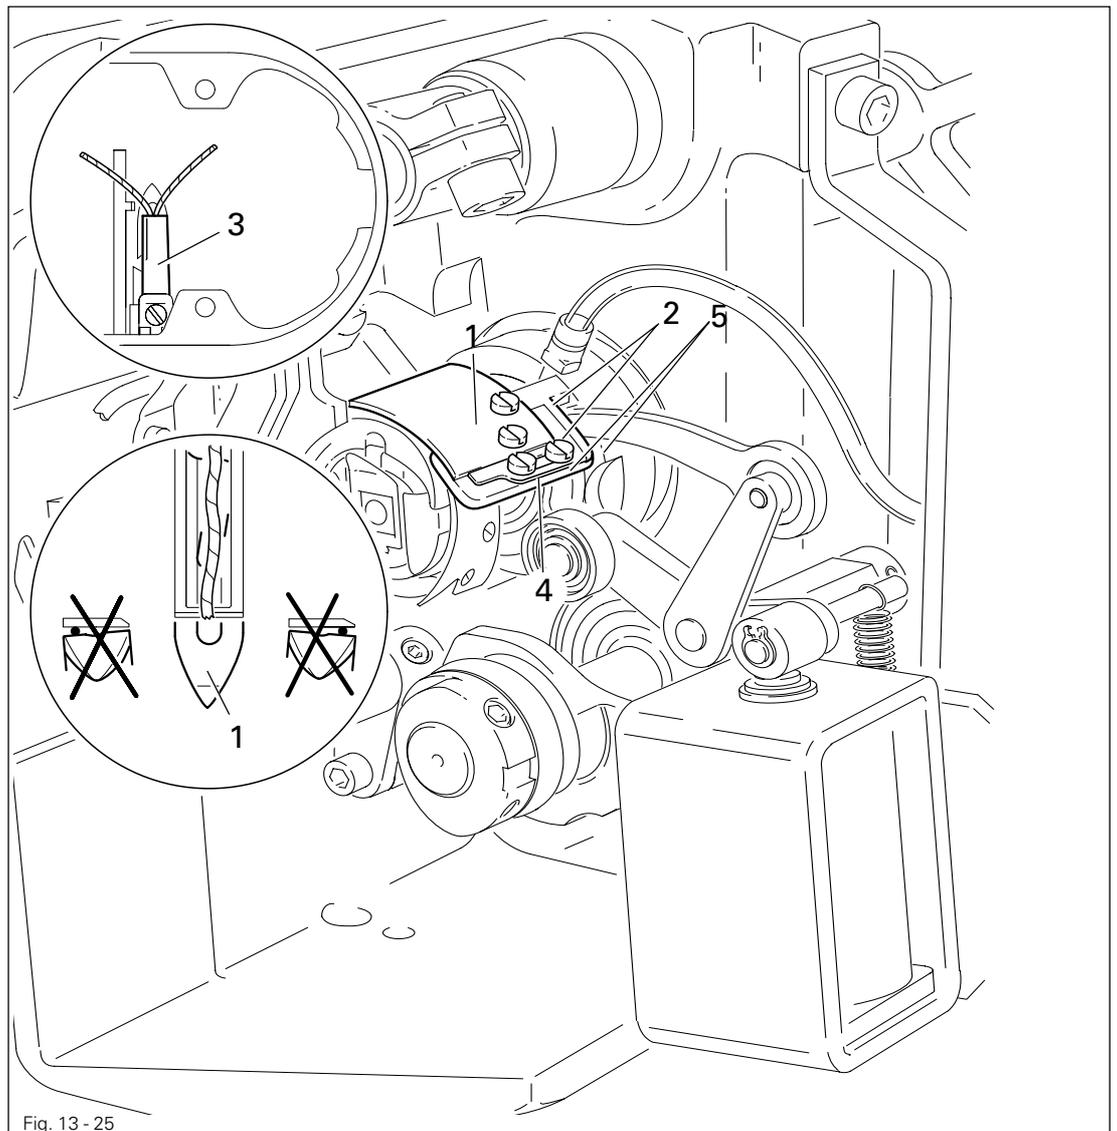


Fig. 13 - 25




- Move thread catcher 1 by hand to its front point of reversal.
- Double the thread and insert into catcher cutout.
- Carry out trimming operation manually.
- If the threads are not cut according to the **requirement**, align thread catcher 1 (screws 2) with knife 3 accordingly.
- Move stop 4 against thread catcher 1 and tighten screws 5.
- Check chapter 13.06.02 **Lateral alignment of the thread catcher**, and readjust if necessary.

13.06.06 Thread tension release

Requirement

1. When the thread tension is released, there should be a distance of **2.4 mm** between armature **5** and case **3**.
2. When the thread tension is applied, there should be a distance of **1.9 mm** between armature **5** and case **3**.

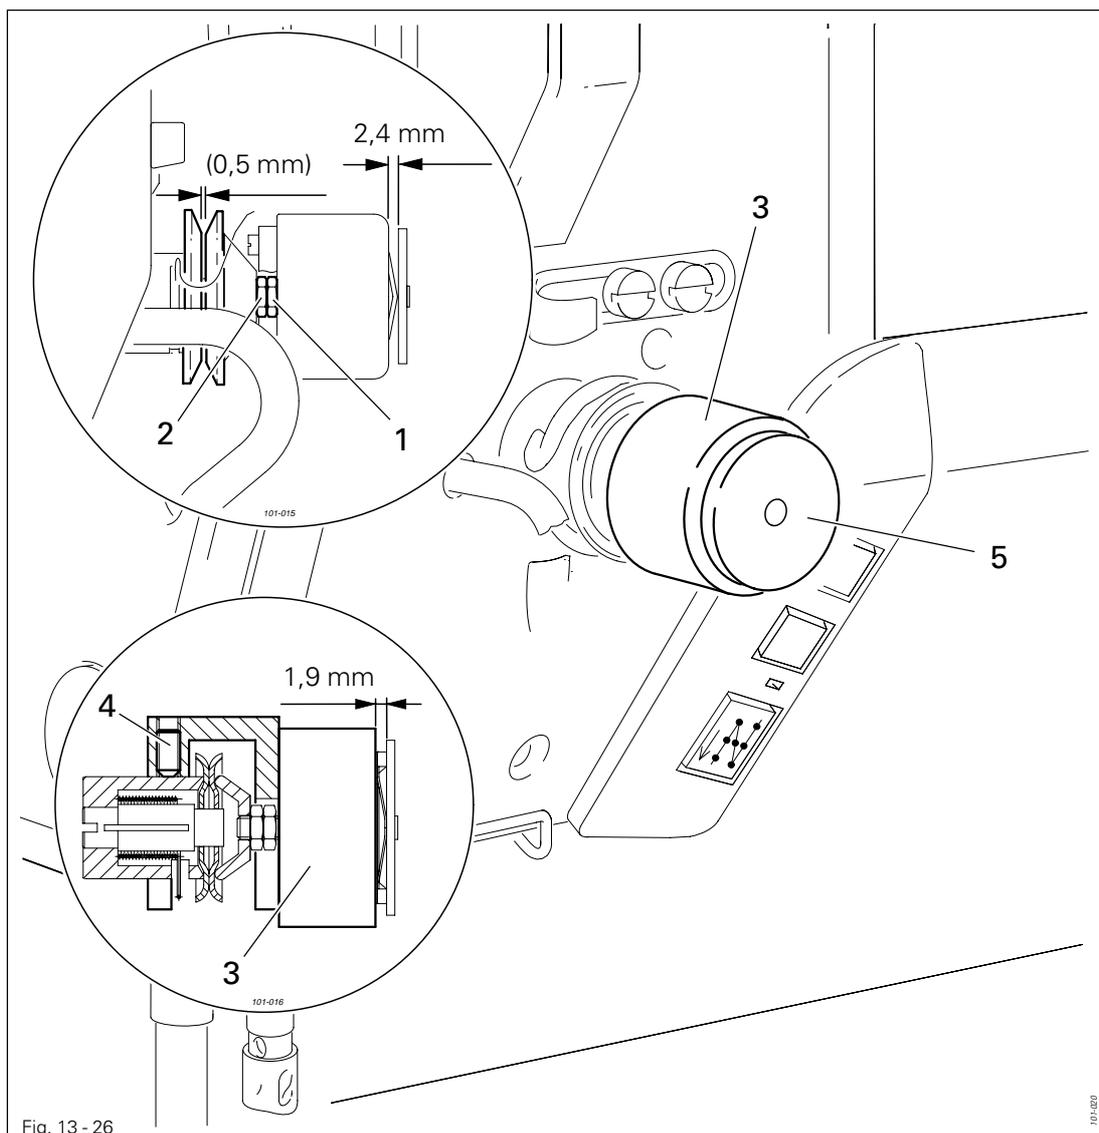

- Turn nut **1** (nut **2**) in accordance with **requirement 1**.
- Adjust case **3** (screw **4**) in accordance with **requirement 2**.



The pressure of the tensions disks is set with parameters "862" (securing stitches) and "863" (basting seam), see **Chapter 13.08 Parameter settings**.

13.06.07 Readjusting the control cam

Requirement

When the take-up lever is in its t.d.c., control cam 1 should have moved thread catcher 3.

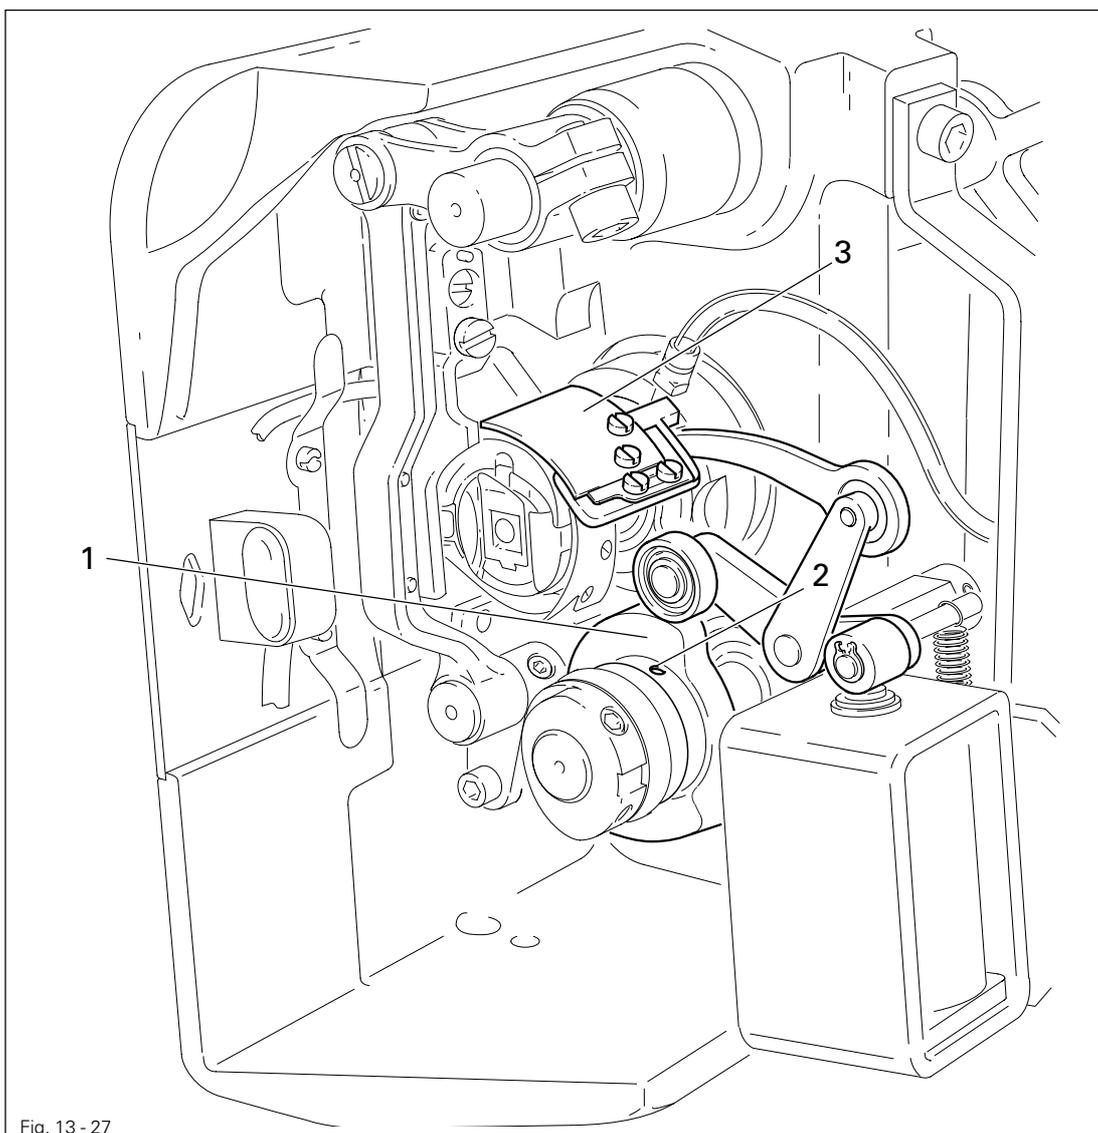



Fig. 13 - 27



- Adjust control cam 1 (screws 2) according to the requirement.

Requirement

When the thread is pulled, the value under "Rx" must change from "1" to "0" (perfect transmission of the incoming signal of the bobbin thread monitor).

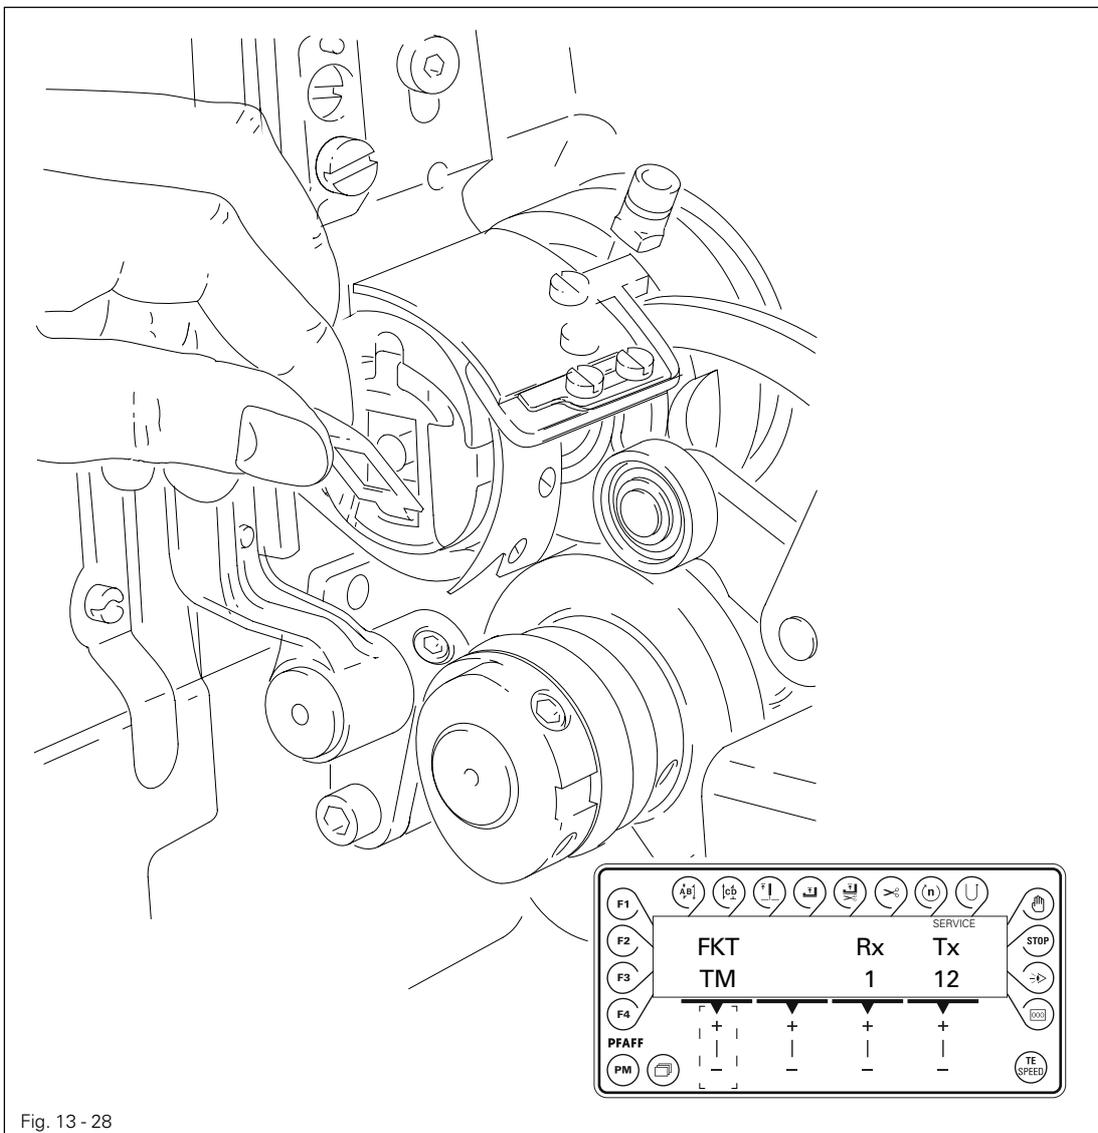


- Place the bobbin in the bobbin case and the bobbin case in the hook.
- Switch on the machine.
- Select the "TM" function from the service menu, see **Chapter 13.10 Service functions**.
- Pull the thread by hand and check the **requirement**.
- If necessary, increase or reduce the transmitting power with the corresponding +/- key.

Tx ● Switch off the machine.


13.08 Parameter settings

13.08.01 Example of a parameter input


- Switch on the machine.
- 2 x  ● Press the **TE/Speed** key twice to enter the parameter input function. The status text "TE" appears on the display and the pedal functions are blocked, to avoid the machine starting accidentally.

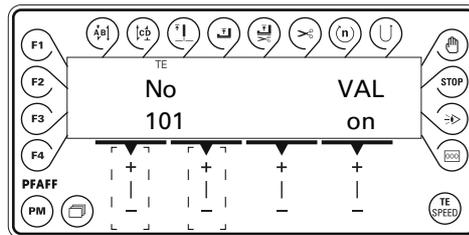

- No** ● Select the desired parameter, e.g. "660" bobbin thread control, by pressing the corresponding **plus/minus** key.

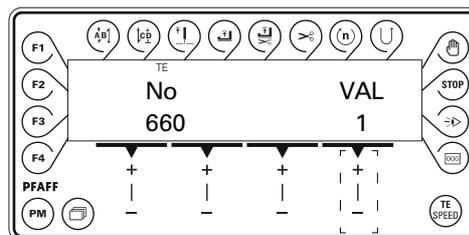

- VAL** ● With the corresponding **plus/minus** key, set the desired value for the parameter, e.g. "0" to switch off the bobbin thread control function.

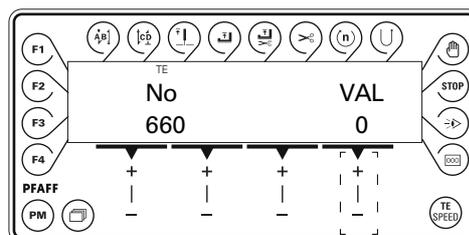


-  ● By pressing the **TE/Speed** key the value is taken over and the machine switches to the sewing mode.


Adjustment

13.08.02 Selecting the user level


- Switch on the machine.
- 2 x  ● Press the **TE/Speed** key twice to call up the parameter input function.

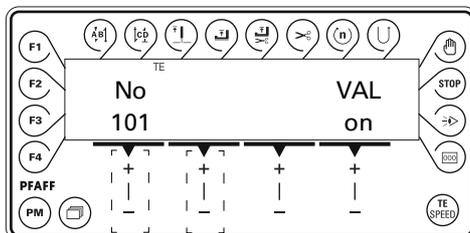

- No** ● Call up parameter "798" by pressing the corresponding +/- key.

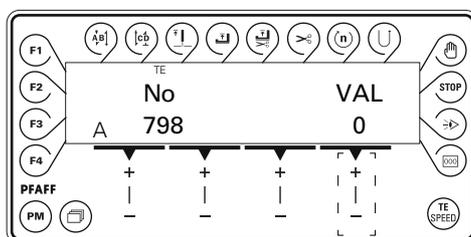

- VAL** ● By pressing the corresponding +/- key select the desired user level.
- "0" = Operator level **A**
 - "1" = Mechanic level **B**
 - "11" = Service level **C**
- The respective level is displayed on the screen (see arrow).

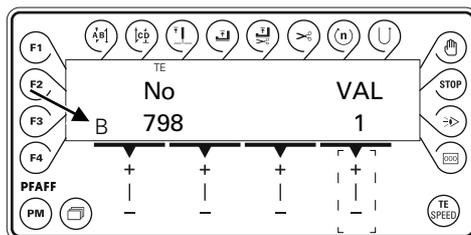

-  ● Press the **TE/Speed** key to take over the value and change to the sewing mode.



When the main switch is switched off, the machine changes automatically to user level **A**.

13.08.03 List of parameters

Group	Parameter	Description	User level	Setting range	Set value
0	10	Bobbin thread monitor-current level	C	8 - 16	12
	11	Bobbin thread monitor-stitch counter (starting value)	C	0 - 255	32
	14	Number of seam segments for gliding average of stitch length	C	0 - 10	2
	15	Use gliding average of stitch length for corner stitch	C	OFF - ON	OFF
	16	Transmitting power of light sensors 0=low / 5=high	C	0 - 5	0
	17	Light sensors lower hysteresis value for threshold [%]	C	10 - 90	30
	18	Light sensors upper hysteresis value for threshold [%]	C	10 - 90	35
	20	Light sensors Min. value for 2 plies	C	0 - 255	0
	21	Light sensors Max. value for 2 plies	C	0 - 255	0
	22	Light sensors Threshold from 2->1 ply	C	0 - 255	66
	23	Light sensors current threshold	C	0 - 255	70
	24	Light sensors Threshold from 1->2 ply	C	0 - 255	74
	25	Light sensors Min. value for 1 ply	C	0 - 255	200
	26	Light sensors Max. value for 1 ply	C	0 - 255	255
	30	Light sensors Min. value for 2 plies	C	0 - 255	0
	31	Light sensors Max. value for 2 plies	C	0 - 255	0
	32	Light sensors Threshold from 2->1 ply	C	0 - 255	66

Adjustment

Group	Parameter	Description	User level	Setting range	Set value
0	33	Light sensors current light barrier threshold [%]	C	0 - 255	70
	34	Light sensors Threshold from 1->2 ply	C	0 - 255	74
	35	Light sensors Min. value for 1 ply	C	0 - 255	200
	36	Light sensors Max. value for 1 ply	C	0 - 255	255
1	100	Control panel contrast [%]	A	90 - 110	100
	101	Control panel key response signal 0=tone off/1=tone off/key inverted 2=tone on/3=tone on/key inverted	A	0 - 3	2
	102	Start backtacks forwards	C	0 - 9	3
	103	Start backtacks in reverse	C	0 - 9	3
	105	Start backtacks speed	B	100 - 1500	900
	106	Start backtacks speed ON = pedal-controlled OFF = set with param. "105"	C	OFF - ON	OFF
	107	Pedal-controlled speed start backtacks ON = limited with parameter "105" OFF = limited with parameter "607"	C	OFF - ON	OFF
	108	End backtacks in reverse	C	0 - 9	3
	109	End backtacks forwards	C	0 - 9	3
	110	End backtacks speed	B	100 - 1500	1000
	111	No. of stitches from bright light barrier to seam end in manual sewing	A	1 - 255	6
	113	Start with light barrier ON = only when light barrier is dark OFF = also when light barrier is bright	B	OFF - ON	ON
114	After light barrier or stitch counting ON = stop OFF = autom. end backtacks and seam end	C	OFF - ON	OFF	
116	Soft start stitches (soft start)	A	0 - 10	1	

Group	Parameter	Description	User level	Setting range	Set value
1	117	Speed for soft start stitches	B	30 - 550	400
	148	Start backtacks ON = double / OFF = single	A	OFF - ON	ON
	149	End backtacks ON = double / OFF = single	A	OFF - ON	ON
	199	Speed for light barrier compensating stitches [min ⁻¹]	B	300 - 1500	1200
2	220	Speed level 12 (Poti-reserve) [min ⁻¹]	A	300 - 4500	4000
	221	Speed limitation for seam programs [min ⁻¹]	B	300 - 4500	4000
	222	Speed constant for seam programs [min ⁻¹]	B	300 - 4500	1500
	298	Number of reduced stitches	A	0 - 3	1
	299	Edge guide position in manual sewing [1/10 mm]	A	10 - 185	185
4	419	Bartacks: ON = inverted OFF = suppressed	C	OFF - ON	ON
	492	Number of seam programs	B	1 - 99	15
	493	Number of seam segments per seam program	B	1 - 15	15
5	554	Presser foot after seam segment with pedal forwards: ON = raised / OFF = lowered	C	OFF - ON	ON
	584	Backtack stitches ON = fourfold / OFF = normal	C	OFF - ON	OFF
6	601	Cutting: ON = ein / OFF = aus	B	OFF - ON	ON
	602	ON = Cutting with pedal -1 OFF = Cutting with pedal -2	C	OFF - ON	OFF
	603	ON = Pedal stops after cutting OFF = immediate start after end of seam	C	OFF - ON	ON
	604	Cutting: ON = forwards after semi end backtack OFF = in reverse too	C	OFF - ON	ON

Adjustment

Group	Parameter	Description	User level	Setting range	Set value
6	605	Speed display ON = ein / OFF = aus	B	OFF - ON	OFF
	606	Speed level 1 (min.) [min ⁻¹]	B	30 - 550	180
	607	Speed level 12 (max.) [min ⁻¹]	B	300 - 4500	4000
	609	Cutting speed [min ⁻¹]	B	60 - 500	180
	615	Light barrier detection ON = from bright to dark OFF = from dark to bright	C	OFF - ON	OFF
	616	Function of external key (S2): ON = Needle position change OFF = Needle raised without cutting	C	OFF - ON	OFF
	624	Start inhibitor: ON = ein / OFF = aus	C	OFF - ON	ON
	642	Presser foot – time from switch-on to tension reduction (tacting)	C	10 - 50	50
	643	Feed conversion – time from switch-on to tension reduction (tacting)	C	10 - 200	100
	651	Automatic lowering of presser foot ON = ein / OFF = aus	C	OFF - ON	ON
	660	Bobbin thread monitoring 0 = off 1 = on 2 = bobbin thread reverse counter on	A	0 - 2	1
	665	Start inhibitor ON = when contact closed OFF = when contact open	C	OFF - ON	OFF
	668	Thread wiper : ON = ein / OFF = aus	B	OFF - ON	OFF
7	700	Logical zero mark [increments]	B	0 - 127	0
	702	Needle position (needle lowered)	B	0 - 30	15
	703	Needle position (take-up lever raised)	B	100 - 127	113
	705	Needle position (end of cutting signal)	B	80 - 127	98
	706	Needle position (start of cutting signal)	B	40 - 80	68

Group	Parameter	Description	User level	Setting range	Set value
7	707	Needle position (start thread tension release)	B	40 - 80	70
	710	Needle position (needle raised without cutting)	B	80 - 127	106
	715	Operating time thread wiper [ms]	B	0 - 2550	120
	718	Moment of standstill brake (rest brake)	B	0 - 100	0
	719	Presser foot-holding current	B	0 - 50	40
	720	Cutting-holding current	B	0 - 50	10
	721	Feed converter-holding current	C	0 - 50	40
	722	Acceleration ramp: 1 = flat / 50 = steep	C	1 - 50	50
	723	Brake ramp: 1 = flat / 50 = steep	C	4 - 50	50
	729	Start delay after lowering presser foot [ms]	B	0 - 2550	120
	730	Lift delay for presser foot after seam end [ms]	B	0 - 2550	0
	731	Stitch count delay for end backtack	C	0 - 2550	70
	732	Delay time for cutting after single end backtack [ms]	C	0 - 2550	30
	733	Delay time from switch on feed conversion to speed start [ms]	C	0 - 200	30
	739	Delay time for speed after start backtack or stitch condensation [ms]	C	0 - 2550	200
	740	Stitch count delay for end backtack [ms]	C	0 - 2550	60
	760	Stitch count to bobbin thread monitor (machine stop in needle lowered position)	A	0 - 50000	1000
761	Extension thread tension release/ pull thread [ms]	B	0 - 2550	0	

Adjustment

Group	Parameter	Description	User level	Setting range	Set value
7	791	Stitch count delay for start backtack [ms]	C	0 - 2550	30
	797	Hardware test: ON = ein / OFF = aus	B	OFF - ON	OFF
	798	User level: 0 = User level A 1 = Mechanic level B 11 = Service level C	A	0 - 255	0
	799	Machine class: 1 = 2481 (2 to 4 = other machine classes)	C	1 - 4	1
8	800	Rotating direction of motor	C	OFF - ON	ON
	801	Reversing angle	C	5 - 106	16
	805	Rotating direction of stepping motor 2	C	OFF - ON	OFF
	808	Rotating direction of stepping motor 1	C	OFF - ON	ON
	831	Start delay for stepping motor 2 [increments]	B	0 - 10	5
	832	Needle position (feed start)	B	0 - 127	15
	833	Needle position (feed end)	B	0 - 127	67
	834	Feed regulator-balance [1 semi-step = 5/100mm]	B	-5 - 5	0
	835	Reduced single stitch [%]	A	0 - 100	100
	843	Distance sensor 1 to sensor 2 [1/10mm]	B	75 - 85	80
	844	Distance sensor 1 to needle [2/10mm]	B	80 - 300	200
	845	Speed-controlled stitch length adjustment [% pro 1000 min ⁻¹]	B	0 - 3	1
	846	Feed regulator characteristic line adjustment for forward stitch length [%]	A	80 - 110	96
	847	Feed regulator characteristic line adjustment for reverse stitch length [%]	A	80 - 110	90
849	Maximum stitch length [1/10 mm]	A	0 - 60	55	

Group	Parameter	Description	User level	Setting range	Set value
8	862	Current for stepping motor axis 1	A	0 - 63	45
	863	Current for current reduction of stepping motor axis 1	A	0 - 63	37
	864	Current reduction time stepping motor axis 1 [ms]	B	0 - 1000	250
	880	Starting current main drive	C	1 - 10	6
	881	Filter parameter for position controller	C	0 - 12	5
	884	Proportional amplification of the speed control (general)	C	1 - 50	10
	885	Integral amplification of the speed control	C	0 - 50	35
	886	Proportional amplification of the position controller	C	1 - 50	30
	887	Differential amplification of the position controller	C	1 - 50	30
	889	Time for position control (0 = permanently)	C	0 - 2550	200
	890	Proportional amplification of higher ranking speed controller for standstill brake (rest brake)	C	1 - 50	25
	891	Proportional amplification of subordinate speed controller for standstill brake (rest brake)	C	1 - 50	20
9	901	Cutting release-speed	C	30 - 500	300
	956	Current for stepping motor axis 2	B	30 - 63	48
	957	Current for current reduction of stepping motor axis 2	B	15 - 31	24
	958	Current reduction time stepping motor axis 1	B	0 - 500	150

13.09 Explanation of the error messages

Message	Description
E001	Pedal not in neutral position
E003	SM 1 (for reference)
E004	SM 2 (for reference)
E009	Start inhibitor at standstill
E010	Incorrect machine class
E040	Transmitted light sensors
E045	Bobbin thread monitoring
E062	Short circuit 24V
E063	Overload switch power supply
E064	Network monitoring
E065	Extint low in operation
E066	Short circuit
E067	Power off
E068	Extint low in operation
E069	No increments
E070	Motor blocking
E071	No incremental connector
E072	No set value connector
E073	Motor running interrupted
E075	Controller locked
E092	Start inhibitor when motor running
E151	System
E155	Sewing motor
E156	Time out communication
E157	Stepping motor ramps
E158	Stepping motor frequency
E170	Incorrect main drive transmission
E171	Logical zero mark invalid
E172	Communication error main drive
E175	Main drive start
E200	Brake path too short
E201	Main drive position
E222	Time-out monitoring


13.10 Service functions

- TE SPEED** The service functions help with finding errors and commissioning. After selecting the input mode with the **TE/Speed** key, with the corresponding authorisation (access level B or C), the menu for selecting service functions can be called up by pressing the **F1** key. After the service functions have been called up, the status text "Service" appears on the display.

- Switch on the machine.

- TE SPEED** ● Press the **TE/Speed** key to call up the input mode.

- F1** ● Press the **F1** key within 5 seconds to call up the service functions.

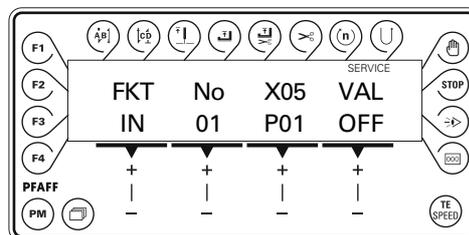

The individual service functions are shown under "FKT" and can be selected with the corresponding +/- key.

Overview of the service functions

FKT	Explanation
IN	Read out inputs With the corresponding +/- key the number of the input "No" can be selected.
OUT	Set/reset outputs With the corresponding +/- key the number of the output "No" can be selected and set accordingly "VAL" (ON/OFF).
PED	Read out set value transmitter pedal
POS	Read out main drive position
SM1	Move stepping motor SM1 (edge guide) By selecting the type „POS“ and entering the desired value with the corresponding +/- keys, the edge guide positions in the position entered. By selecting the type "REF" and confirming the selection with the corre

Adjustment

FKT	Explanation
SM2	<p>Move stepping motor SM2 (feed regulator)</p> <p>By selecting the type "POS2 and entering the desired value with the corresponding +/- keys, the feed regulator positions in the position entered. By selecting the type "REF" and confirming the selection with the corresponding +/- keys, the feed regulator is moved to the reference position.</p>
DM	<p>Adjust main drive</p> <p>By selecting the type "POS" and entering the desired value with the corresponding +/- keys, the main drive positions in the position entered.</p> <p>By selecting the type "SPD" and entering the desired value with the corresponding +/- keys, the value for the speed is changed accordingly.</p> <p>By selecting the type "SC" and entering the desired value with the corresponding +/- keys, the value for the stitch count is changed accordingly.</p>
RES	<p>Carry out reset</p> <p>By selecting the type "PAR" and confirming the selection with the corresponding +/- keys, the values for all parameters are reset (master reset).</p> <p>By selecting the type "PRG" and confirming the selection with the corresponding +/- keys, all seam programs are deleted.</p>
TM	<p>Adjust bobbin thread monitor</p> <p>With the corresponding +/- key the transmitting power of the bobbin thread monitor "Tx" can be changed.</p>
PS	<p>Adjust transmitted light sensors</p> <p>With the corresponding +/- key the transmitting power of the transmitted light sensors "Tx" can be changed (Lo/Hi).</p>
VER	<p>Display software version</p>

Plug assignment**CAN**

Pin-No.	Comment	Function	Plug marking	Signal marking
X11A.2	CAN	CAN-	CAN_HIGH	CAN_TxD
X11A.3	CAN			Gnd
X11A.7	CAN	CAN+	CAN_LOW	CAN_RxD

Set value transmitters

Pin-No.	Comment	Function	Plug marking	Signal marking
X11B.4	pedal			+5V
X11B.5	pedal			+5V
X11B.6	pedal			Gnd
X11B.7	pedal 2	set value		SW2 (analog)
X11B.8	pedal 1	set value		SW1 (analog)
X11B.9	pedal			Gnd

Sensors

Pin-No.	Comment	Function	Plug marking	Signal marking
X15.1	Sensors	current source UFW		P7.3
X15.2	Sensors	DLS outside (LS2)		P5.3 (analog)
X15.3	Sensors	DLS inside (LS1)		P5.6 (analog)
X15.4	Sensors	ZZ-Sensor 2438	E9	E9/Port_E9
X15.5	Sensors	current source DLS	A10/PortA10	O10
X15.6	Sensors		+5V	+5V
X15.7	Sensors	UFW-Out		UFW_MESS
X15.8	Sensors		+24V	+24V
X15.9	Sensors		0V	0V

RS232

Pin-No.	Comment	Function	Plug marking	Signal marking
X1A.1	BDF-S2/T1		+24V	+24V
X1A.2	BDF-S2/T1		RxD	RxD
X1A.3	BDF-S2/T1		TxD	TxD
X1A.4	BDF-S2/T1		+5V	+5V
X1A.5	BDF-S2/T1		Gnd	Gnd
X1A.6	BDF-S2/T1		-	
X1A.7	BDF-S2/T1		RTS	RTS
X1A.8	BDF-S2/T1		CTS	CTS
X1A.9	BDF-S2/T1		Gnd	Gnd

Adjustment

OTE

Pin-No.	Comment	Function	Plug marking	Signal marking
X1B.1	OTE			Gnd
X1B.2	OTE	SSI-Out (TxD)		SSOut
X1B.3	OTE	SSI-Clock		SSClk
X1B.4	OTE			+24V
X1B.5	OTE			+5V
X1B.6	OTE	SSI-strobe (Mode)		SSStr
X1B.7	OTE	SSI-In (Rx/D)		SSIn
X1B.8	OTE	(light barrier 1)		(LS1)
X1B.9	OTE			

Incremental transmitter

Pin-No.	Comment	Function	Plug marking	Signal marking
X3.1	incr.transm.	track A 256inc./rev.		FA_MINI
X3.2	incr.transm.	track B 256inc./rev.		FB_MINI
X3.3	incr.transm.	SyMa 360°/256		
X3.4	incr.transm.	Autodetect		ADTC
X3.5	incr.transm.			+5V
X3.6	incr.transm.			+5V
X3.7	incr.transm.			Gnd
X3.8	incr.transm.	Ext. SyMa 180°		EXTSM_MINI
X3.9	incr.transm.			Gnd

Stepping motor 1 (edge guide)

Pin-No.	Comment	Function	Plug marking	Signal marking
X4B.1	SM1/FSL	phase A.2	A11	
X4B.2	SM1/FSL	phase A.1	A12	
X4B.3	SM1	phase B.2	A21	
X4B.4	SM1	phase B.1	A22	
X4B.5	SM1			
X4B.6	SM1			
X4B.7	SM1	+5V (with 120R ?)		
X4B.8	SM1	reference SM1	SM_REF1	SM_REF1
X4B.9	SM1	Gnd		

Stepping motor 2 (stitch length)

Pin-No.	Comment	Function	Plug marking	Signal marking
X4A.1	SM2	Phase A.2	B11	
X4A.2	SM2	Phase A.1	B12	
X4A.3	SM2	Phase B.2	B21	
X4A.4	SM2	Phase B.1	B22	
X4A.5	SM2			
X4A.6	SM2			
X4A.7	SM2	+5V (with 120R ?)		
X4A.8	SM2	reference SM2	SM_REF2	SM_REF2
X4A.9	SM2	Gnd		

Outputs

Pin-No.	Comment	Function	Plug marking	Signal marking
X13.01	PWM	FSL-solenoid(Y8)	A1	O1.1
X13.02		FSL-solenoid(Y8+)	A1	O1.2
X13.03	PWM	PFH-solenoid(Y4)	A2	O2.1
X13.04		PFH-solenoid(Y4+)	A2	O2.2
X13.05		WI-solenoid(Y3)	A3	O3
X13.06	PWM	SN-solenoid(Y2)	A4	O4
X13.07			A5	O5
X13.08		RAFI-LED(H1)	A6	O6
X13.09			A7	O7
X13.10			A8	O8
X13.11			A9	O9
X13.12	(from DX)	current source DLS	A10/PortA10	O10
X13.13			A11	O11
X13.14			+24V	+24V
X13.15			+24V	+24V
X13.16			A14	O14
X13.17			A15	O15
X13.18			A16	O16
X13.19		SN-solenoid(Y2+)	+24V	+24V
X13.20		WI-solenoid(Y3+)	+24V	+24V
X13.21			+24V	+24V
X13.22		RAFI-LED(H1+)	+24V	+24V
X13.23			+24V	+24V
X13.24			A13	O13
X13.25			A12	O12

Inputs

Pin-No.	Comment	Function	Plug marking	Signal marking
X5.01		TUM-key(S1)	E1	E7
X5.02		NPW-key(S2)	E2	E8
X5.03		EST-key(S2)	E3	E2
X5.04		ANLSP-switch(S14)	E4	E4
X5.05		EST-knee switch(S13)	E5	E5
X5.06		knee switch2	E15	E15
X5.07			E16	E16
X5.08			E14	E14
X5.09	(from DX)	ZZ-Sensor 2438	E9	E9/Port_E9
X5.10			E10	E10
X5.11			E11	E11
X5.12			E12	E12
X5.13			E13	E13
X5.14			E6	E6
X5.15			E7	E1
X5.16			E8	E3
X5.17		S1-S2-S3(Gnd)	0V	0V
X5.18			0V	0V
X5.19		ANLSP-switch(Gnd)	0V	0V
X5.20		EST-knee switch(Gnd)	0V	0V
X5.21			0V	0V
X5.22			0V	0V
X5.23			+24V	+24V
X5.24			A16	output_A16
X5.25			+24V	+24V

13.11 Internet update of the machine software

The machine software can be updated with PFAFF flash programming. For this purpose the PFP boot program and the appropriate control software for the machine type must be installed on a PC. To transfer the data to the machine, the PC and the machine control unit must be connected with an appropriate null modem cable (part no. 91-291 998-91).



The PFP boot program and the control software of the machine type can be downloaded from the PFAFF-homepage using the following path:
www.pfaff-industrial.com/de/service/download/steuerungssoftware.html

To update the machine software carry out the following steps:



While the machine software is being updated, no setting up, maintenance or adjustment work may be carried out on the machine!

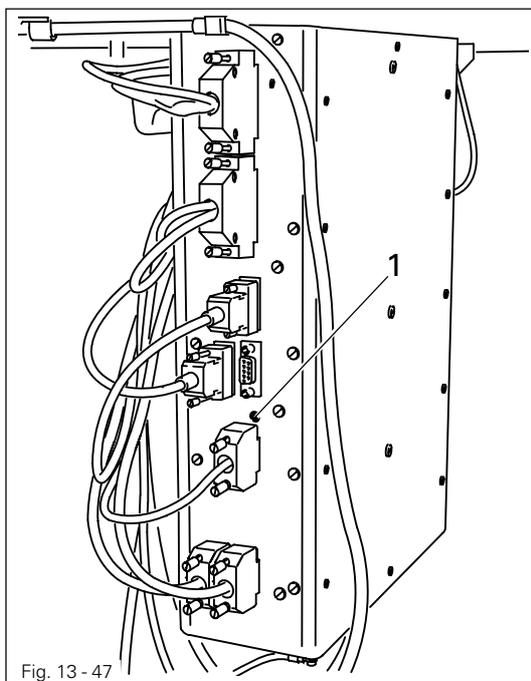


Fig. 13 - 47

- Switch off the machine.
- Connect the PC (serial interface or appropriate USB-adapter) and the machine control unit (RS232). To do so disconnect the plug of the control panel.
- Switch on the PC and start the PFP boot program.
- Select the machine type.
- Press the "programming" button.
- Hold down boot key 1 and switch on the machine.
- Press the "OK" button.

- The software update is carried out, the update progress is shown on the bar display of the PFP boot program.
- During the up-dating procedure the machine must not be switched off.
- When the update has been completed, switch off the machine and end the PFP boot program.
- End the connection between the PC and the machine control unit and reconnect the control panel to the machine control unit.
- Switch on the machine.

A plausibility control is carried out and, if necessary, a cold start.





More information and assistance is at your disposal in the file "PFPHILFE.TXT", which can be called up from the PFP boot program by pressing the "help" button.

14 Wearing parts





This list indicates the most important wearing parts.

You can request a detailed parts list for the complete machine under parts number 296-12-18 760.

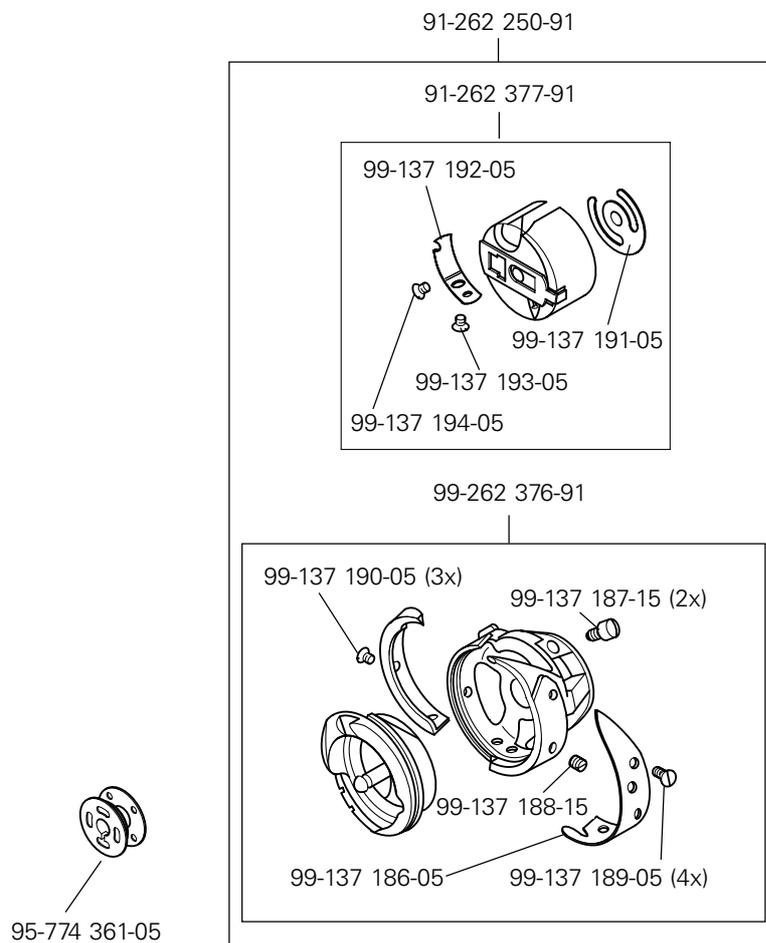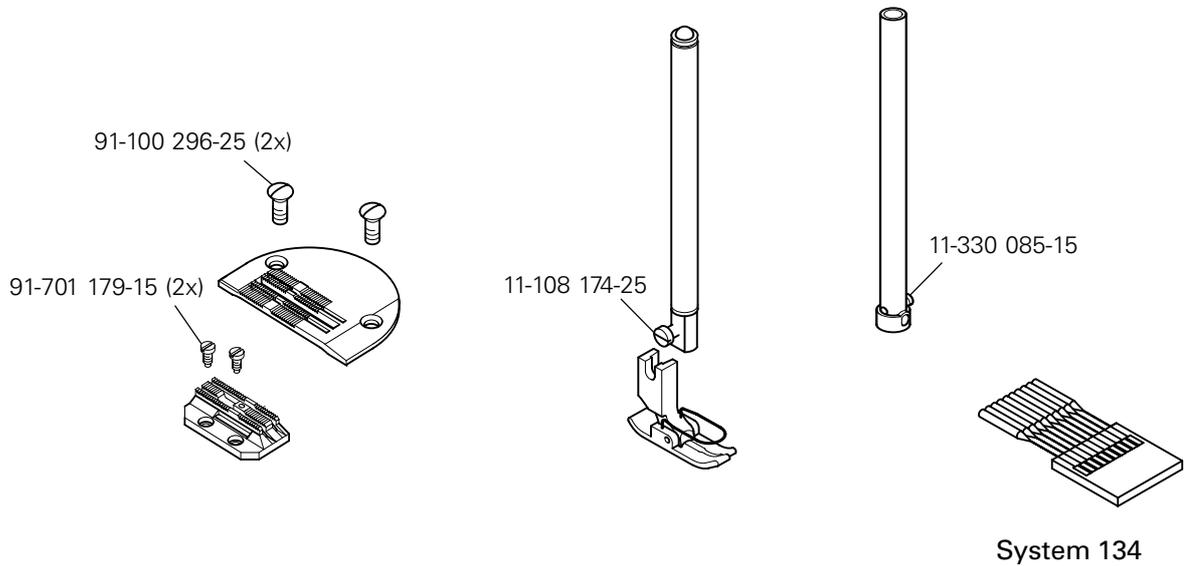



Wearing parts

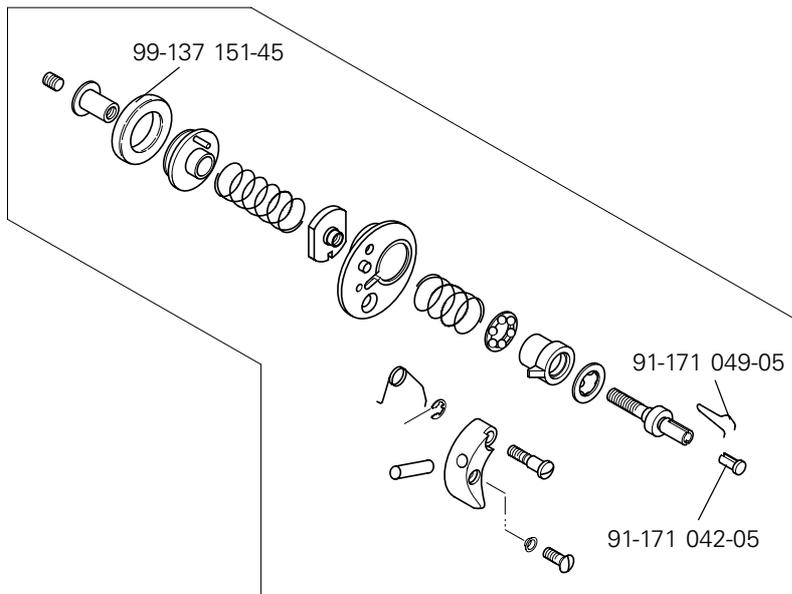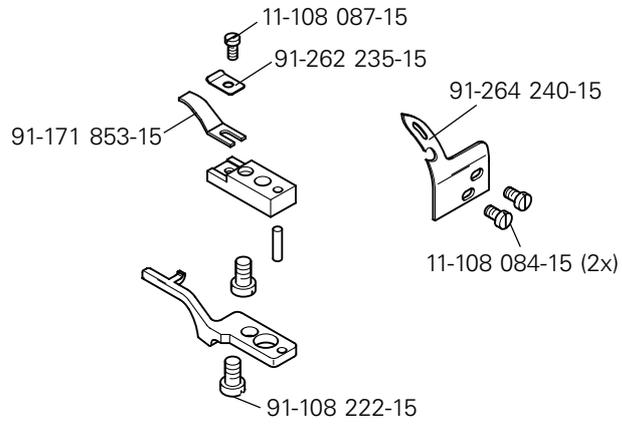


15 Circuit diagrams**Reference list for circuit diagrams**


A1	Controller Quick P322MS
A2	Control panel BDF S2
A3	Incremental transmitter (included in M1)
A4	Keyboard
A13	Bobbin thread monitor
A14	Sewing head identification
S1	Set value transmitter
S10	Single stitch (included in A4)
S11	Backtacking by hand (backtack) (included in A4)
S12	Needle position (included in A4)
S13	Knee switch (feed reverse)
S14	Start inhibitor
S15	2 nd knee switch
H1	Sewing lamp
H10	Bobbin thread alarm (included in A4)
Q1	Main switch
M1	Sewing motor
M10	Stepping motor (feed regulator)
B10	Hybrid light barrier (included in M10)
Y2	900 (thread trimmer)
Y3	W1 (thread wiper)
Y4	Automatic presser foot lift
Y5	Thread tension control
X43	Bobbin thread monitor

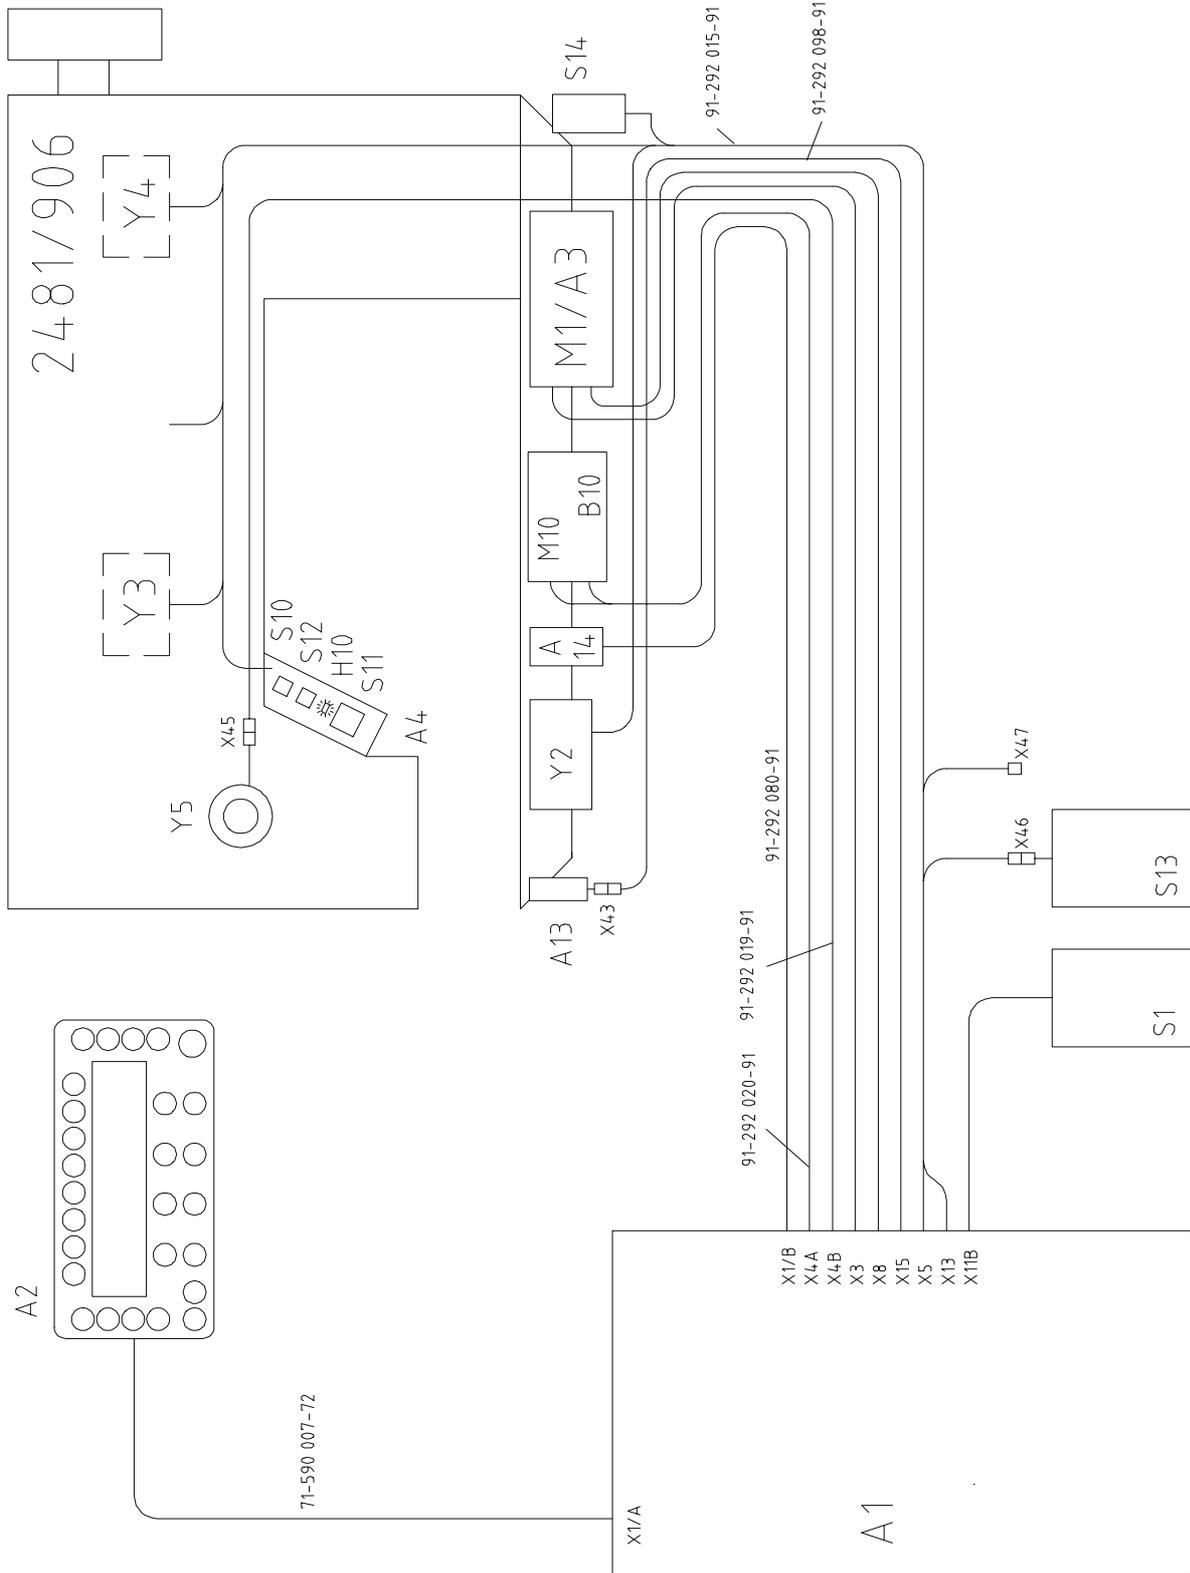

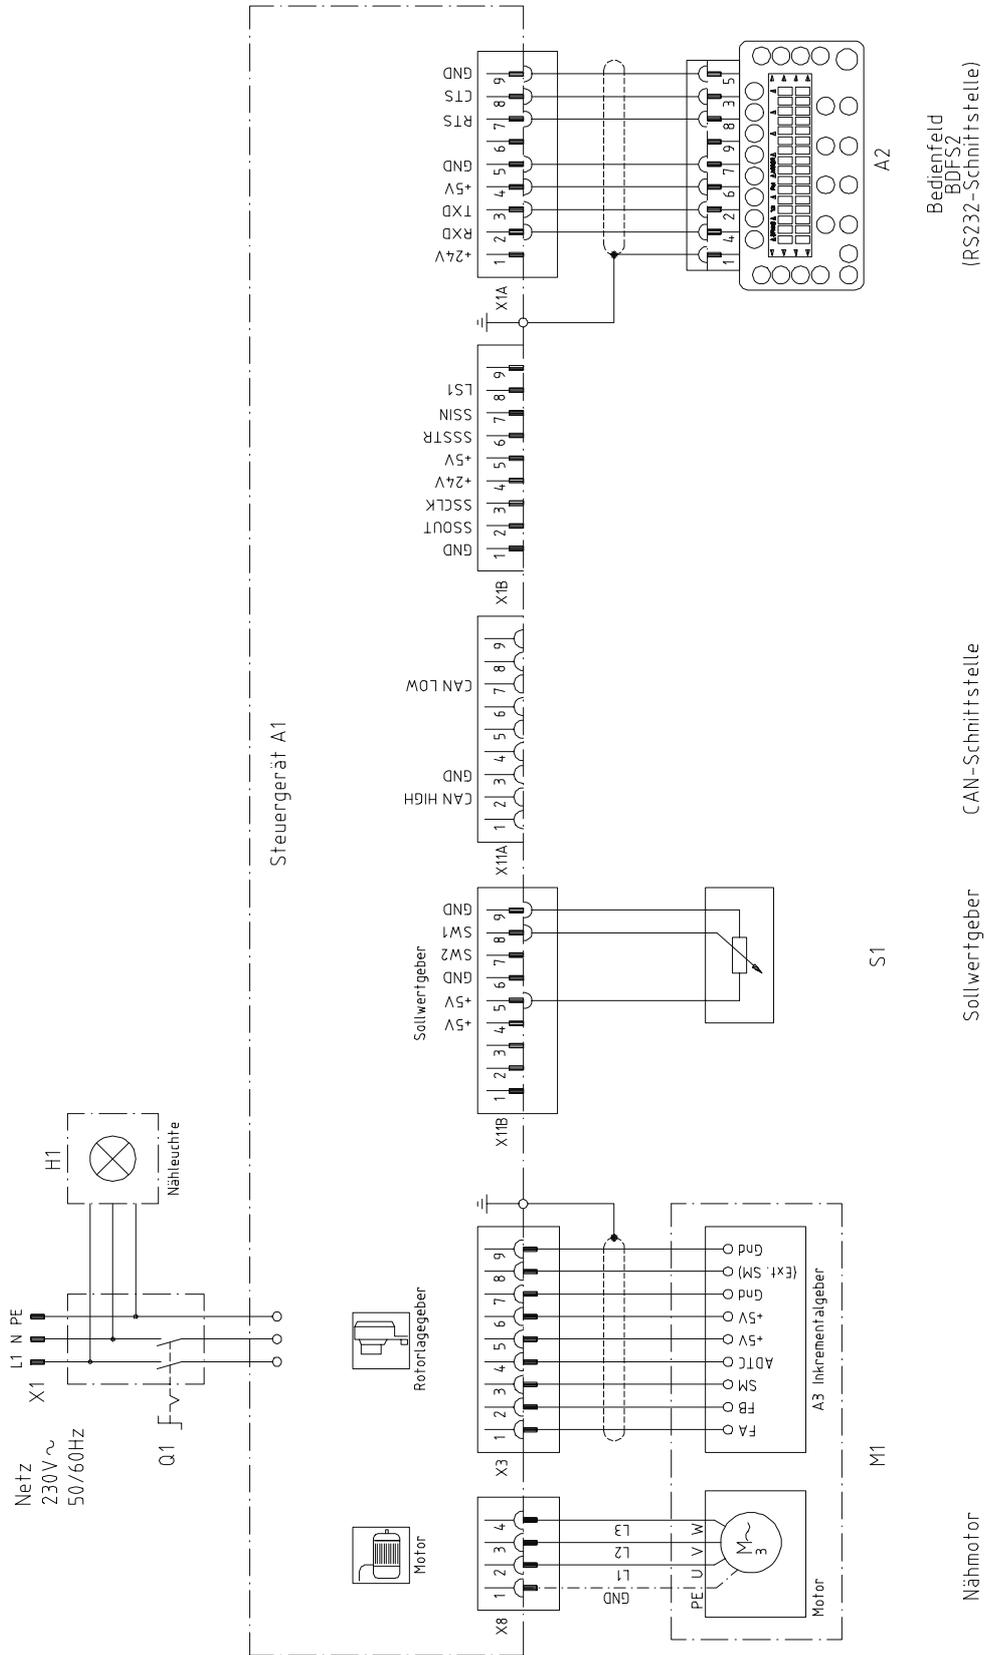

- 1 Nähmotor
- 2 A3 Inkrementalgeber
- 3 Sollwertgeber
- 4 CAN-Schnittstelle
- 5 Bedienfeld BDFS2 (RS232-Schnittstelle)
- 6 A2

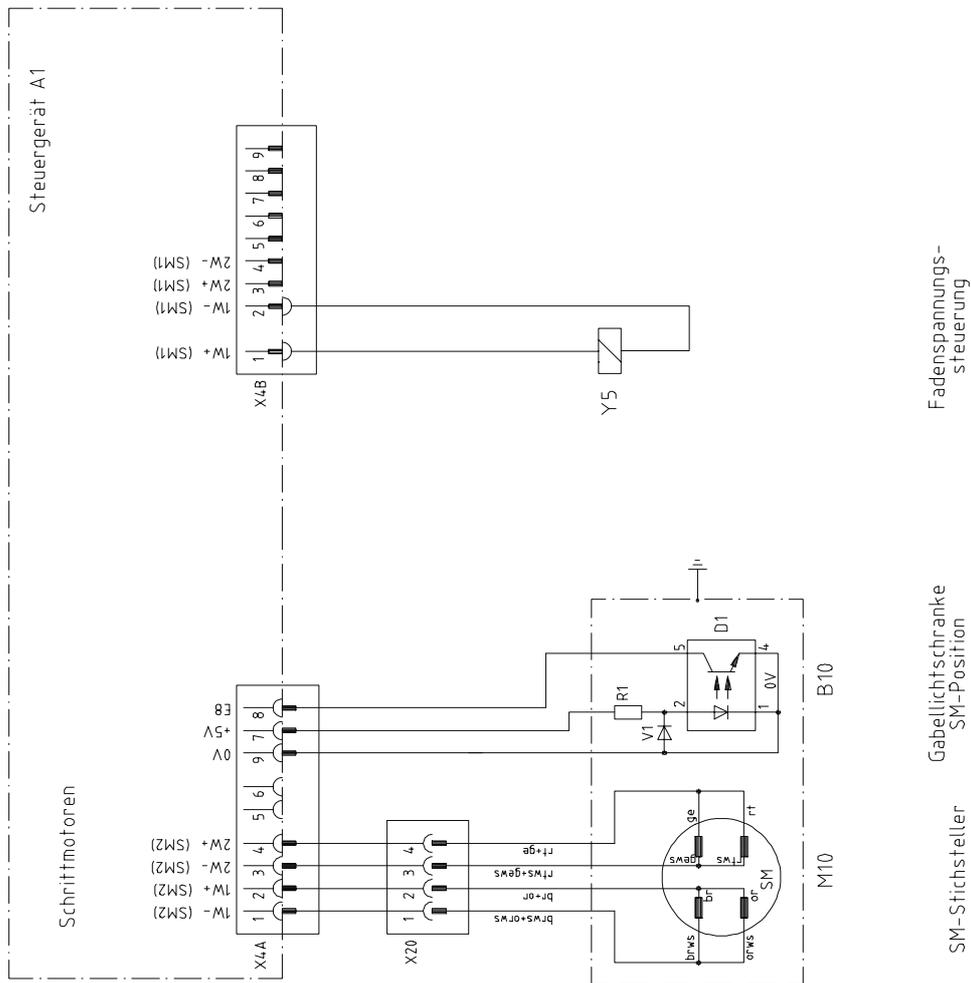

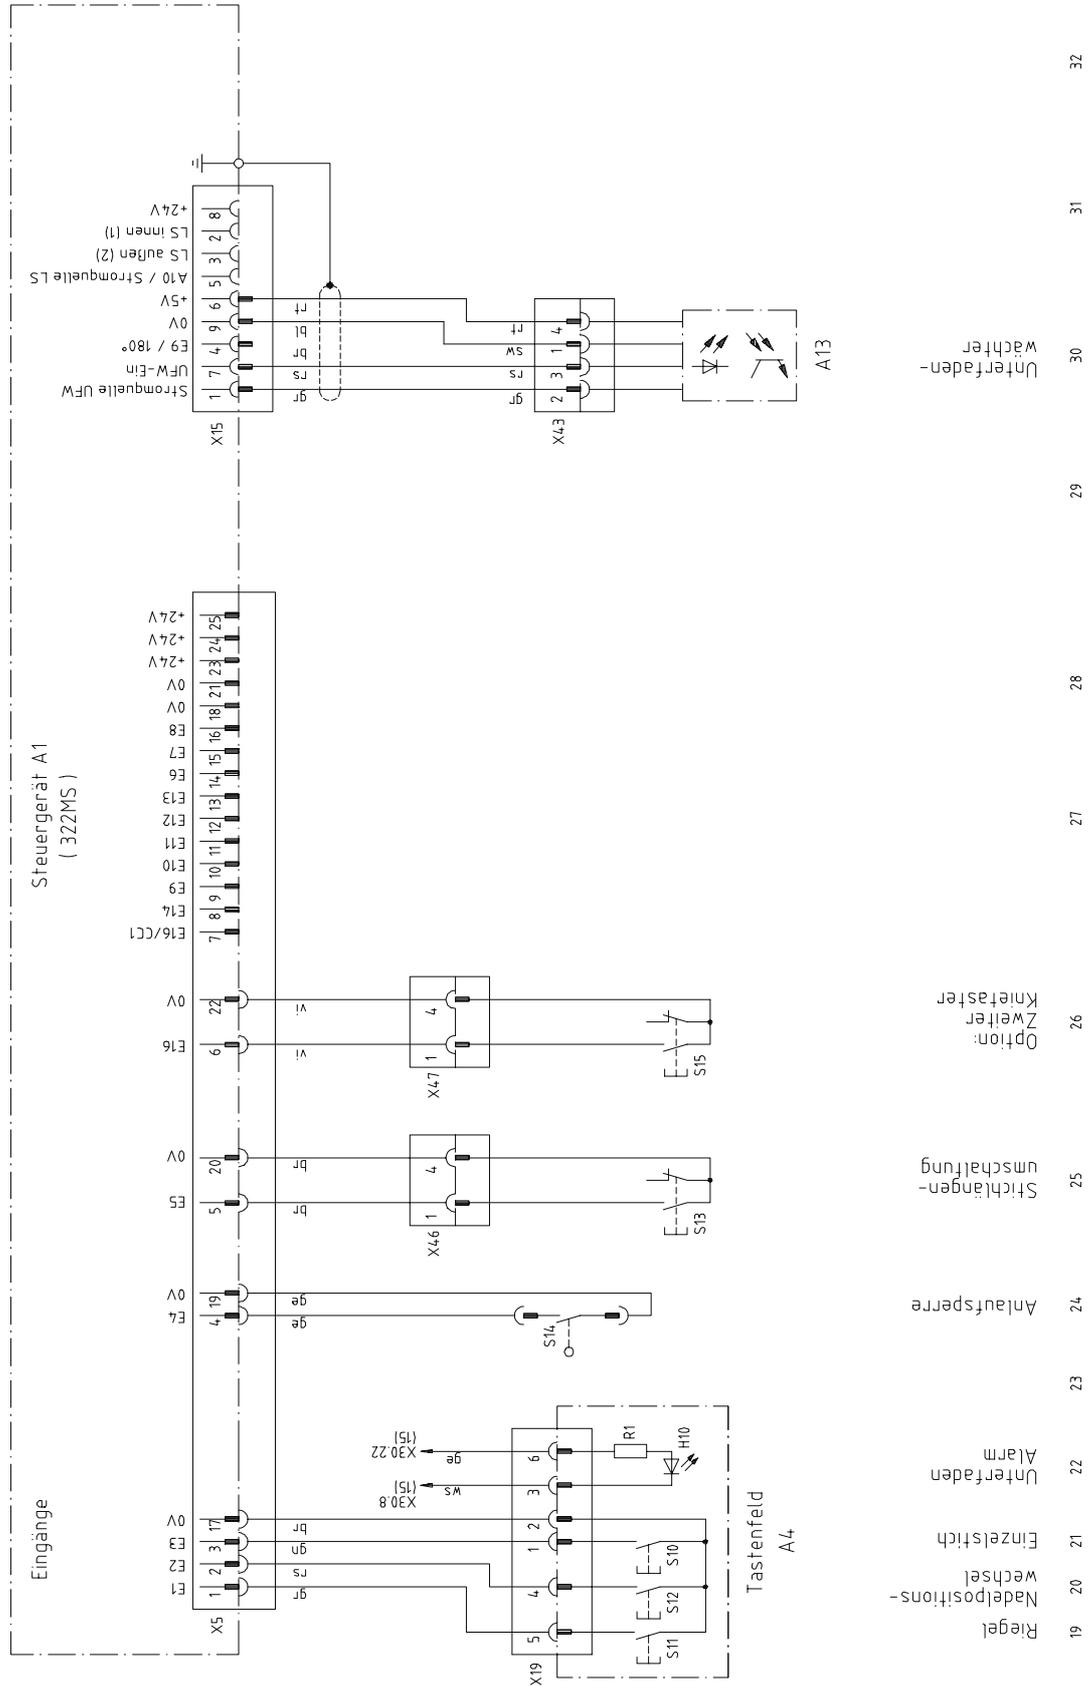



Europäische Union
Wachstum durch Innovation – EFRE



PFAFF Industriesysteme und Maschinen AG

Hans-Geiger-Str. 12 - IG Nord
D-67661 Kaiserslautern

Telefon: +49-6301 3205 - 0
Telefax: +49-6301 3205 - 1386
E-mail: info@pfaff-industrial.com

2481-980/30
plusline

INSTRUCTION MANUAL

This instruction manual applies to machines from the following serial numbers **2 216 531** and software version **0307/001** onwards:



This Instruction Manual is valid for all models and subclasses listed in the chapter "**Specifications**".

The reprinting, copying or translation of PFAFF Instruction Manuals, whether in whole or in part, is only permitted with our previous authorization and with written reference to the source.

**PFAFF Industriesysteme
und Maschinen AG**

Hans-Geiger-Str. 12 - IG Nord
D-67661 Kaiserslautern

	Contents	Chapter – Page
1	Safety	1 - 1
1.01	Directives	1 - 1
1.02	General notes on safety	1 - 1
1.03	Safety symbols	1 - 2
1.04	Important points for the user	1 - 2
1.05	Operating and specialist personnel	1 - 3
1.05.01	Operating personnel	1 - 3
1.05.02	Specialist personnel	1 - 3
1.06	Danger	1 - 4
2	Proper use	2 - 1
3	Specifications	3 - 1
3.01	PFAFF 2481-980/30	3 - 1
3.02	Work aids for the various models	3 - 2
4	Disposal of Machine	4 - 1
5	Transport, packaging and storage	5 - 1
5.01	Transportation to customer's premises	5 - 1
5.02	Transport within the customer's premises	5 - 1
5.03	Disposal of the packaging	5 - 1
5.04	Storage	5 - 1
6	Explanation of the symbols	6 - 1
7	Control elements	7 - 1
7.01	On/off switch	7 - 1
7.02	Keys on machine head	7 - 1
7.03	Pedal	7 - 2
7.04	Lever for lifting the presser foot	7 - 2
7.05	Knee switch	7 - 3
7.06	Control panel	7 - 4
8	Mounting and commissioning the machine	8 - 1
8.01	Mounting	8 - 1
8.01.01	Adjusting the table-top height	8 - 1
8.01.02	Connecting the plug-in connections and earth cables	8 - 2
8.01.03	Mounting the spool holder	8 - 3
8.01.04	Mounting the start inhibitor	8 - 3
8.02	Commissioning	8 - 4
8.03	Switching the machine on/off	8 - 4
8.04	Checking the function of the start inhibitor	8 - 4
8.05	Table top cutout	8 - 5

Contents

Contents		Chapter – Page
9	Preparation	9 - 1
9.01	Inserting the needle	9 - 1
9.02	Winding the bobbin thread, adjusting the thread tension	9 - 2
9.03	Removing/Inserting the bobbin case	9 - 3
9.04	Inserting the bobbin case / Adjusting the bobbin thread tension	9 - 3
9.05	Threading the needle thread / Adjusting the needle thread tension	9 - 4
9.06	Entering the stitch length	9 - 5
9.07	Entering the edge guide position	9 - 6
9.08	Entering the start and end backtacks	9 - 7
9.09	Entering the number of compensating stitches	9 - 8
9.10	Setting the number of remaining stitches for the bobbin thread control	9 - 9
9.11	Selecting the seam program	9 - 11
9.12	Adjusting the control panel	9 - 12
10	Sewing	10 - 1
10.01	Manual sewing	10 - 1
10.02	Programmed sewing	10 - 3
10.03	Error messages	10 - 4
11	Input	11 - 1
11.01	Input mode	11 - 1
11.02	Entering the seam program	11 - 2
11.02.01	Selecting the seam types	11 - 4
11.02.02	Entering the seam depth	11 - 6
11.03	Example of how to enter a seam program	11 - 8
12	Care and Maintenance	12 - 1
12.01	Cleaning the machine	12 - 1
12.02	Topping up the oil tank	12 - 2
13	Adjustment	13 - 1
13.01	Notes on adjustment	13 - 1
13.02	Tools, gauges and other accessories for adjusting	13 - 1
13.03	Abbreviations	13 - 1
13.04	Control and adjustment aids	13 - 2
13.05	Adjusting the basic machine	13 - 3
13.05.01	Basic position of the machine drive unit	13 - 3
13.05.02	Preadjusting the needle height	13 - 4
13.05.03	Neutral position of the bottom feed dog	13 - 5
13.05.04	Zero position of the needle feed	13 - 6
13.05.05	Feeding motion of the bottom feed dog	13 - 7
13.05.06	Feeding motion of the needle feed	13 - 8
13.05.07	Lifting stroke of the bottom feed dog	13 - 9
13.05.08	Height of the bottom feed dog / Position in the needle plate cutout	13 - 10

	Contents	Chapter – Page
13.05.09	Needle in needle hole centre	13 - 11
13.05.10	Hook shaft bearing and toothed belt tension	13 - 12
13.05.11	Hook lubrication	13 - 13
13.05.12	Needle rise, hook-to-needle clearance, needle height and bobbin case position finger ..	13 - 14
13.05.13	Thread check spring and slack thread regulator	13 - 16
13.05.14	Presser foot clearance	13 - 17
13.05.15	Setting the zero point of the feed regulator	13 - 18
13.05.16	Stitch length adjustment forwards and in reverse	13 - 19
13.05.17	Bobbin winder	13 - 20
13.05.18	Mechanical limiting of the stitch length	13 - 21
13.05.19	Presser foot pressure	13 - 22
13.06	Adjusting the thread trimming device -900/24	13 - 23
13.06.01	Adjusting the solenoid / preliminary adjustment of the control cam	13 - 23
13.06.02	Lateral alignment of the thread catcher	13 - 24
13.06.03	Knife position	13 - 25
13.06.04	Front point of reversal of the thread catcher	13 - 26
13.06.05	Manual trimming check	13 - 27
13.06.06	Needle thread tension release	13 - 28
13.06.07	Readjusting the control cam	13 - 29
13.07	Aligning the light transmitter	13 - 30
13.08	Adjustment of the transmitted light sensors	13 - 31
13.09	Function control of the bobbin thread monitor	13 - 32
13.10	Adjusting the electric edge guide	13 - 33
13.11	Parameter settings	13 - 34
13.11.01	Example of a parameter input	13 - 34
13.11.02	Selecting the user level	13 - 35
13.11.03	List of parameters	13 - 36
13.12	Explanation of the error messages	13 - 42
13.13	Service menu	13 - 44
13.14	Internet update of the machine software	13 - 48
14	Wearing parts	14 - 1
15	Circuit diagrams	15 - 1

1 Safety

1.01 Directives

This machine is constructed in accordance with the European regulations contained in the conformity and manufacturer's declarations.

In addition to this Instruction Manual, also observe all generally accepted, statutory and other regulations and legal requirements and all valid environmental protection regulations!

The regionally valid regulations of the social insurance society for occupational accidents or other supervisory organizations are to be strictly adhered to!

1.02 General notes on safety

- This machine may only be operated by adequately trained operators and only after having completely read and understood the Instruction Manual!
- All Notes on Safety and Instruction Manuals of the motor manufacturer are to be read before operating the machine!
- The danger and safety instructions on the machine itself are to be followed!
- This machine may only be used for the purpose for which it is intended and may not be operated without its safety devices. All safety regulations relevant to its operation are to be adhered to.
- When exchanging sewing tools (e.g. needle, roller presser, needle plate and bobbin), when threading the machine, when leaving the machine unattended and during maintenance work, the machine is to be separated from the power supply by switching off the On/Off switch or by removing the plug from the mains!
- Everyday maintenance work is only to be carried out by appropriately trained personnel!
- Repairs and special maintenance work may only be carried out by qualified service staff or appropriately trained personnel!
- Work on electrical equipment may only be carried out by appropriately trained personnel!
- Work is not permitted on parts and equipment which are connected to the power supply! The only exceptions to this rule are found in the regulations EN 50110.
- Modifications and alterations to the machine may only be carried out under observance of all the relevant safety regulations!

- Only spare parts which have been approved by us are to be used for repairs! We expressly point out that any replacement parts or accessories which are not supplied by us have not been tested and approved by us. The installation and/or use of any such products can lead to negative changes in the structural characteristics of the machine. We are not liable for any damage which may be caused by non-original parts.

1.03 Safety symbols



Danger!
Special points to observe.



Danger of injury to operating or technical staff!



Electric voltage!
Danger to operating or technical staff!



Caution

Do not operate without finger guard and safety devices. Before threading, changing bobbin and needle, cleaning etc. **switch off main switch.**

1.04 Important points for the user

- This Instruction Manual is an integral part of the machine and must be available to the operating personnel at all times.
- The Instruction Manual must be read before operating the machine for the first time.
- The operating and specialist personnel is to be instructed as to the safety equipment of the machine and regarding safe work methods.
- It is the duty of the user to only operate the machine in perfect running order.
- It is the obligation of the user to ensure that none of the safety mechanisms are removed or deactivated.
- It is the obligation of the user to ensure that only authorized persons operate and work on the machine.

Further information can be obtained from your PFAFF agent.

1.05 Operating and specialist personnel

1.05.01 Operating personnel

Operating personnel are persons responsible for the equipping, operating and cleaning of the machine as well as for taking care of problems arising in the sewing area.

The operating personnel is required to observe the following points and must:

- always observe the Notes on Safety in the Instruction Manual!
- never use any working methods which could adversely affect the safety of the machine!
- not wear loose-fitting clothing or jewelry such as chains or rings!
- also ensure that only authorized persons have access to the potentially dangerous area around the machine!
- always immediately report to the person responsible any changes in the machine which may limit its safety!

1.05.02 Specialist personnel

Specialist personnel are persons with a specialist education in the fields of electrics, electronics and mechanics. They are responsible for the lubrication, maintenance, repair and adjustment of the machine.

The specialist personnel is obliged to observe the following points and must:

- always observe the Notes on Safety in the Instruction Manual!
- switch off the On/Off switch before carrying out adjustments or repairs, and ensure that it cannot be switched on again unintentionally!
- wait until the luminous diode on the control box is no longer blinking or on before beginning adjustment or repair work.
- never work on parts which are still connected to the power supply! Exceptions are explained in the regulations EN 50110.
- replace the protective coverings and close the electrical control box after all repairs or maintenance work!

1.06

Danger



A working area of **1 meter** is to be kept free both in front of and behind the machine while it is in operation so that it is always easily accessible.



Never reach into the sewing area while sewing!
Danger of injury by the needle!



Never leave objects on the table while adjusting the machine settings! Objects can become trapped or be slung away! Danger of injury!

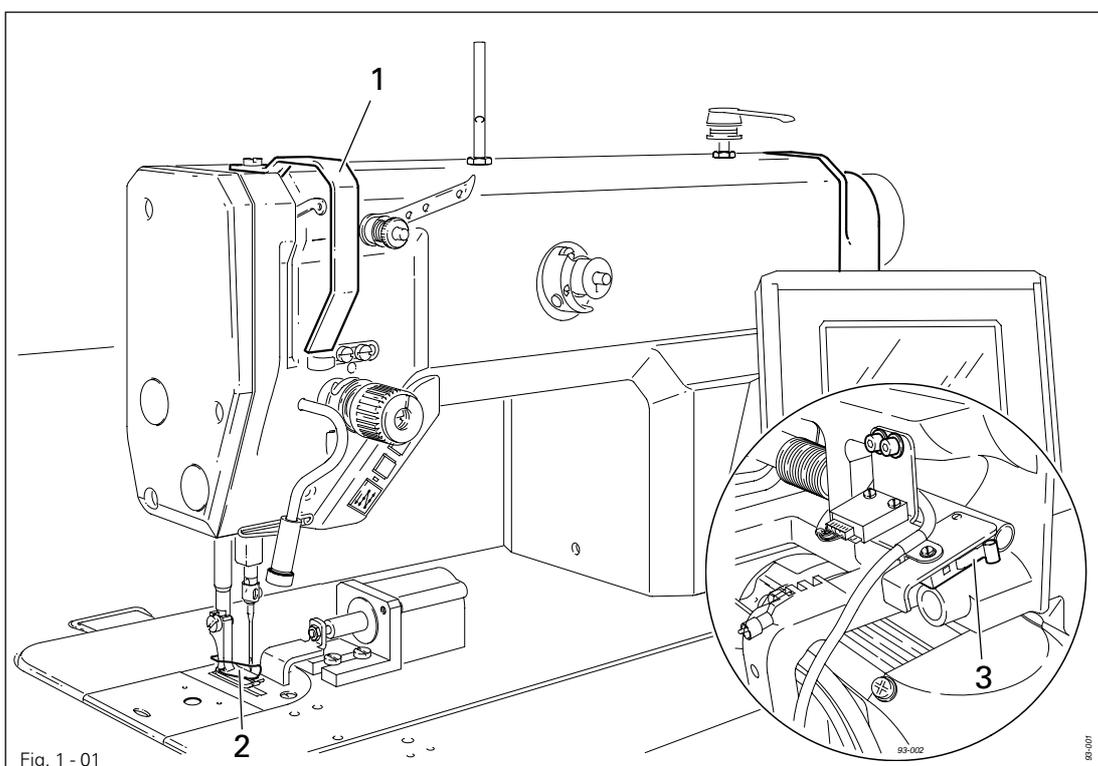


Fig. 1 - 01



Do not operate the machine without its take-up lever guard **1!**
Danger of injury due to the motion of the take-up lever!



Do not operate the machine without the finger guard **2!**
Danger of injury by the needle!



Do not start the machine without start inhibitor **3!**
Danger of injury if the machine is started accidentally!

2

Proper use

The **PFAFF 2481-980/30** is an ultra high-speed, single-needle sewing machine with compound feed, a seam-program controlled edge guide and edge sensor.

The machines are used in industry for sewing lockstitch seams.



Any and all uses of this machine which have not been approved of by the manufacturer are considered to be inappropriate! The manufacturer cannot be held liable for any damage caused by the inappropriate use of the machine! The appropriate use of the machine includes the observance of all operational, adjustment, maintenance and repair measures required by the manufacturer!

3 Specifications *

3.01 PFAFF 2481-980/30

Stitch type: 301 (lockstitch)

Needle system: 134 KK

Needle size in 1/100 mm:

Model A: 60 - 70

Model B: 80 - 100

Handwheel eff. dia.: 65 mm

Presser foot clearance: 9 - 13 mm

Clearance width: 260 mm

Clearance height: 125 mm

Bed plate dimensions: 476 x 177 mm

Sewing head dimensions:

Length: approx. 550 mm

Width: approx. 180 mm

Height (above table): approx. 300 mm

Max. stitch length: 3.5 mm

Max. speed:

with 30 mm needle bar stroke: 4500 s.p.m. ▲

with 36 mm needle bar stroke: 3800 s.p.m. ▲

Needle bar stroke: 30 or 36 mm

Connection data:

Operating voltage: 230 V ± 10%, 50/60 Hz

Max. power consumption: 400 VA

Fuse protection: 1 x 16 A, inert

Leakage current ≤ 5 mA♦

Ambient temperature

85% rel. humidity (condensation not permitted): 5 - 40° C

Noise data:

Noise emission level at workplace with a sewing speed of 3200 spm: $L_{pA} < 81$ dB(A) ■

(Noise measurement in accordance with DIN 45 635-48-A-1, ISO 11204, ISO 3744, ISO 4871)

Net weight of sewing head: approx. 30 kg

Gross weight of sewing head: approx. 38 kg

* Subject to alterations

♦ Due to the use of network filters there is a nominal leakage current of ≤ 5 mA.

▲ Depending on the stitch length, the max. speed is reduced automatically within the max. preset value.

■ $K_{pA} = 2.5$ dB

Specifications

3.02 Work aids for the various models

Model A: for sewing with fine materials

Model B: for sewing medium-weight materials

Work aids:

Sub-class -909/04 Thread wiping device

4 Disposal of machine

- The proper disposal of the machine is the responsibility of the customer.
- The materials used in the machines are steel, aluminium, brass and various plastics. The electrical equipment consists of plastics and copper.
- The machine is to be disposed of in accordance with the locally valid environmental protection regulations. If necessary, a specialist is to be commissioned.



Special care is to be taken that parts soiled with lubricants are separately disposed of in accordance with the locally valid pollution control regulations!

Transport, packaging and storage

5 **Transport, packaging and storage**

5.01 **Transportation to customer's premises**

The machines are delivered completely packed.

5.02 **Transport within the customer's premises**

The manufacturer bears no liability for transport within the customer's premises or to the individual locations of use. Make sure that the machines are always transported upright.

5.03 **Disposal of the packaging**

The packaging of these machines consists of paper, cardboard and VCE fiber. The proper disposal of the packaging is the responsibility of the customer.

5.04 **Storage**

The machine can be stored for up to 6 months if not in use. During this time it should be protected from dust and moisture.

For longer storage the individual parts of the machine, especially the moving parts, must be protected from corrosion, e.g. by a film of oil.

6 Explanation of the symbols

In the following section of this Instruction Manual, certain tasks or important pieces of information are accentuated by symbols.

The symbols used have the following meanings:



Note, information



Cleaning, care




Lubrication, greasing



Servicing, repairing, adjustment, maintenance
(only to be carried out by specialist personnel)

7 Control elements


7.01 On/off switch

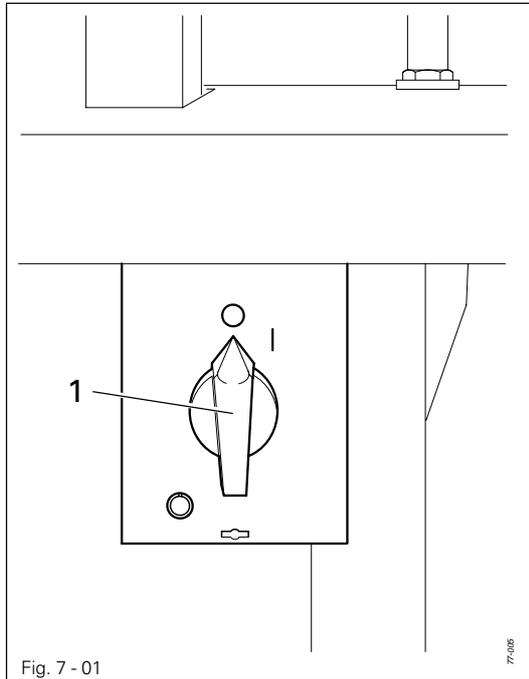

Before switching on the machine, raise the take-up lever as far as possible.

- The machine can be switched on or off by turning the on/off switch 1.

7.02 Keys on machine head

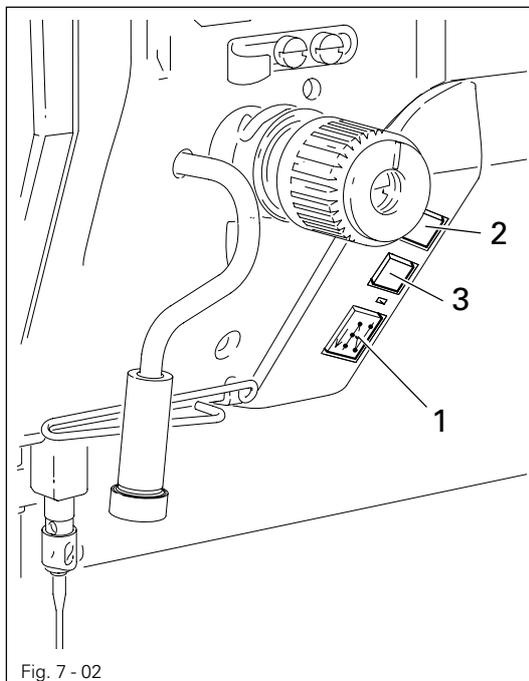


- By operating the respective keys, the following functions are carried out:

Key 1: Reverse sewing

Key 2: Raise the needle, without thread trimming


Key 3: Carry out a single stitch

7.03 Pedal

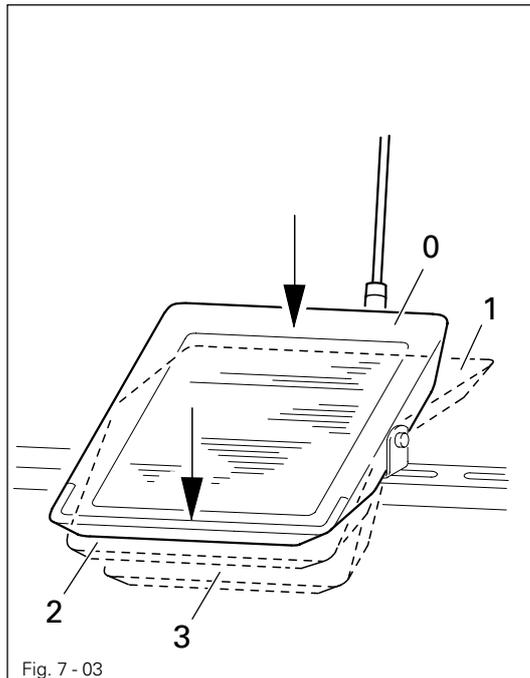

- 0 = Neutral position
- 1 = Sewing
- 2 = Raise presser foot
- 3 = Cut thread / reset bobbin thread monitor or bobbin rest thread count function

7.04 Lever for lifting the presser foot

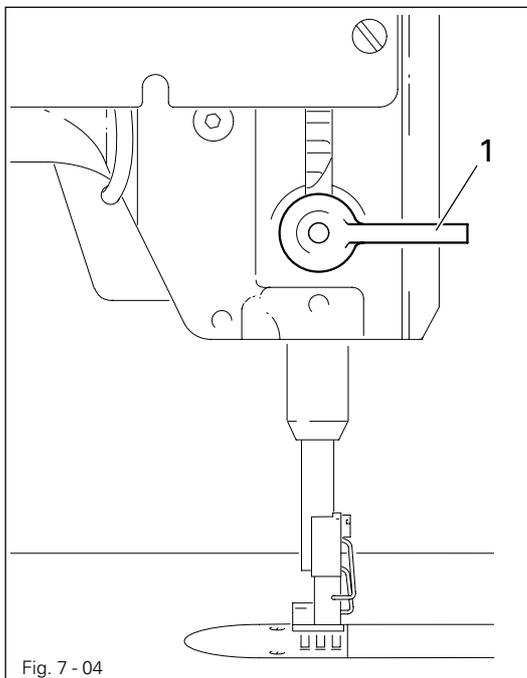

- The presser foot is raised by turning lever 1.

7.05

Knee switch

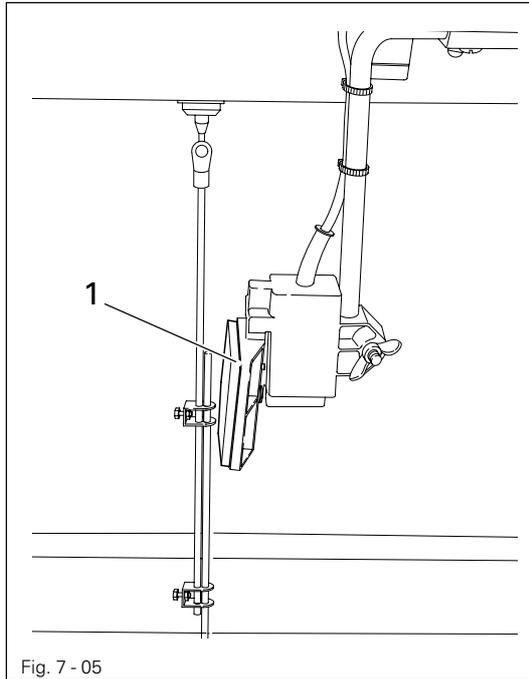


Fig. 7 - 05


- When the knee switch 1 is operated, one stitch is sewn with a reduced stitch length.



The value for the reduced stitch length is set with parameter "835", see **Chapter 13.11 Parameter settings**.

7.06

Control panel

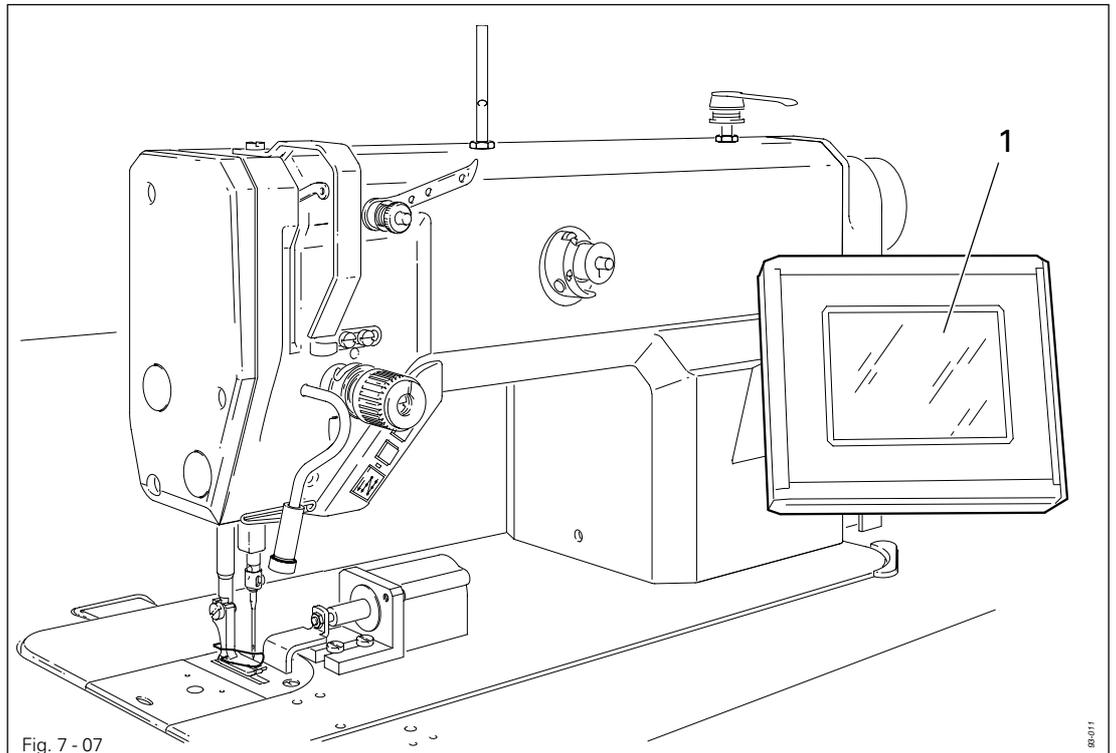

The current operating conditions are displayed on control panel 1. Operation takes place in a constant dialogue between the control unit and the operator. For this purpose, depending on the operating condition of the machine, different symbols and/or texts are displayed. If the symbols or texts are framed, these show functions which can be selected by pressing the appropriate position on the monitor. By pressing the corresponding function this is carried out or switched on or off immediately, or a further menu appears, e.g. for entering a value. Activated functions are shown with inverted symbols. Unframed symbols or texts are only used for display purposes and cannot be selected by pressing.

Description of the functions

Normal symbol = function switched off (inactive)



Inverted symbol = function switched on (active)

8 Mounting and commissioning the machine



The machine must only be mounted and commissioned by qualified personnel!
All relevant safety regulations are to be observed!



If the machine is delivered without a table, be sure that the frame and the table top which you intend to use can hold the weight of the machine and the motor. It must be ensured that the supporting structure is sufficiently sturdy, even during sewing operations.


8.01 Mounting

The necessary electricity supply must be available at the machine's location. Also, a stable and horizontal surface as well as adequate lighting are required at the location.




Depending on the type of table, the method of packaging used may require that the table top be lowered for transport. The following is a description of how to adjust the height of the table top.

8.01.01 Adjusting the table-top height

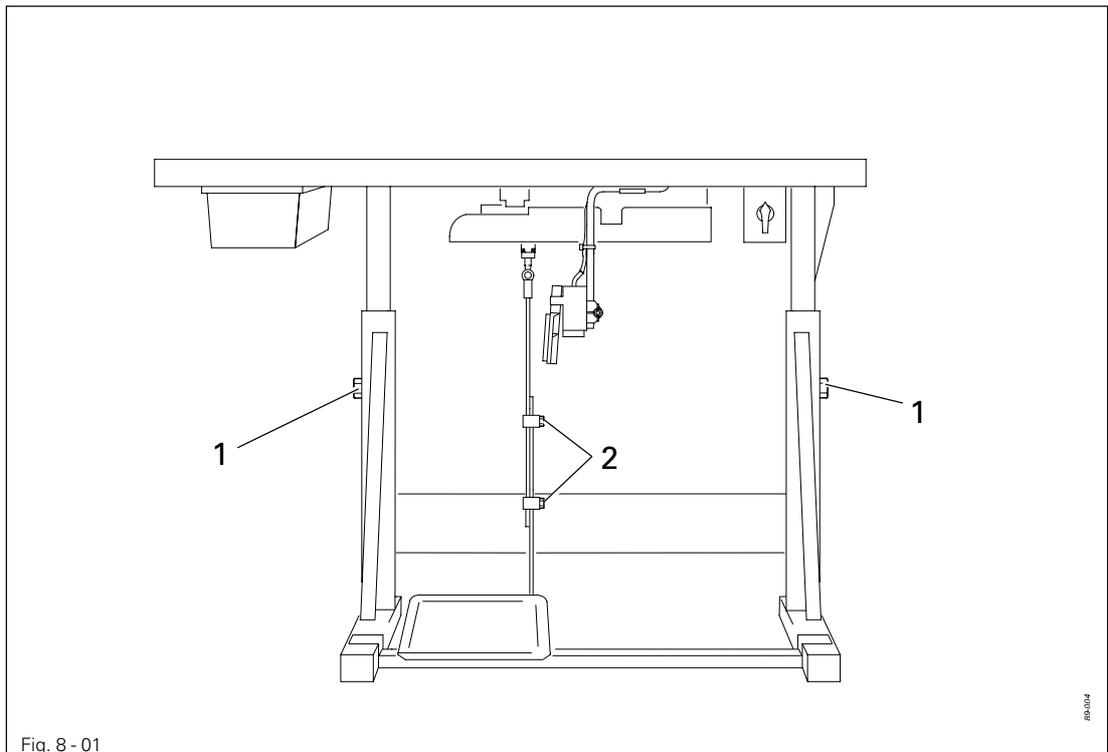

- Loosen screws 1 and 2 and set the desired table-top height
- Tighten screws 1 well.
- Adjust the pedal to the desired position and tighten screw 2.


8.01.02 Connecting the plug-in connections and earth cables

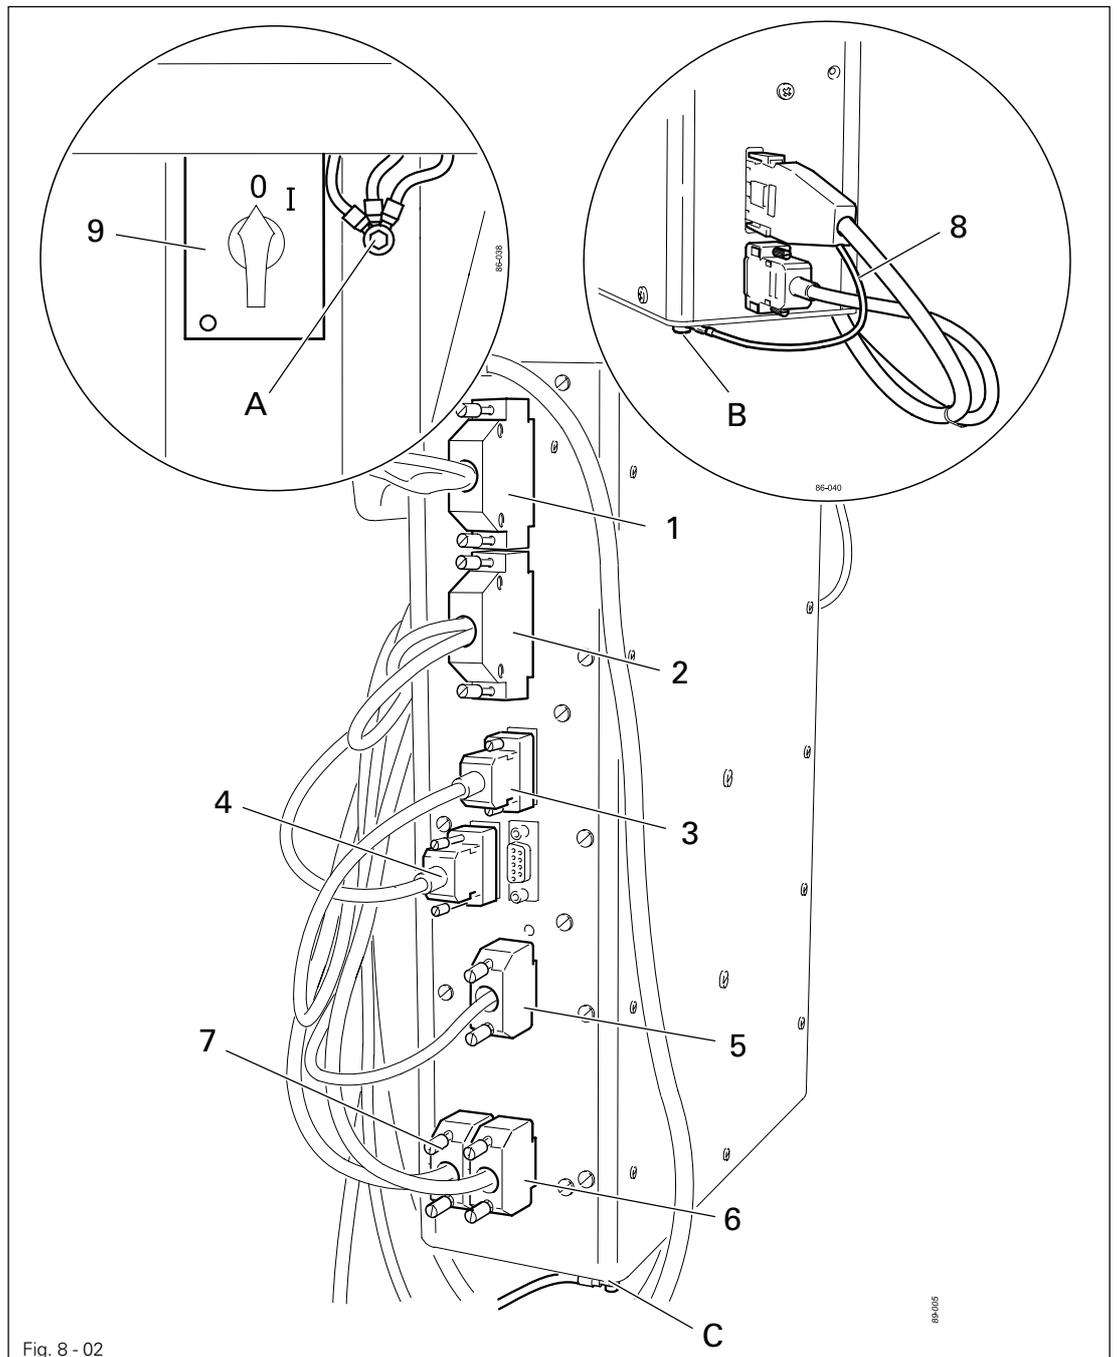

- Connect plugs 1- 7 as labelled to the control box.
- Screw the earth cable from the sewing head to earth point A.
- Fasten the earth cable 8 from the motor to earth point B.
- Connect earth point C to earth point A with an earth cable.
- Screw the earth cable from main switch 9 to earth point A.


Mounting and commissioning the machine

8.01.03 Mounting the spool holder

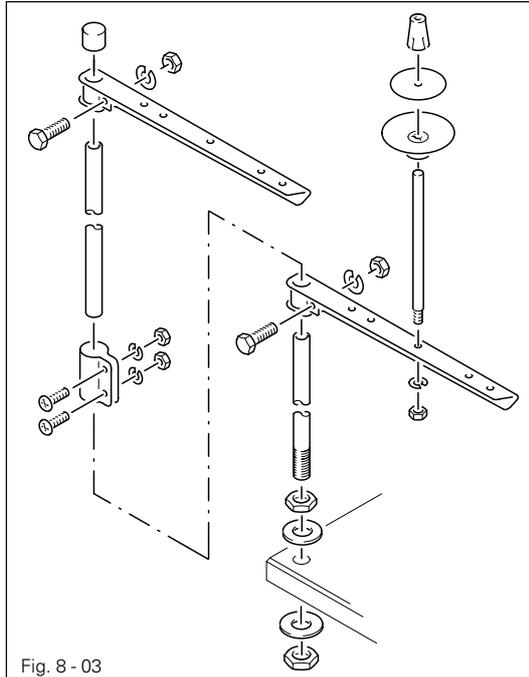


- Mount the spool holder as shown in Fig. 8-03.
- Insert the spool holder into the hole in the table top and fasten it with the nuts enclosed.

8.01.04 Mounting the start inhibitor

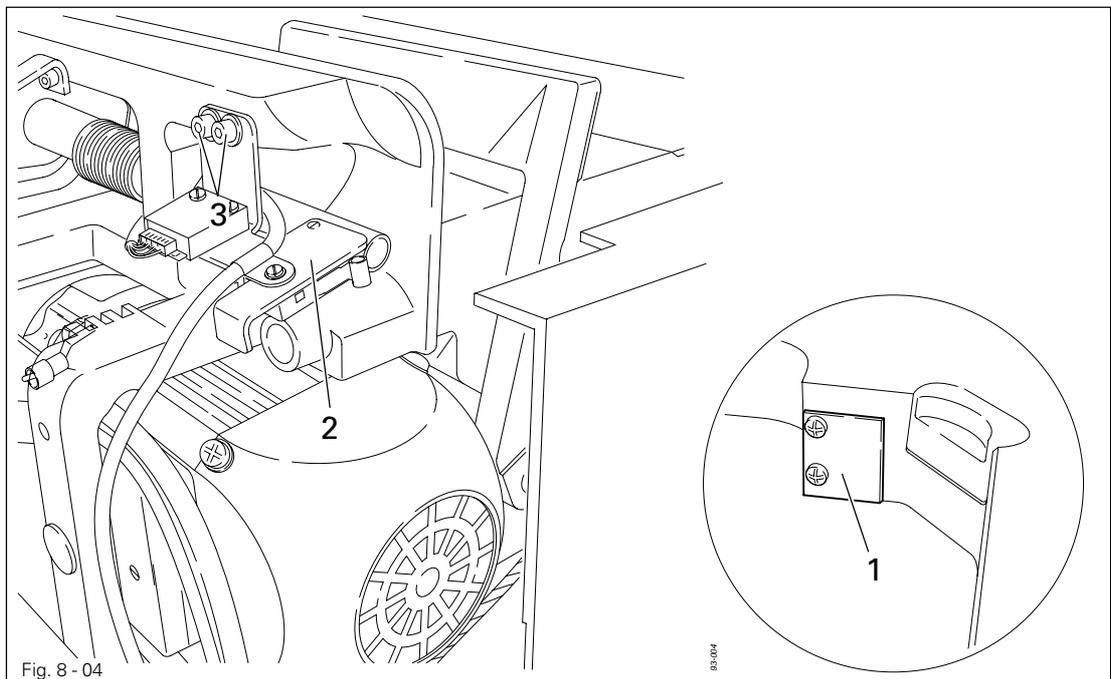

- For machines delivered without a table, the plate 1 from the accessories should be mounted, so that it is on a level with the bottom edge of the table top and with the left edge of the table top cutout.
- Set the machine into the table top.
- After loosening screws 3, set switch 2 so that it is activated when the sewing head is in an upright position.
- In this position tighten screws 3.

8.02 Commissioning

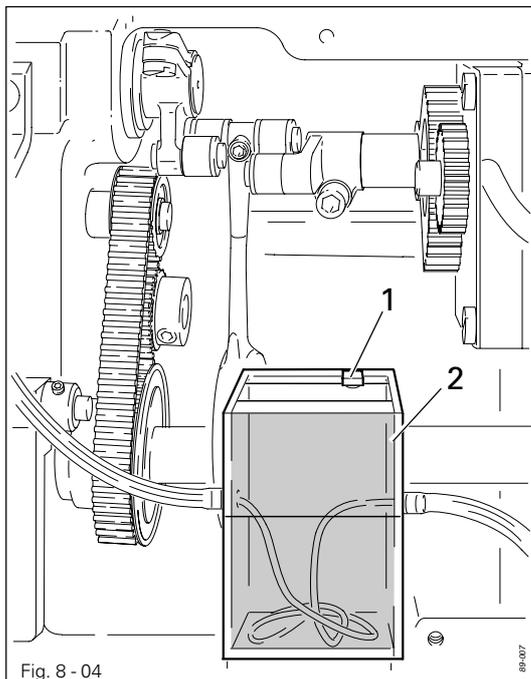

- Before commissioning the machine remove plug 1 from the oil tank 2.



Danger of damage to the machine!


Plug 1 serves as a safety device for transportation and should not be used during sewing operations.

- Examine the machine, in particular the electric cables for any damage.
- Clean the machine thoroughly, see also **Chapter 12 Care and Maintenance**.
- Have qualified personnel check whether the machine can be operated with the available voltage and whether it is connected properly. If there are any irregularities do not operate the machine under any circumstances.

8.03 Switching the machine on/off

- Switch the machine on or off (see **Chapter 7.01 On/off switch**).

8.04 Checking the function of the start inhibitor

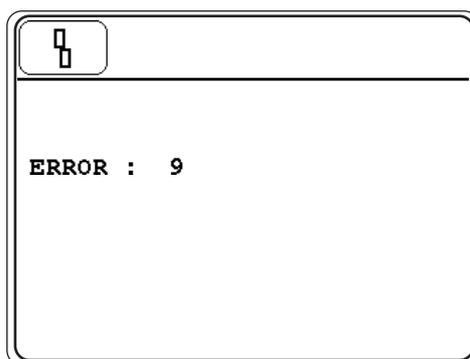

- Switch the machine on at the main switch and tilt it over. The error message "ERRO 9" must appear on the control panel.
- If the message does not appear, check the setting of the start inhibitor as described in **Chapter 8.01.04 Mounting the start inhibitor**.



- Set the sewing head upright and acknowledge the error message. The machine is ready for operation again.

9 Preparation




All regulations and instructions in this Instruction Manual are to be observed!
Special attention is to be paid to the safety regulations!



All preparation work is only to be carried out by appropriately trained personnel.
Before all preparation work, the machine is to be separated from the electricity supply by removing the plug from the mains or switching off the On/Off switch!

9.01 Inserting the needle

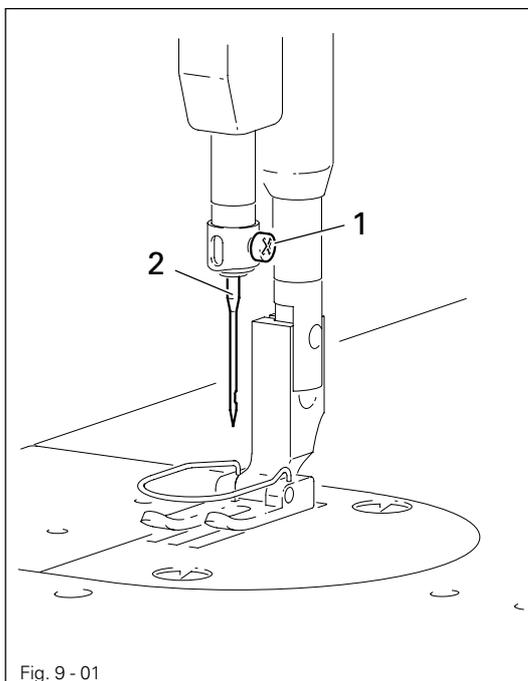

Switch off the machine!
Danger of injury due to unintentional starting of the machine!

- Raise needle bar.
- Loosen screw 1 and insert needle 2 until you feel it stop.
- Tighten screw 1.



Use only system 134 KK needles.



The selection of the correct needle depends on the model of the machine and the material and threads being sewn (see chapter 3 Specifications).

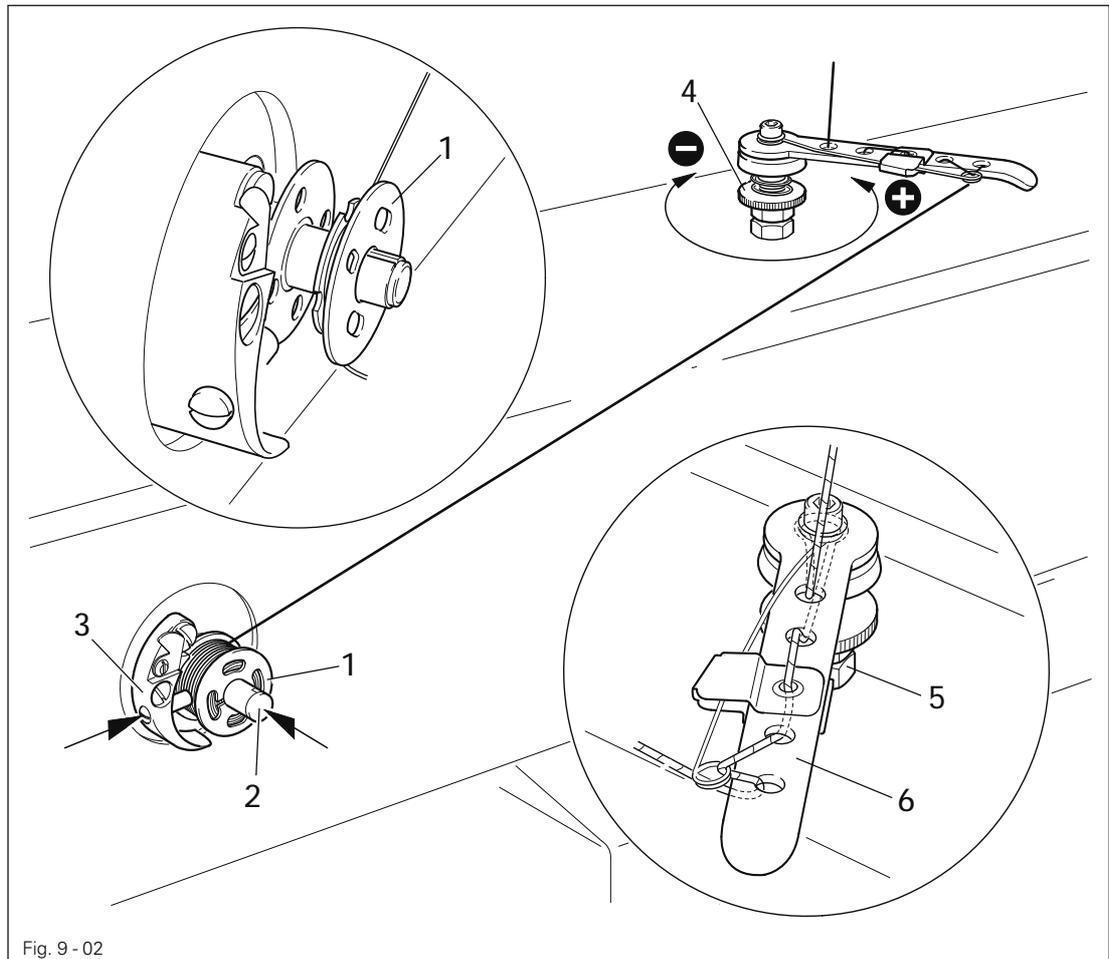


Fig. 9 - 02

- Fit empty bobbin 1 onto bobbin winder spindle 2 with the rest thread chamber on the outside.
- Thread the thread as shown in the above illustration and wind it round the bobbin 1 a few times in an anti-clockwise direction.
- Switch on the bobbin winder by pressing bobbin winder spindle 2 and lever 3 simultaneously.



The bobbin fills up during sewing.



If the machine is only run for bobbin winding (without sewing), a hook base must be fitted in the hook.


Otherwise a jammed thread may damage the hook!

- The tension of the thread on bobbin 1 can be adjusted with knurled screw 4.
- The bobbin winder stops automatically when bobbin 1 is full.

If the thread is wound unevenly:

- Loosen nut 5.
- Turn thread guide 6 accordingly.
- Tighten nut 5..

9.03 Removing/Inserting the bobbin case

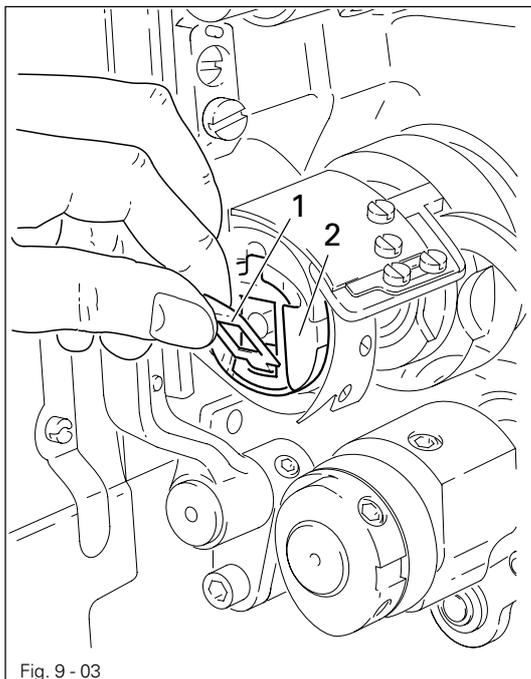

Switch off the machine!
 Danger of injury due to unintentional starting of the machine!

Removing the bobbin case:

- Tilt back the machine.
- Raise latch 1 and remove bobbin case 2.

Inserting the bobbin case:



- Press bobbin case 2 until you feel it snap into the bobbin case base.

Return the machine to its upright position using **both** hands!




Danger of injury by crushing between the machine and the table top!

9.04 Inserting the bobbin case / Adjusting the bobbin thread tension

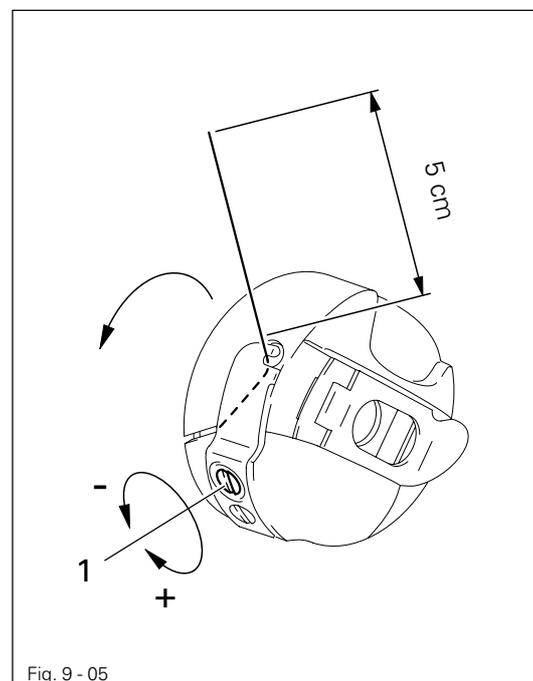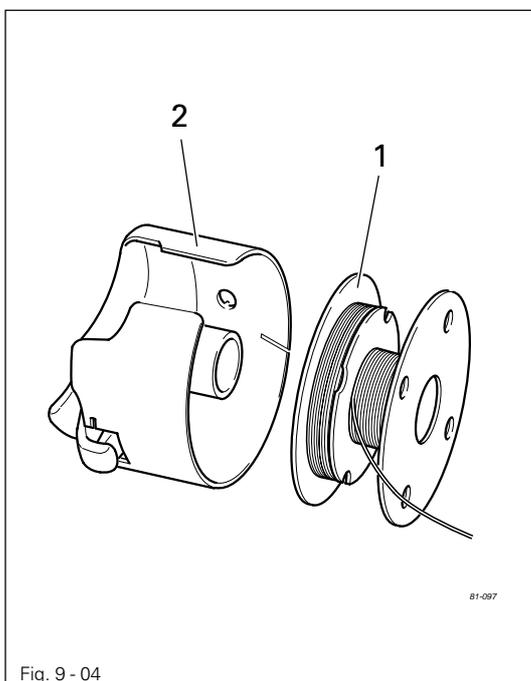

- Insert bobbin 1 into the bobbin case 2 as shown in Fig. 9-04.
- Place the bobbin in the bobbin case.
- Pass the thread through the slot under the spring as shown in Fig. 9-05. When the thread is drawn off, the bobbin must turn in the direction shown by the arrows.
- Adjust the thread tension by turning screw 1.

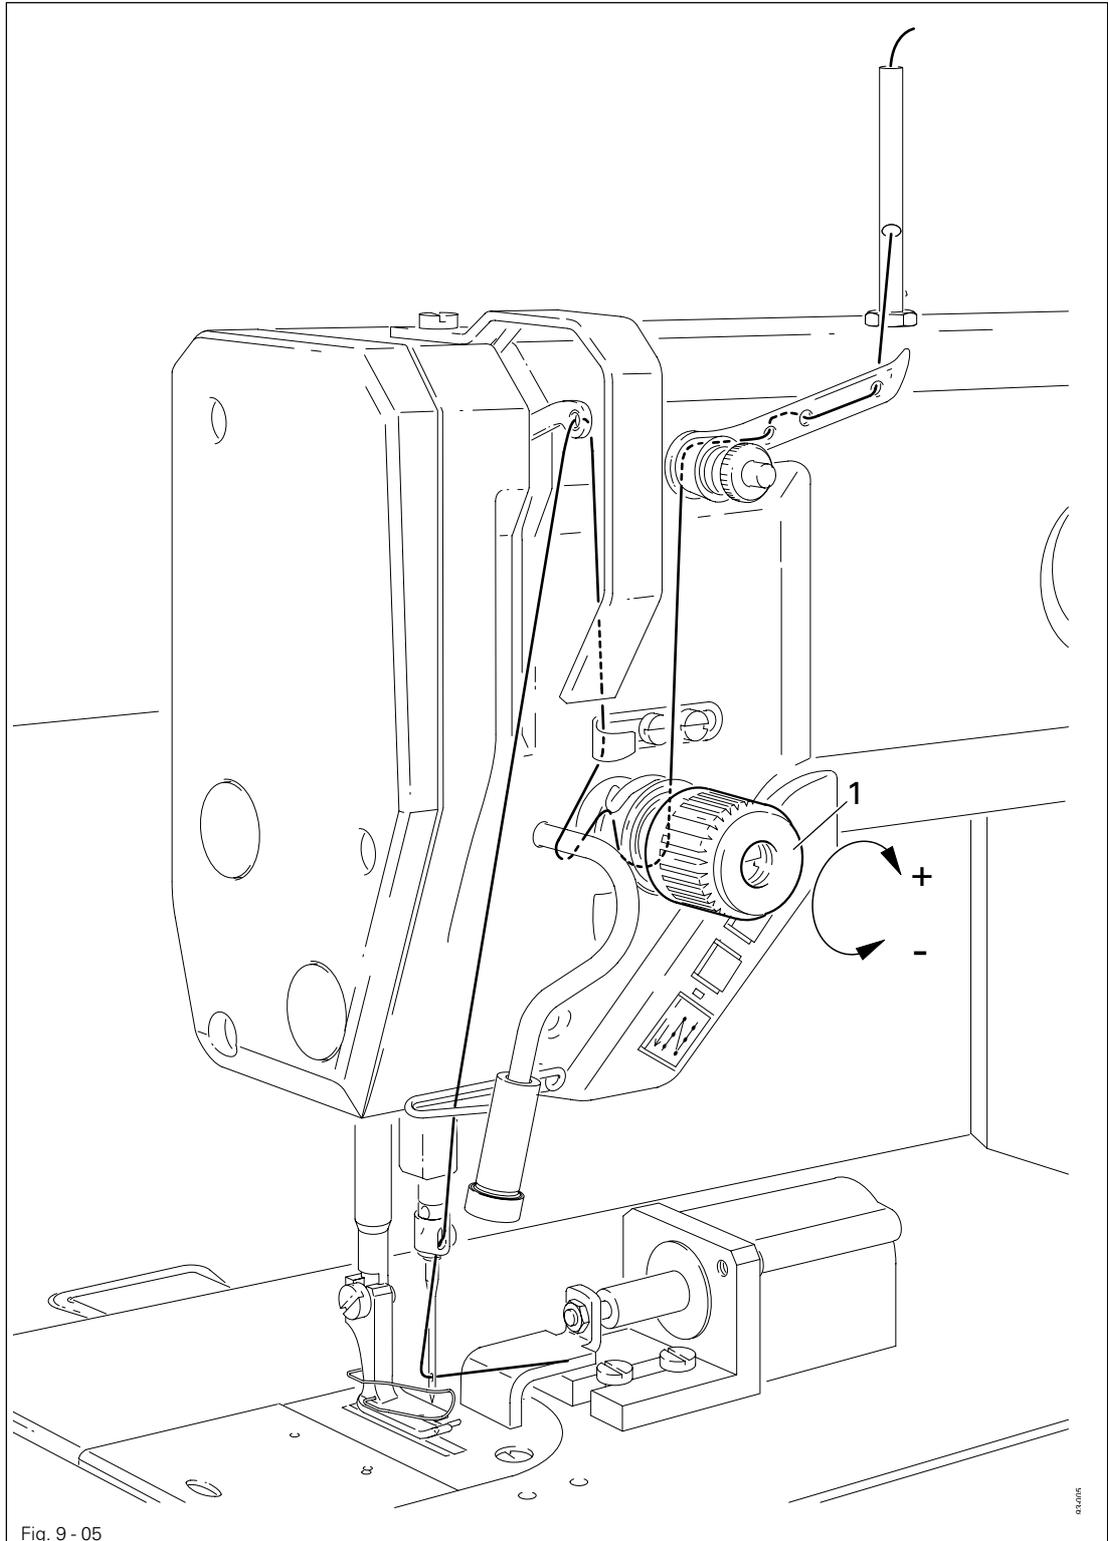

Switch off the machine!


Danger of injury due to unintentional starting of the machine!

- Thread the machine as shown in **Fig. 9-05**.
- Adjust the needle thread tension by turning disk 1.

9.06 Entering the stitch length


In the manual sewing mode the stitch length can be entered or altered directly.

- Switch on the machine.

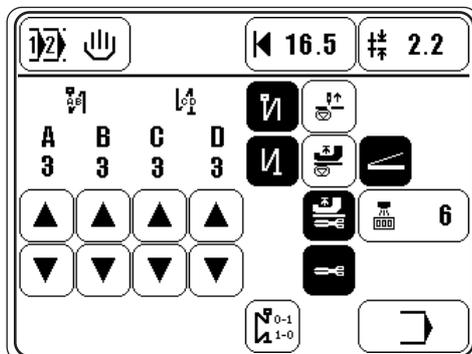


2.2

- Call up the stitch length input menu.

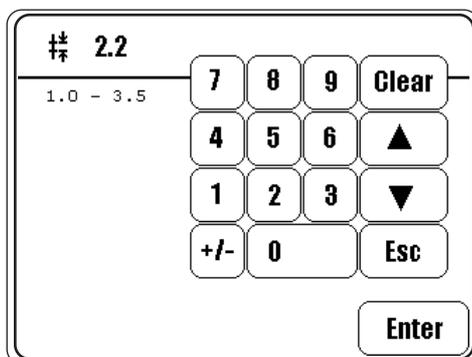

- Enter the stitch length with the number keys.

Or



- Alter the stitch length step by step.

Enter

- Conclude the input and take over the altered value.





The stitch length value is displayed in mm.

9.07 Entering the edge guide position

In the manual sewing mode the edge guide position can be entered or altered directly.

- Switch on the machine.

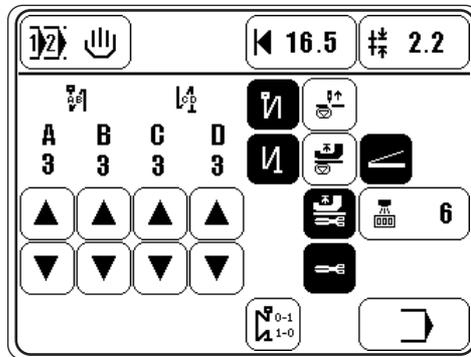


-  ● Call up the edge guide position input menu.



- Enter the edge guide position with the number keys.

Or



- Alter the edge guide position step by step.

-  ● Conclude the input and take over the altered value.




The edge guide position value is displayed in mm.

9.08 Entering the start and end backtacks

In the manual sewing mode the start and end backtacks can be entered or altered directly.

- Switch on the machine.

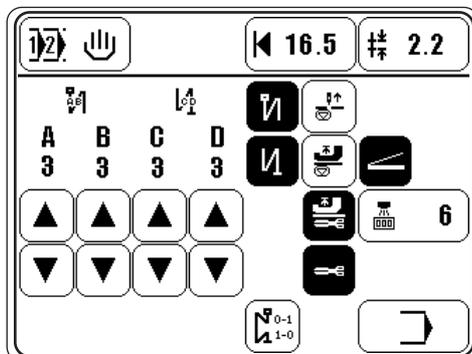

- Switch on **start backtack** and/or **end backtack** (the corresponding symbol is shown as an inverse symbol).

A
3



- Select the desired value for the number of forward stitches (A) of the start backtack.

B
3



- Select the desired value for the number of reverse stitches (B) of the start backtack.

C
3



- Select the desired value for the number of reverse stitches (C) of the end backtack.

D
3




- Select the desired value for the number of forward stitches (D) of the end backtack.


9.09 Entering the number of compensating stitches

In the manual sewing mode it is possible to enter the number of compensating stitches, which will be sewn after the recognition of the material edge till the machine stops.

- Switch on the machine.

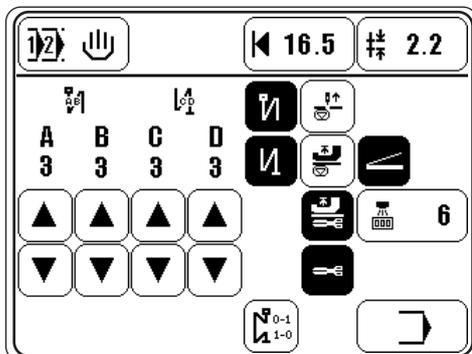


- Switch on the edge sensor and call up the compensating stitches input menu.

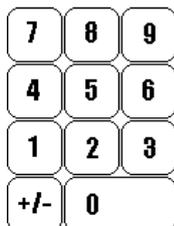

- Enter the number of compensating stitches with the number keys.

Or



- Enter the number of compensating stitches step by step.




- Conclude the input and take over the altered value.



9.10 Setting the number of remaining stitches for the bobbin thread control

When the bobbin thread monitor signals that the bobbin thread has been used up, there is still an amount of remaining thread on the bobbin.



- Switch on the machine.

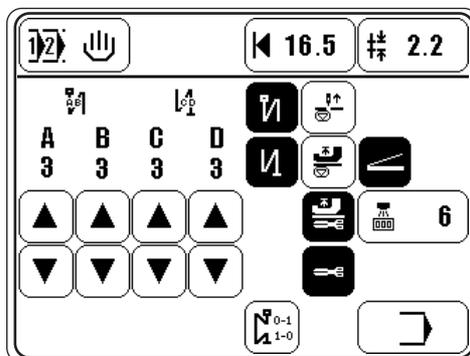

- Call up the input mode.

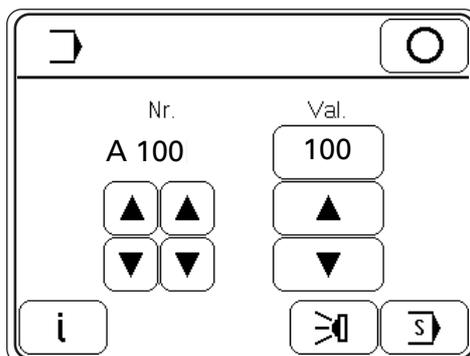

- Call up parameter "660".

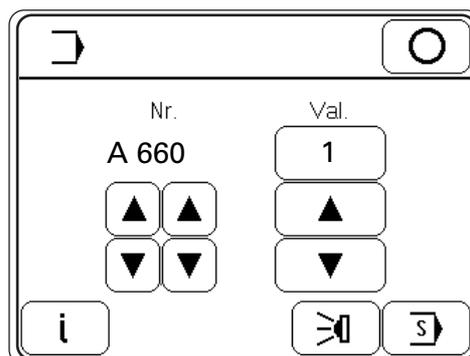


- Switch on the bobbin thread monitoring function (Value "1").

Explanation of the values for parameter "660" (bobbin thread monitoring):





- 0 = off
- 1 = remaining thread counter on
- 2 = bobbin thread reverse counter on

Preparation



- Call up parameter "760".

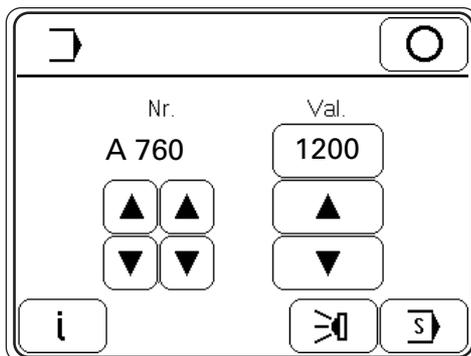

- Set the number of remaining stitches, which can still be sewn after the signal from the bobbin thread monitor (depends on the thread size).



- Conclude the input.





The number of remaining stitches can be altered in 200-steps.


9.11 Selecting the seam program

With the seam program selection function it is possible to select either manual or programmed sewing. The programmed sewing function is called up by selecting a seam program number from 0-65.

- Switch on the machine.

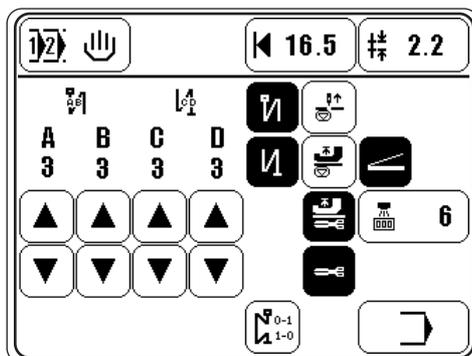


- Call up the seam program selection menu.

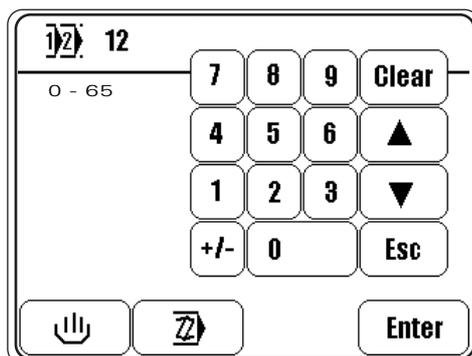

- Enter the seam program number with the number keys.

Or




- Scroll through the seam program numbers.



- Conclude the input and change to the programmed sewing mode with the selected seam program number.

Or



- Take over the selected program number and change into the seam programming function, see Chapter 11.02 Entering the seam program.


Or





- Select the manual sewing mode. The program number is not taken over.

9.12 Adjusting the control panel

- Switch on the machine.

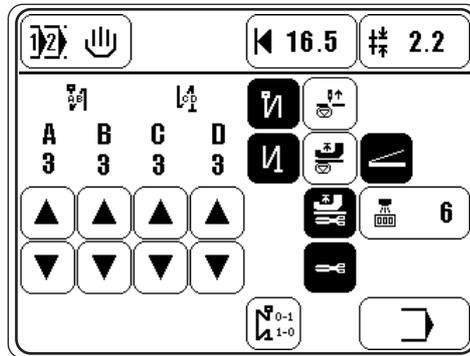


-  ● Call up the input mode.

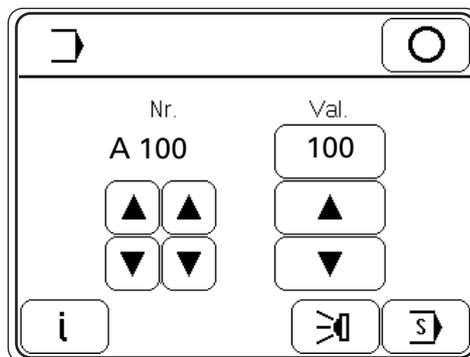


- Select user level "C", see Chapter 13.11.02 Selecting the user level.

-  ● Call up the service menu.

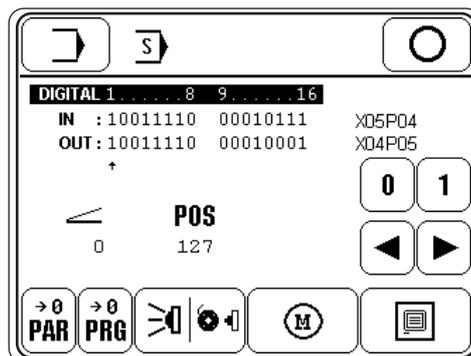

-  ● Call up the control panel functions.

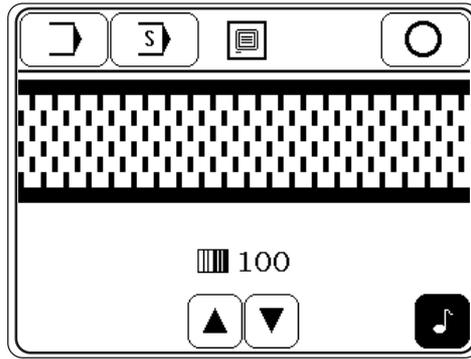

-  ● Change the display contrast.
-  ● Switch the key tone on or off.



Never reduce the display contrast to such an extent, that the display can no longer be read!


10 Sewing

In the sewing mode a difference must be made between manual sewing and programmed sewing. In the manual sewing mode, in addition to the functions such as edge guide, stitch length, seam securing, needle functions, presser foot functions and seam end conditions, the parameter for securing seams are also displayed and can be altered directly. The current seam securing parameters also apply in programmed sewing. The change from programmed to manual sewing and vice versa is effected with the program number selection function.

10.01 Manual sewing

In the manual sewing mode all the parameters necessary for the sewing operation can be changed directly. The manual sewing mode is selected with the program number selection function, see **Chapter 9.11 Selecting the seam program**. The selection of the manual sewing mode is shown by the symbol of a hand on the display instead of the program number.

- Switch on the machine.
- Select the manual sewing mode, see **Chapter 9.11 Selecting the seam program**.

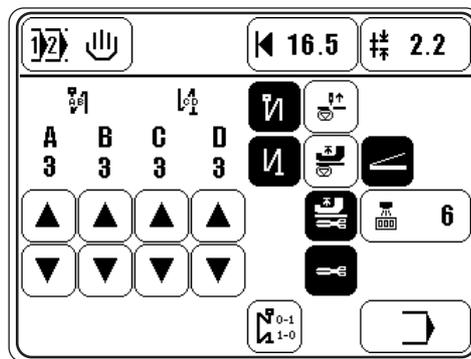

Explanation of the functions




Seam program selection

Opens the seam program number input menu or the menu for selecting manual sewing, see **Chapter 9.11 Selecting the seam program**.




Edge guide position

Opens the menu for entering the seam depth, see **Chapter 9.07 Entering the edge guide position**.



Stitch length

Opens the menu for entering the stitch length, see **Chapter 9.06 Entering the stitch length**.

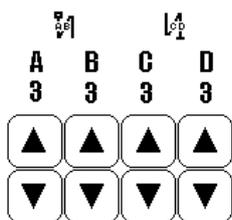

Number of stitches for the start and end backtacks

With the use of this input area the number of stitches for the start and end backtacks are entered, see **Chapter 9.08 Entering the start and end backtacks**.



Start backtacks

Switches the start backtack function on or off.



End backtacks

Switches the end backtack function on or off.



Needle position raised

When this function is activated, the needle is positioned at t.d.c. after sewing stops.




Presser foot raised

When this function is activated, the presser foot is raised after sewing stops.



Seam end with pedal

When this function is activated, the seam end is initialised manually with the pedal.



Seam end with sensor / compensating stitches

Opens the menu for entering the compensating stitches, see **Chapter 9.09 Entering the number of compensating stitches**.

When this function is switched on, the seam end is initialised automatically with the edge sensor.



Presser foot raised after thread trimming

When this function is activated, the presser foot is raised after thread trimming.




Thread trimming

When the function is activated, thread trimming with the pedal function is possible.



Bartack suppression

When operated, the next bartack is suppressed.



Input mode

Calls up the input mode.




If the bobbin thread monitoring function is switched on, the remaining number of stitches is also displayed, and if the speed display function is switched on, the current speed is also displayed, see **Chapter 13.11.03 List of parameters**.

- Sewing is carried out with the pedal functions, see **Chapter 7.03 Pedal**.



10.02 Programmed sewing

In the programmed sewing mode the seam parameters are set in a seam program. The program number selection function is used to call up a seam program. The selected program number, an sketch of the seam with the number of programmed seam sections, the current seam section and the parameters for the current seam section are displayed. The parameters for the current seam section cannot be changed directly.

- Switch on the machine.
- Select a seam program, see [Chapter 9.11 Selecting the seam program](#).

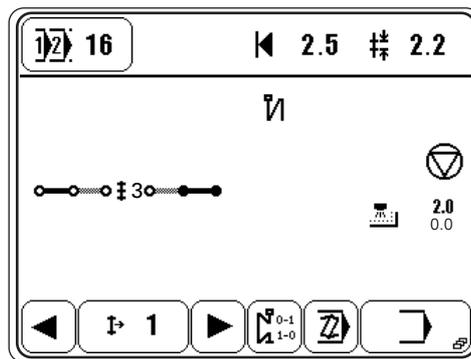


Explanation of the functions and displays

- 
Seam program selection
 Opens the menu for entering the seam program number or for selecting the manual sewing mode, see [Chapter 9.11 Selecting the seam program](#).
- 
Edge guide position
 Displays the current position of the edge guide.
- 
Stitch length
 Displays the current stitch length.
- 
Number of seam sections
 Displays the total number of seam sections in the seam program.
- 
Selecting seam sections
 This function is used to select the seam sections of the current seam program.
- 
Current seam section
 Display and selection of the current seam section using the number keys.
- 
Bartack suppression
 When operated, the next bartack is suppressed.



Entering the seam program

Opens the menu for entering and altering seam programs, see **Chapter 11.02 Entering the seam program**.



Input mode

Calls up the input mode.



Depending on the seam program, further symbols showing corresponding values or selected functions may appear on the display.




In addition, when the bobbin thread monitoring function is activated, the number of remaining stitches is shown, and when the speed display function is activated the current speed is shown, see **Chapter 13.11.03 List of parameters**.

- Sewing is carried out with the pedal functions, see **Chapter 7.03 Pedal**.

10.03 Error messages

If an error occurs, the text "ERROR" appears on the display, together with an error code. An error message is caused by incorrect settings, defective elements or seam programs and by overload conditions.

For an explanation of the error codes see **Chapter 13.12 Explanation of the error messages**.

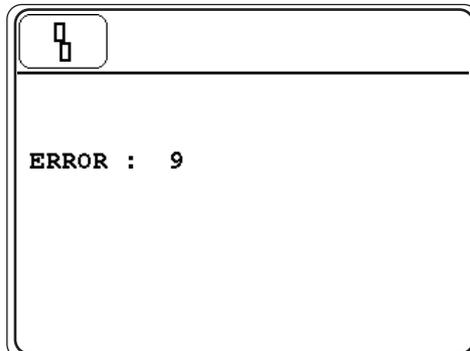

- Eliminate the error.
- Confirm error elimination.




11 Input

This chapter describes the input mode functions and how to enter seam programs.


11.01 Input mode

When the machine is in its initial state, it is possible to enter the parameters and the corresponding values directly in the control unit. The functions information, adjustment of the transmitted light sensors and service can be called up.

- Switch on the machine.




- Call up the input mode.

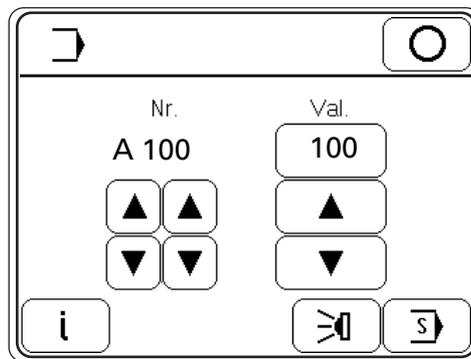


Explanation of the functions



- Sewing mode**
Quit the input mode and call up the sewing mode.



- Parameter selection**
Select the hundred and unit figures of the desired parameters, see [Chapter 13.11.01 Example of a parameter input](#).



- Altering the parameter value**
Change the value of the selected parameter, see [Chapter 13.11.01 Example of a parameter input](#).



- Software information**
Calls up information about the current machine software.



- Adjusting the transmitted light sensors**
Opens the menu for adjusting the transmitted light sensors, see [Chapter 13.08 Adjusting the transmitted light sensors](#).



- Service**
Opens the service menu, see [Chapter 13.13 Service menu](#).


11.02 Entering the seam program

Seam programs are created by establishing seam sections which are allocated certain functions and values. It is possible to store up to 65 seam programs each with 15 seam sections. The maximum number of seam sections in each seam program and the maximum number of seam programs can be limited by setting appropriate parameters, see **Chapter 13.11 Parameter settings**.

- Switch on the machine.
- Select a program number, see **Chapter 9.11 Selecting the seam program**.



- Call up the seam program input function.

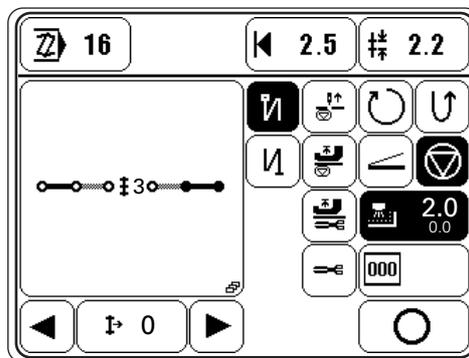


Explanation of the functions




Seam program selection

Opens the menu for entering the seam program number or for selecting the manual sewing mode, see **Chapter 9.11 Selecting the seam program**.




Edge guide

Opens the menu for entering the seam depth, see **Chapter 9.07 Entering the edge guide position**.



Stitch length

Opens the menu for entering the stitch length, see **Chapter 9.06 Entering the stitch length**.

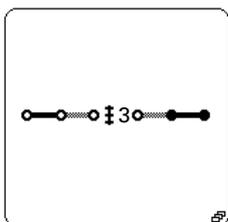

Selecting the seam type

Shows the current seam program with the corresponding seam sections and opens the menu for selecting the seam type, see **Chapter 11.02.01 Selecting the seam type**.



Start backtacks

Switches the start backtack function on or off.



End backtacks

Switches the end backtack function on or off.



Needle position raised

When this function is activated, the needle is positioned at t.d.c. after sewing stops.



Presser foot raised

When this function is activated, the presser foot is raised after sewing stops.



Presser foot raised after thread trimming

When this function is activated, the presser foot is raised after thread trimming.



Thread trimming

When the function is activated, thread trimming with the pedal function is possible.



Speed

Opens the speed input menu.

When this function is activated, it is possible to sew the seam section with the set speed, irrespective of the pedal setting.



Seam end with pedal

When this function is activated, the seam end is initialised manually with the pedal.




Reverse sewing direction

When this function is activated, the corresponding seam section is sewn in reverse.



Sewing stop


When this function is activated, sewing stops automatically at the end of the seam section.



Seam section end with sensor

Opens the menu for entering the seam depth and the correction value for corner stitches, see **Chapter 11.02.02 Entering the seam depth**.

When this function is switched on, the sensor recognises the seam end automatically.



Seam section end with stitch counting


Opens the menu for entering the number of stitches for the current seam section.

When this function is activated, the seam section end is initialised by the stitch counting function.



Selecting seam sections

This function is used to select the seam sections of the current seam program.



Current seam section

Display and selection of the current seam section using the number keys.



Sewing mode

Quit the seam program input mode and call up the sewing mode.


11.02.01 Selecting the seam types

For better information during programming and sewing, it is possible to show a diagram of different seam types. To do so, the seam types must be allocated to the seam programs. With the exception of the free seam, for each seam type the number of seam sections and the starting point is set. The functions and values in the individual seam sections can be altered. The seam types are divided into groups for flaps, cuffs, collars and shoulder flaps. In additions, one free description space is available, if it is not possible to select a pre-assigned work step from one of the groups. The group currently activated is shown by an inverse symbol.



- Switch on the machine.
- Select a program number, see Chapter 9.11 Selecting a seam program.




- Call up the seam program input function.

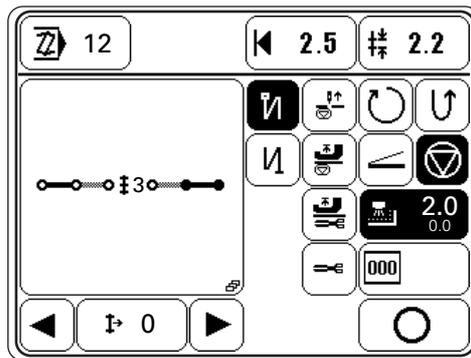

- Call up the seam type selection menu.

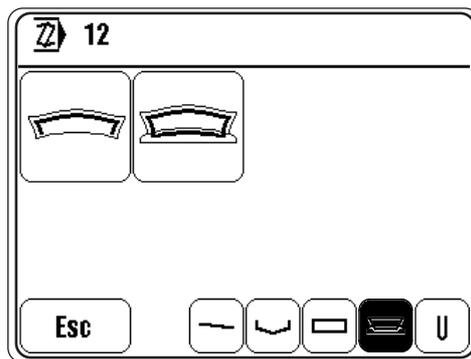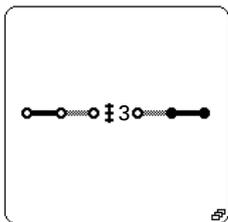

- Select the desired seam group.

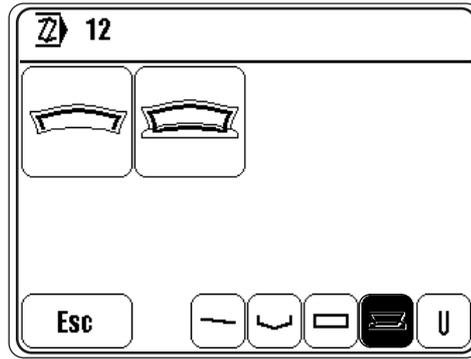


- Select the desired seam type.


When a seam type has been selected, the machine switches to the seam program input function.

Overview of the seam groups with their corresponding seam types:


Free seam

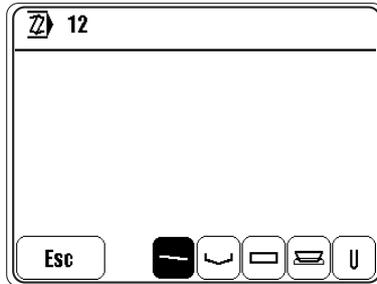


Flap

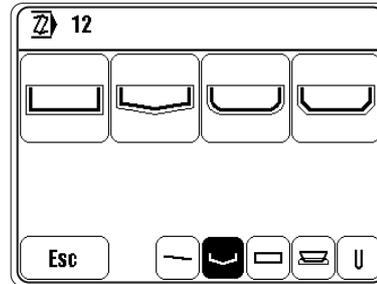


Cuffs

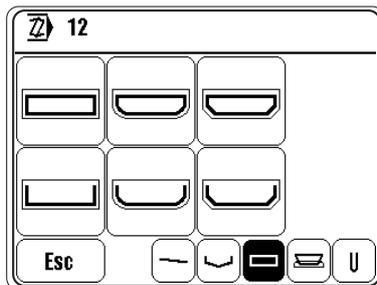

Collars

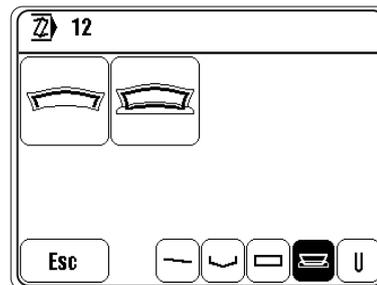

Shoulder flaps

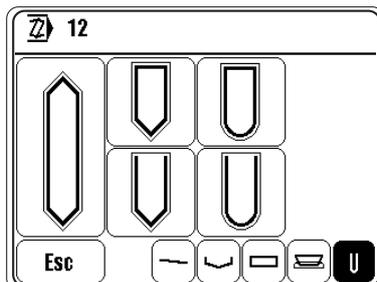



11.02.02 Entering the seam depth

As the edge sensors are arranged for sewing at right angles, if other angles to the edge have to be sewn, a correction value must be entered.


- Switch on the machine.
- Select a program number, see Chapter 9.11 Selecting a seam program.




- Call up the seam program input function.

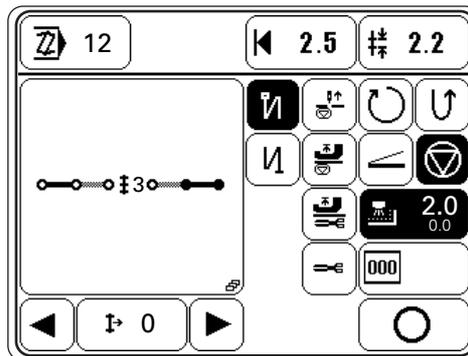


- Call up the seam depth input menu.

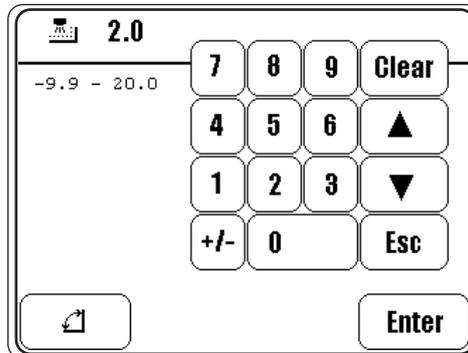

- Enter the desired seam depth.



- Call up the correction value input menu.

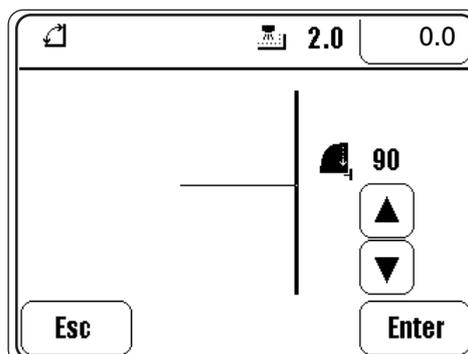

Input

0.0

- Using the number keys call up the correction value input menu and enter the correction value

Or



90




- Place the workpiece on the angle outline on the display and adjust the angle. The correction value is calculated automatically from the adjusted angle.

Enter


- Conclude the input and take over the correction value.

11.03 Example of how to enter a seam program

This is a description of how to enter a seam program, using a seam with corner stitches as an example.

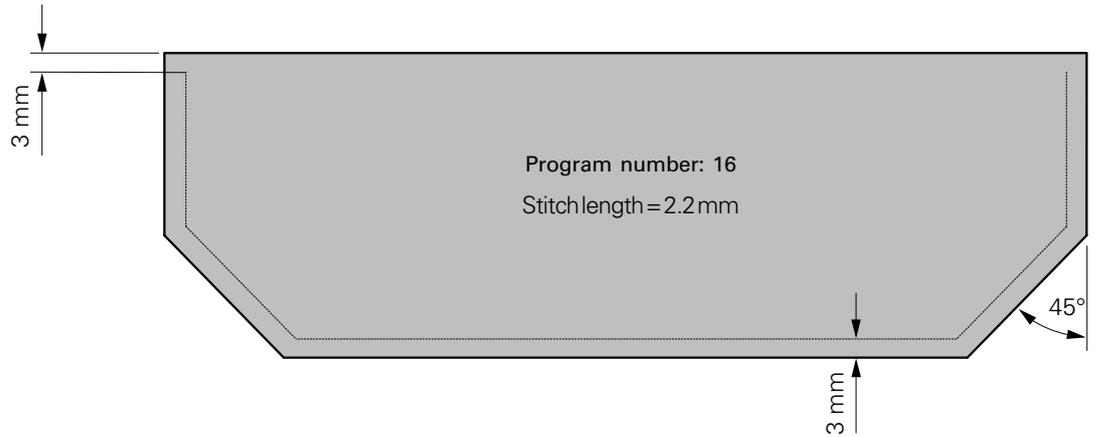



- Switch on the machine.



- Call up the seam program number input menu and select program number "16", see Chapter 9.11 Selecting the seam program.




- Call up the seam program input function.

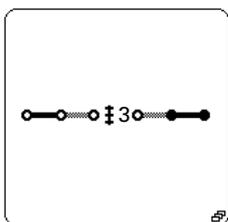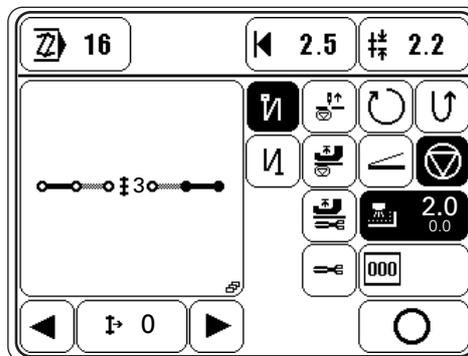


- Call up the menu for selecting the seam types, see Chapter 11.02.01 Selecting the seam types.



- Select the desired seam group.

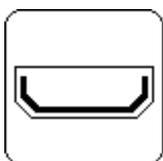

- Select the desired seam type.

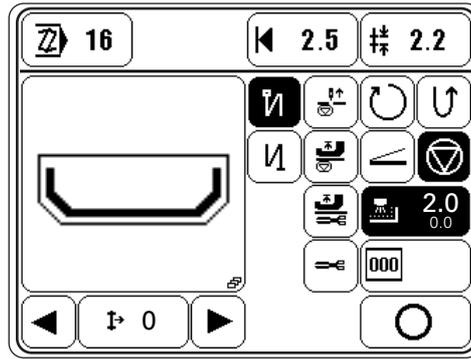

0 Seam section 0



All values entered in this seam section are valid for all other seam sections in the seam program, unless they are altered in the individual seam sections.


- 2.2** ● Call up the stitch length input menu and enter the stitch length "2.2", see **Chapter 9.06 Entering the stitch length.**

- 3.0** ● Call up the menu for entering the edge guide position and enter the edge guide position "3.0", see **Chapter 9.07 Entering the edge guide position.**

- 3.0** ● Call up the seam depth input menu and enter the seam depth "3.0".

- 1** ● Select first seam section.


- Correction icon** ● Call up the correction value input menu.

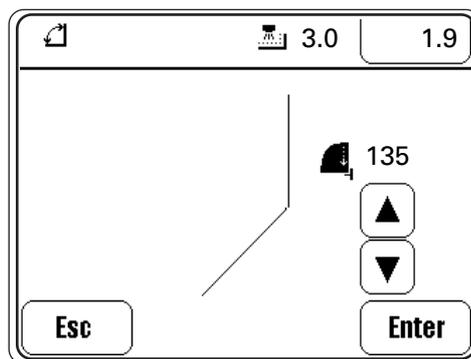


- 135** ● Place the workpiece on the angle outline on the display and adjust the angle. The correction value is calculated automatically from the adjusted angle.

- Enter** ● Conclude the input and take over the correction value.

- Stop icon** ● Switch on the automatic sewing stop at the end of the seam section function.



- Select **second seam section**.



- Call up the correction value input menu.




- Place the workpiece on the angle outline on the display and adjust the angle. The correction value is calculated automatically from the adjusted angle.



- Conclude the input and take over the correction value.



- Switch on the automatic sewing stop at the end of the seam section function.



- Select **third seam section**.



- Call up the correction value input menu.




- Place the workpiece on the angle outline on the display and adjust the angle. The correction value is calculated automatically from the adjusted angle.



- Conclude the input and take over the correction value.



- Switch on the automatic sewing stop at the end of the seam section function.



- Select **fourth seam section**.



- Call up the correction value input menu.



- Place the workpiece on the angle outline on the display and adjust the angle. The correction value is calculated automatically from the adjusted angle.






- Conclude the input and take over the correction value.



- Switch on the automatic sewing stop at the end of the seam section function.

Input

-  ● Select the **fifth seam section**.
-  ● Switch on the thread trimming function.

-  ● Select **sixth seam section**.
-  ● Call up the stitch length input menu and enter the stitch length "0", see **Chapter 9.06 Entering the stitch length**.
The fifth seam section is then recognised as the last seam section.
-  ● Conclude the seam program input by taking over the inputs and change to the programmed sewing mode.

12 Care and Maintenance

Cleaning	daily, several times if in continuous operation
Checking the oil level	every 3 months



These maintenance intervals are calculated for the average running time of a single shift operation. If the machine is operated more than this, shorter intervals are recommended.

12.01 Cleaning the machine

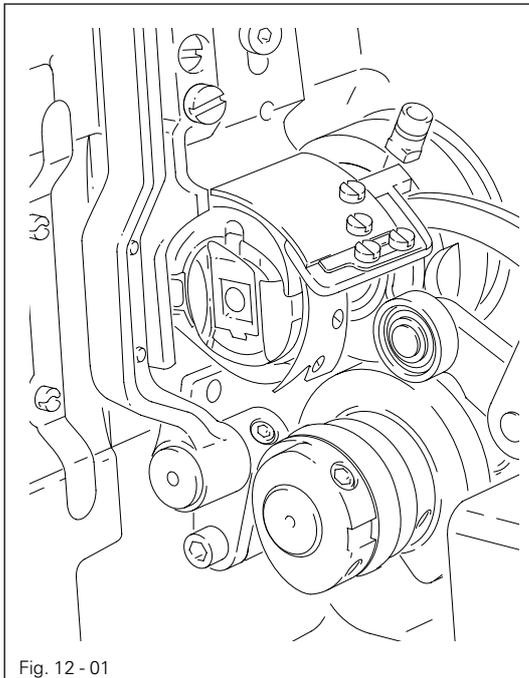


Fig. 12 - 01



Switch off the machine!
Danger of injury due to unintentional starting of the machine!

- Tilt back the machine.
- Clean the hook and hook compartment daily, more often if in continuous operation.



Return the machine to its upright position using **both** hands!
Danger of injury by crushing between the edge of the machine and the table top!

12.02 Topping up the oil tank

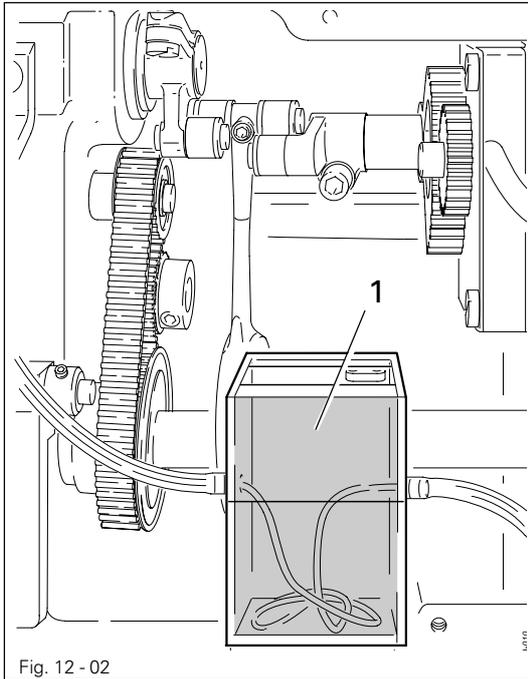


Fig. 12 - 02



The oil reservoir must always have oil in it.


- Whenever it is necessary to refill the reservoir, tilt back the machine and let it rest on the sewing head support.
- Fill oil through hole 1 into the reservoir 2 up to the level of the front edge (see arrow).



Return the machine to its upright position using **both** hands!
Danger of injury by crushing between the machine and the table top!



Only use oil with a mean viscosity of $10.0 \text{ mm}^2/\text{s}$ at 40°C and a density of 0.847 g/cm^3 at 15°C .



We recommend PFAFF sewing machine oil, part no. 280-1-120 105.

13 Adjustment



No C-clamp should be fastened to the needle bar of the PFAFF 2481-980/30. This could cause damage to the special coating of the needle bar.

13.01 Notes on adjustment

All following adjustments are based on a fully assembled machine and may only be carried out by expert staff trained for this purpose.

Machine covers, which have to be removed and replaced to carry out checks and adjustments, are not mentioned in the text.

The order of the following chapters corresponds to the most logical work sequence for machines which have to be completely adjusted. If only specific individual work steps are carried out, both the preceding and following chapters must be observed.

Screws, nuts indicated in brackets () are fastenings for machine parts, which must be loosened before adjustment and tightened again afterwards.



Unless stated otherwise, during all adjustment work the machine must be disconnected from the electric and pneumatic power supply!
Danger of injury if the machine is started accidentally!

13.02 Tools, gauges and other accessories for adjusting

- 1 set of screwdrivers with blade widths from 2 to 10 mm
- 1 set of wrenches with jaw widths from 7 to 14 mm
- 1 set of Allan keys from 1.5 to 6 mm
- 1 metal rule, (Part No. 08-880 218-00)
- 1 feed dog adjustment gauge, Part No. 61-111 639-71
- 1 adjustment pin (5 mm dia.), Part No. 13-033 346-05
- 1 adjustment gauge for tightening the belt of the hook drive, part no. 61-111 639-76
- Adjustment gauge, part No. 61-111 639-73
- Sewing thread and test material

13.03 Abbreviations

TDC = top dead center


BDC = bottom dead center

13.04

Control and adjustment aids



The positions required during adjustment can be fixed with the help of adjustment pin 1 (part no. 13-033 346-05) and, if necessary, adjustment gauge 3 (part no. 61-111 639-73).

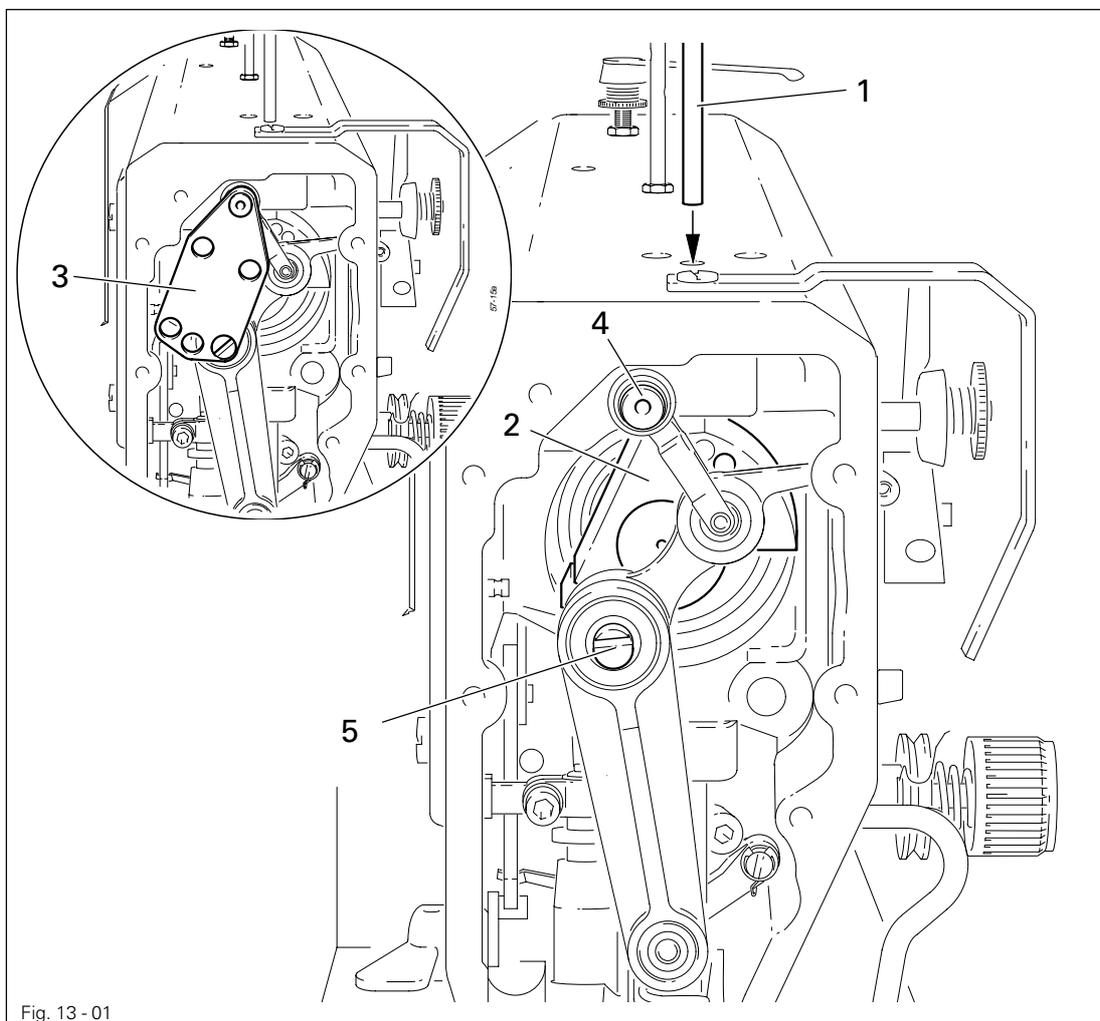

Needle bar position 1.8 mm past b.d.c.

- Turn the balance wheel until the needle bar is approximately in the required position.
- Insert adjustment pin 1 in the hole.
- Move the balance wheel fractionally to and fro until adjustment pin 1 engages in crank 2.

Needle bar position 0.6 mm past b.d.c.

- Bring the needle bar approximately into the required position.
- Fit adjustment gauge 3 to pins 4 and 5, paying attention to the right side (for 30 mm or 36 mm needle bar stroke).

13.05 Adjusting the basic machine


13.05.01 Basic position of the machine drive unit



This adjustment is only necessary, if toothed belt **2** was removed.

Requirement

When the needle bar is positioned 0.6 mm past b.d.c., the markings **3** and **4** should be in alignment.

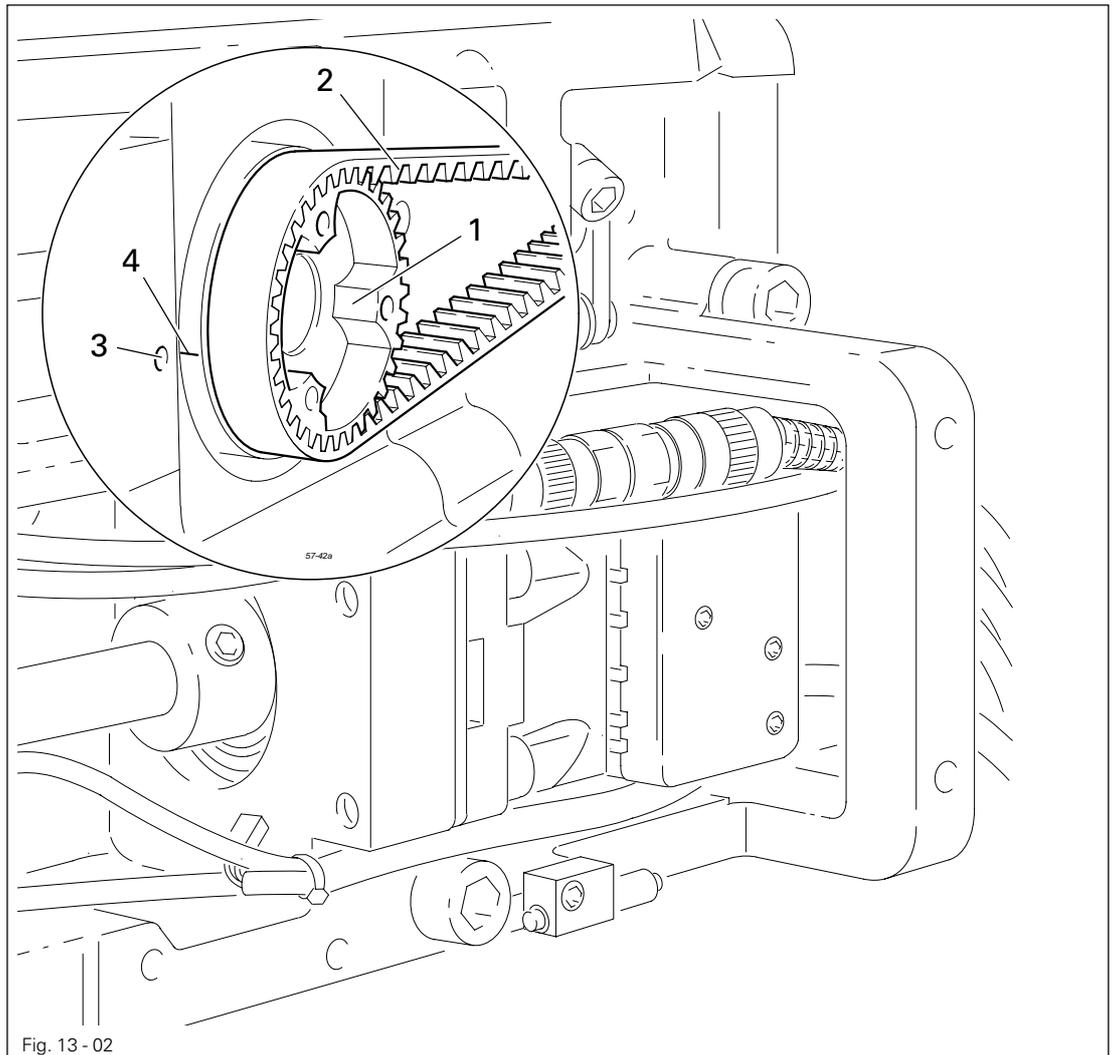

- Bring needle bar to 0.6 mm past b.d.c.
- Adjust the toothed belt wheel 1 according to the **requirement** and slide on toothed belt 2.



When installing the motor pay attention to the correct position of shaft flange, shock absorber and motor flange!




The second screw on the toothed belt wheel 1 is a conical screw.

Adjustment

13.05.02 Preadjusting the needle height

Requirement

When the needle bar is positioned 1.8 mm above BDC, the mark on the needle bar **1** must be flush with the bottom edge of the needle bar frame **3**.

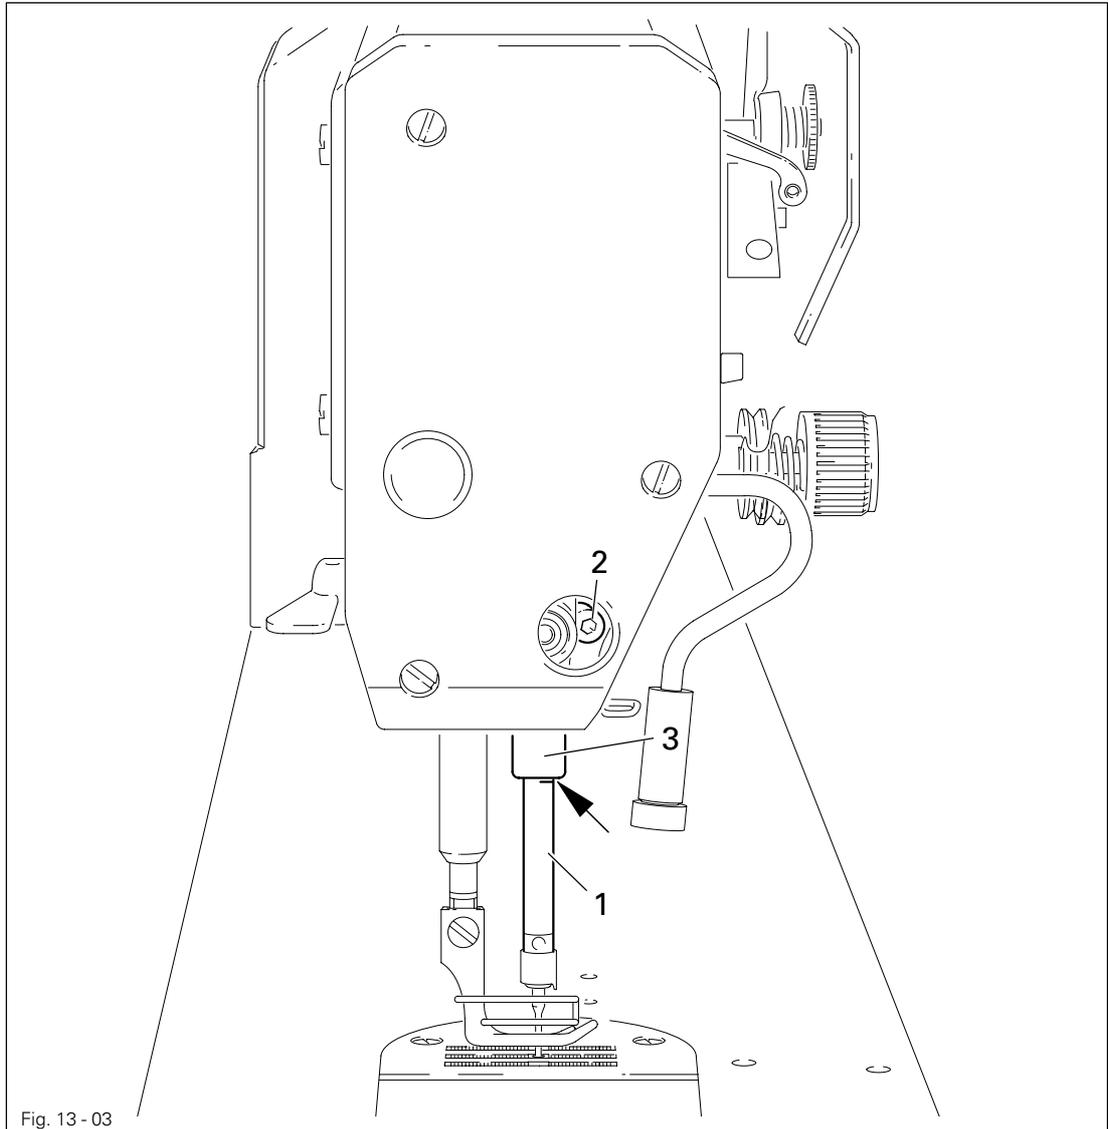

- Set needle bar at 1.8 mm past b.d.c. and block machine with blocking pin, see **Chapter 13.04 Checking and adjusting aids**.
- Move needle bar **1** (screw **2**), without turning it, according to the requirement.

13.05.03 Neutral position of the bottom feed dog

Requirement

With the stitch length set at "0"

1. The marking on the toothed segment **1** should be positioned in the centre of the toothed wheel shaft **3**.
2. Cranks **4** and **6** should be in alignment and there should be no feeding motion of the bottom feed dog when the balance wheel is turned.


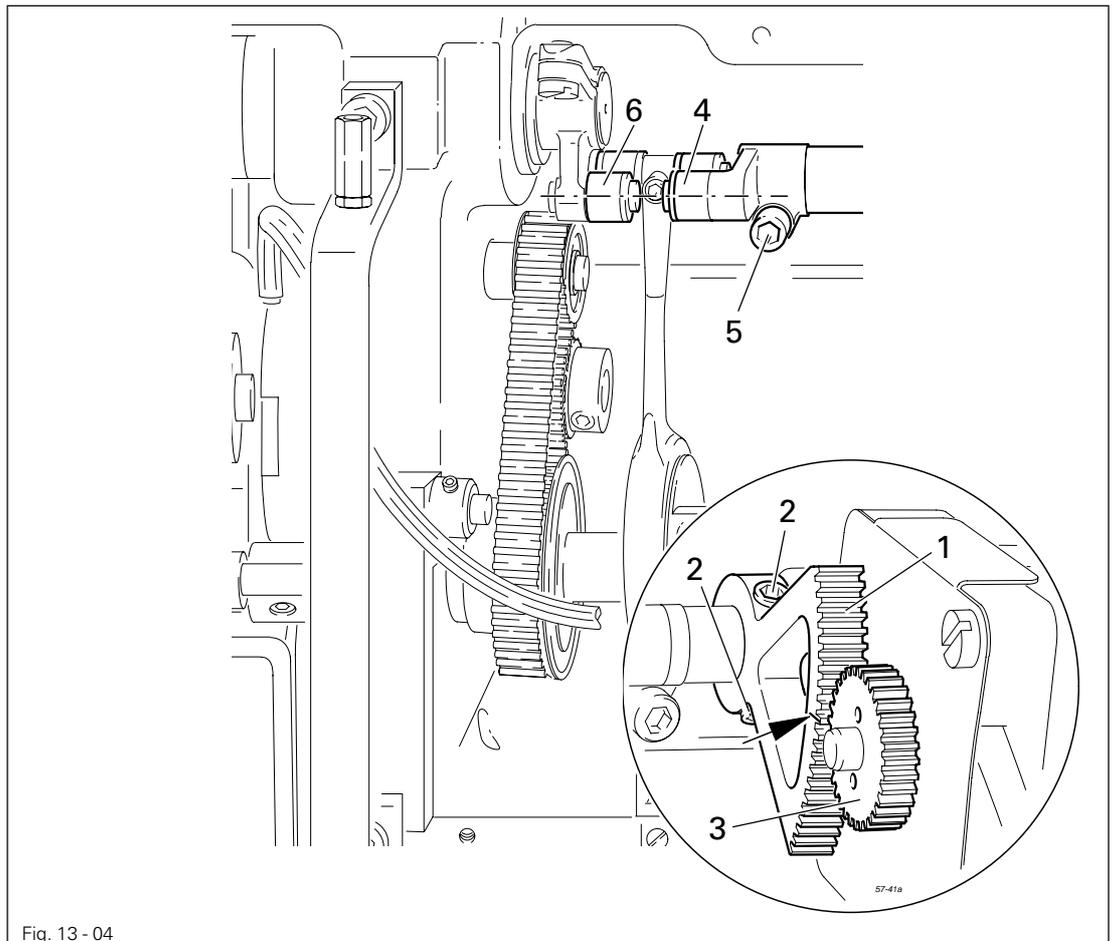


Fig. 13 - 04



0.0


- Switch on the machine.
- On the control panel set the stitch length at "0" and turn the balance wheel until the stitch length control motor reacts.
- Make sure that parameter **834** is set at "0", see **Chapter 13.11 Parameter settings**.
- Adjust tooth segment **1** (screws **2**) according to **requirement 1**, without turning toothed wheel **3**.
- Adjust crank **4** (screws **5**) according to **requirement 2**.
- Switch off the machine.

Adjustment


13.05.04 Zero position of the needle feed

Requirement

When the stitch length is set at "0", there should be no feeding motion of the needle bar when the balance wheel is turned.

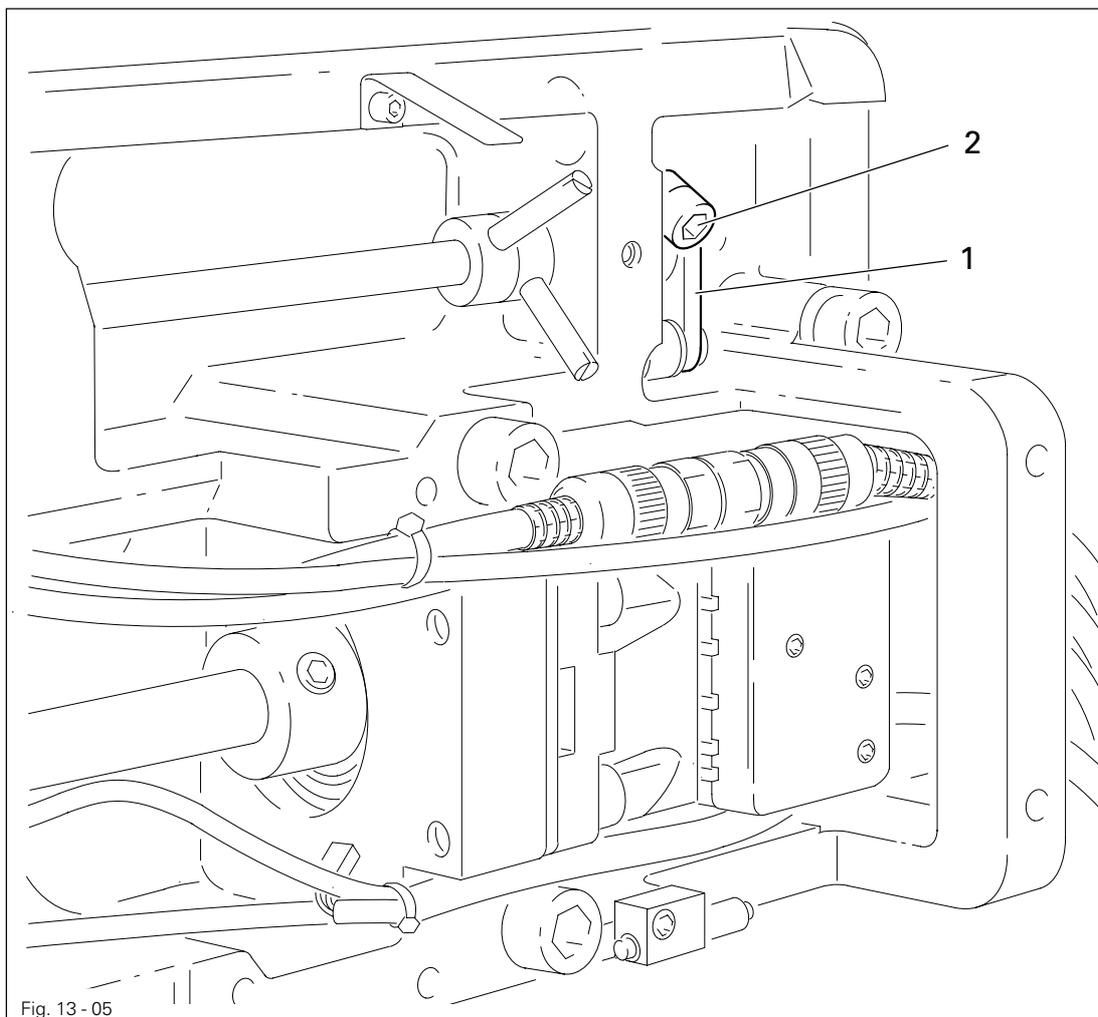

- Switch on the machine.



- On the control panel set the stitch length at "0" and turn the balance wheel until the stitch length control motor reacts.
- Make sure that parameter 834 is set at "0", see **Chapter 13.11 Parameter settings**.
- Adjust crank 1 (screw 2) according to the **requirement**.
- Switch off the machine.

13.05.05 Feeding motion of the bottom feed dog

Requirement

With the needle bar positioned **0.6 mm past b.d.c.** the bottom feed dog should not move, when shaft **3** is turned backwards and forwards.

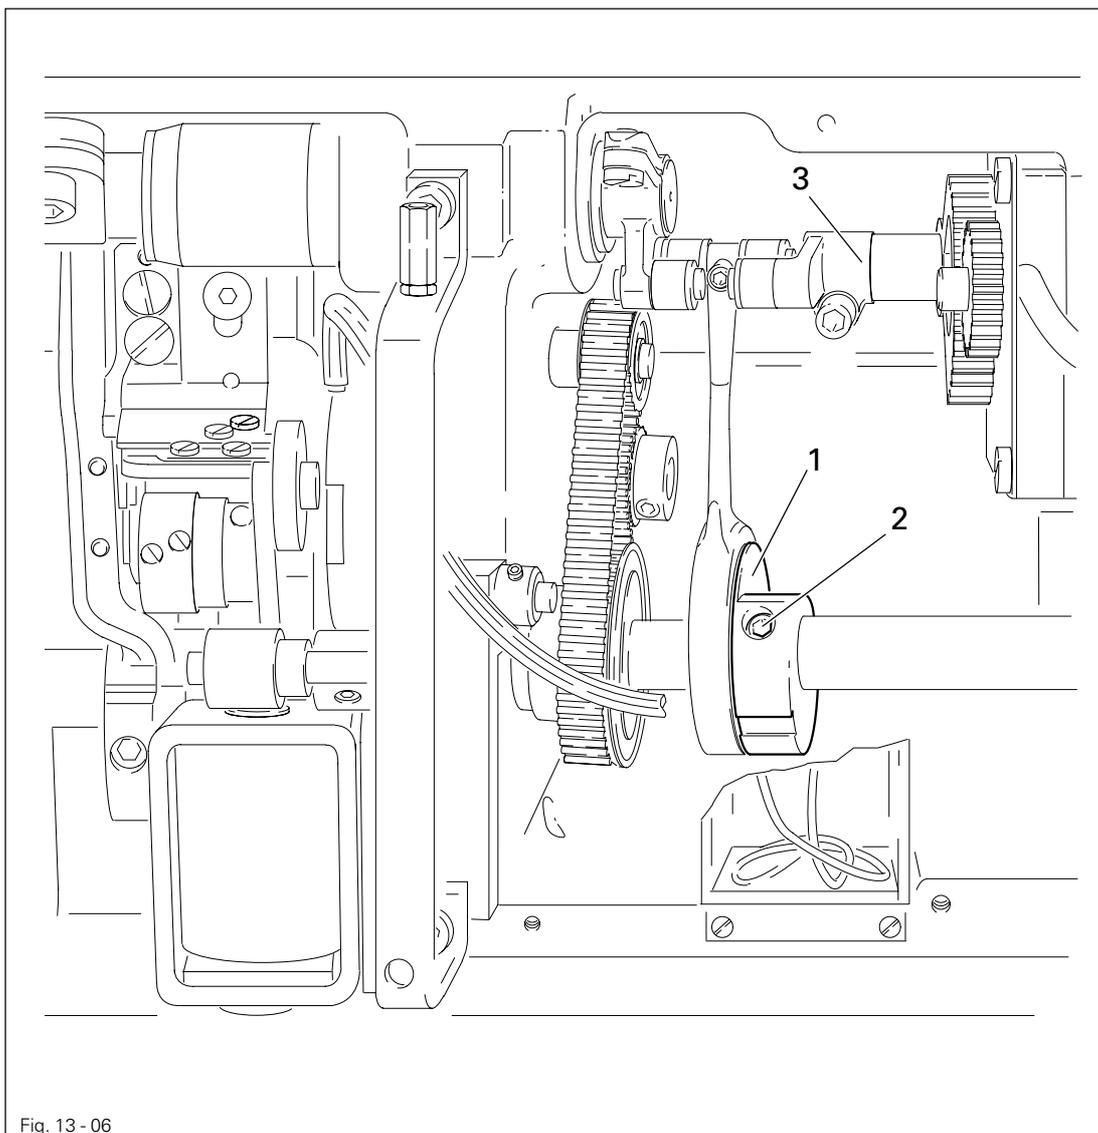


Fig. 13 - 06




- Position the needle bar at 0.6 mm past b.d.c.
- Adjust eccentric **1** (screws **2**) according to the **requirement**, without moving it sideways.

Adjustment

13.05.06 Feeding motion of the needle feed

Requirement

With the needle bar positioned **0.6 mm past b.d.c.** the needle should not move, when shaft **3** is turned backwards and forwards.

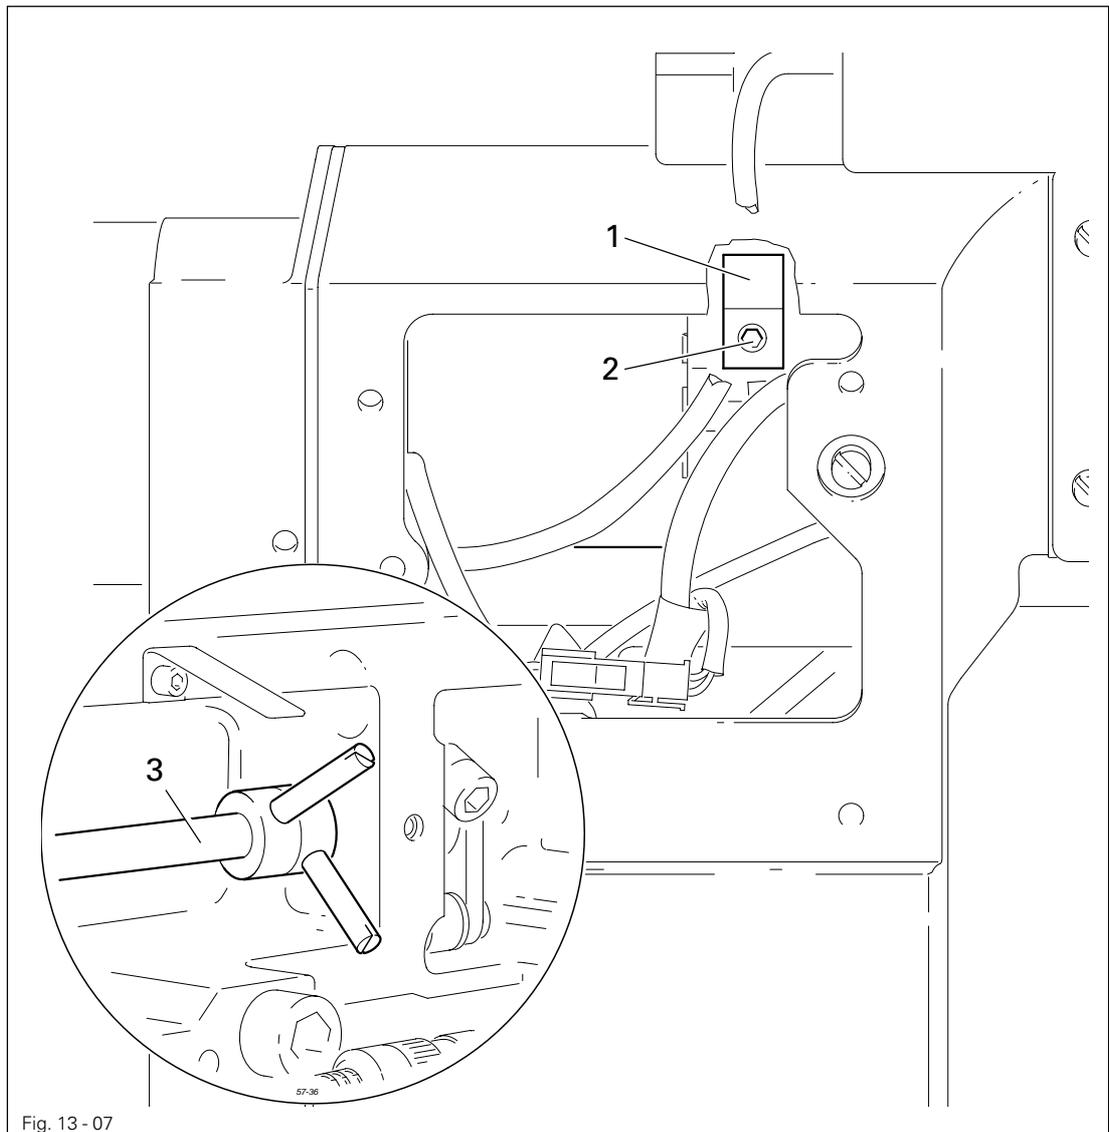

- Position the needle bar at 0.6 mm past b.d.c.
- Adjust eccentric **1** (screws **2**) according to the **requirement**.

13.05.07 Lifting stroke of the bottom feed dog

Requirement

When the needle bar is positioned **0.6 mm past b.d.c.** and the stitch length is set at "0"

1. The bottom feed dog should be at the top of its stroke and
2. The control cam **3** should be resting on the feed lifting eccentric **1**.


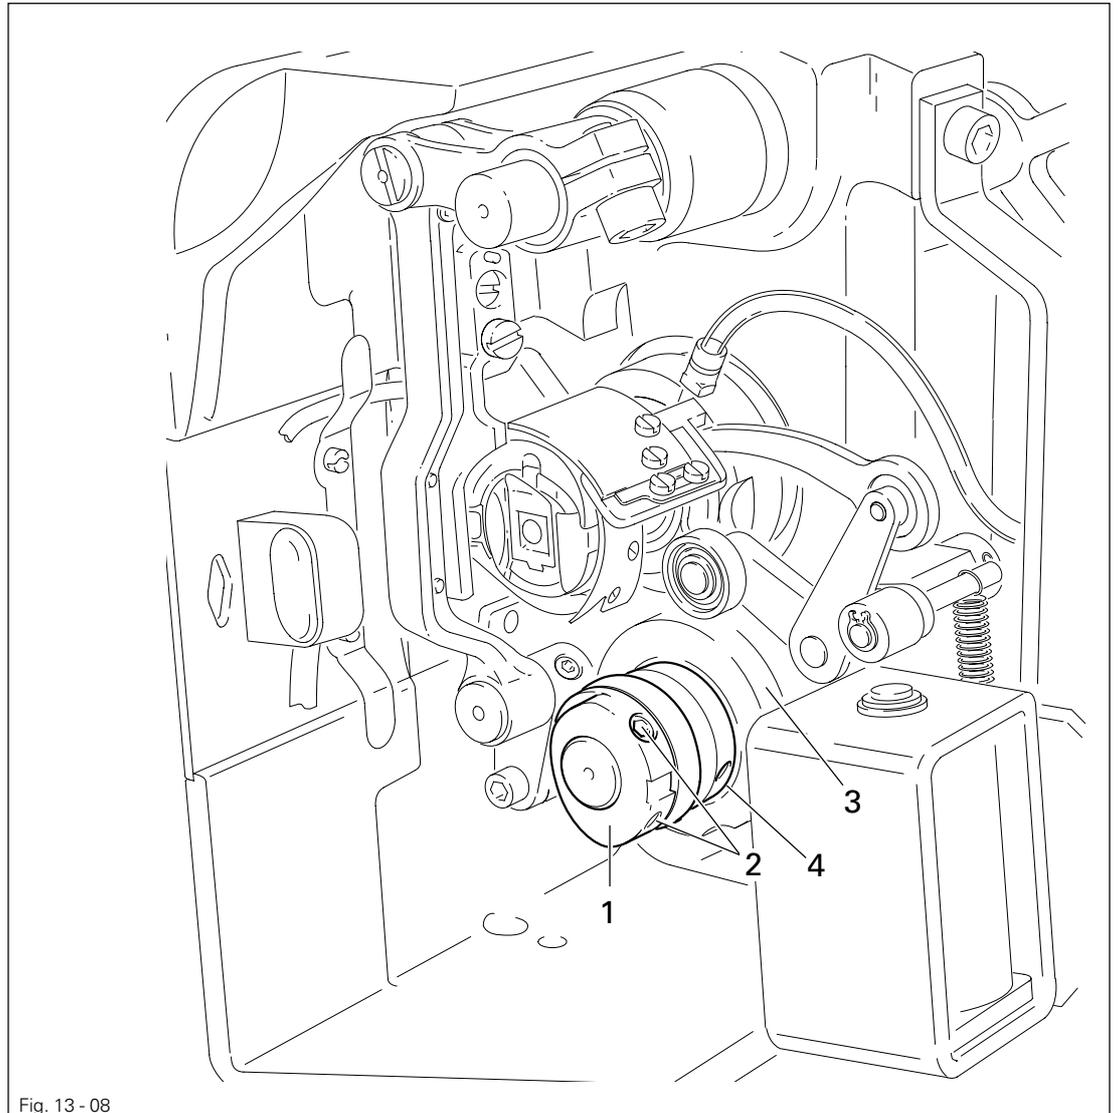


Fig. 13 - 08



- Switch on the machine.



- Set the stitch length at "0" and bring the needle bar to 0.6 mm past b.d.c.
- Turn the balance wheel until the stitch length control motor reacts.
- Adjust eccentric **1** (screws **2**) according to **requirement 1**.
- Adjust control cam **3** (screws **4**) according to **requirement 2** and switch off the machine.

Adjustment

13.05.08 Height of the bottom feed dog / Position in the needle plate cutout

Requirement

At the top of its stroke, when the stitch length is set at "0", the bottom feed dog 1

1. Should be positioned in the centre of the needle plate cutout as seen from the side and in feeding direction and
2. Rest on the feed dog adjustment gauge 2 over its whole length.

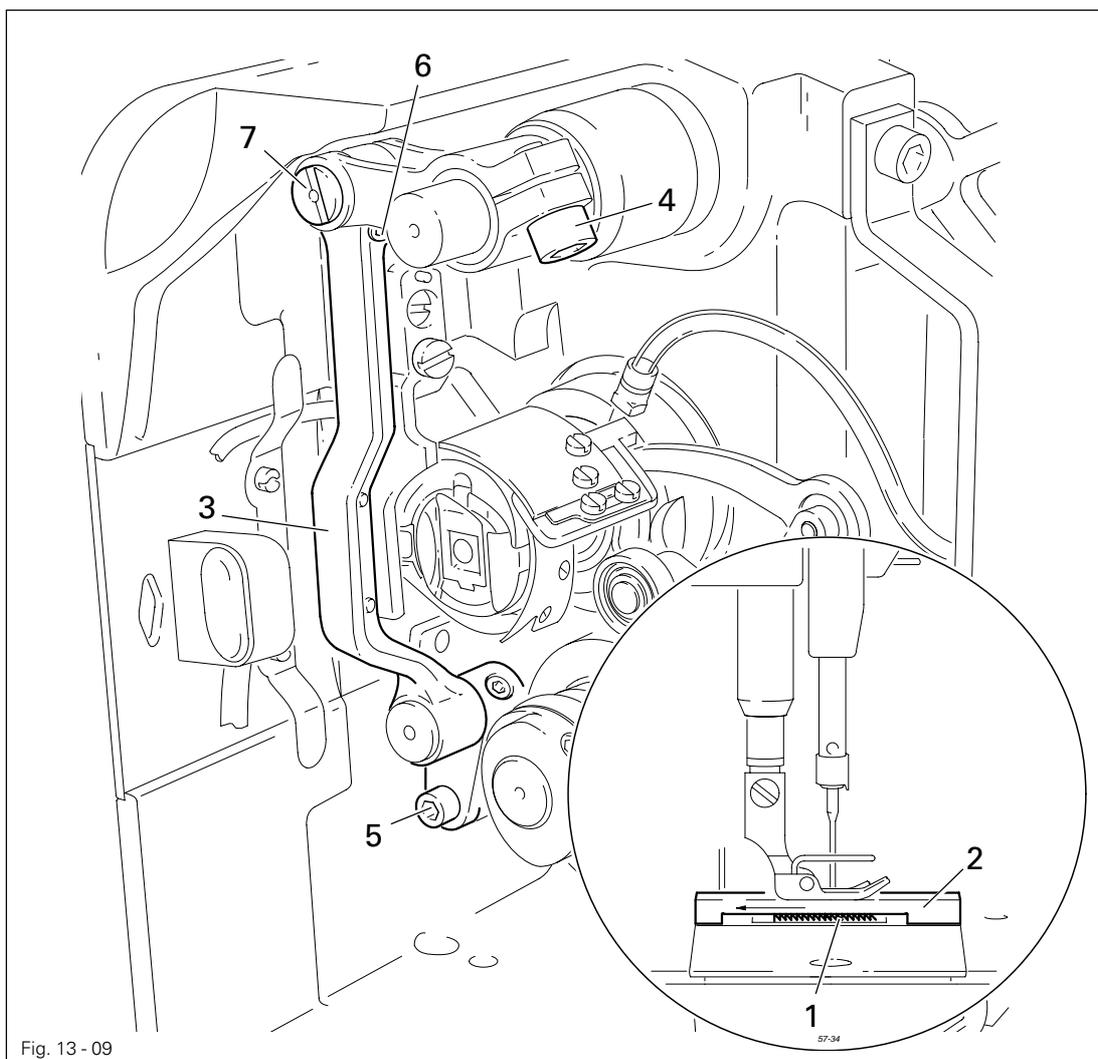


Fig. 13 - 09




0.0

- Switch on the machine and set the stitch length at "0".
- Turn the balance wheel until the stitch length control motor reacts.
- Bring the bottom feed dog 1 to the top of its stroke.
- Raise the presser foot, position the feed dog adjustment gauge 2 over the needle plate cutout with its front edge flush with the edge of the needle plate, as shown in Fig. 13-09, and lower the presser foot.
- Adjust bracket 3 (screw 4) according to requirement 1.
- Adjust bracket 3 or eccentric 7 (screws 5 and 6) according to requirement 2.
- Switch off the machine.

13.05.09 Needle in needle hole centre

Requirement

The needle should enter the needle hole exactly in the centre.

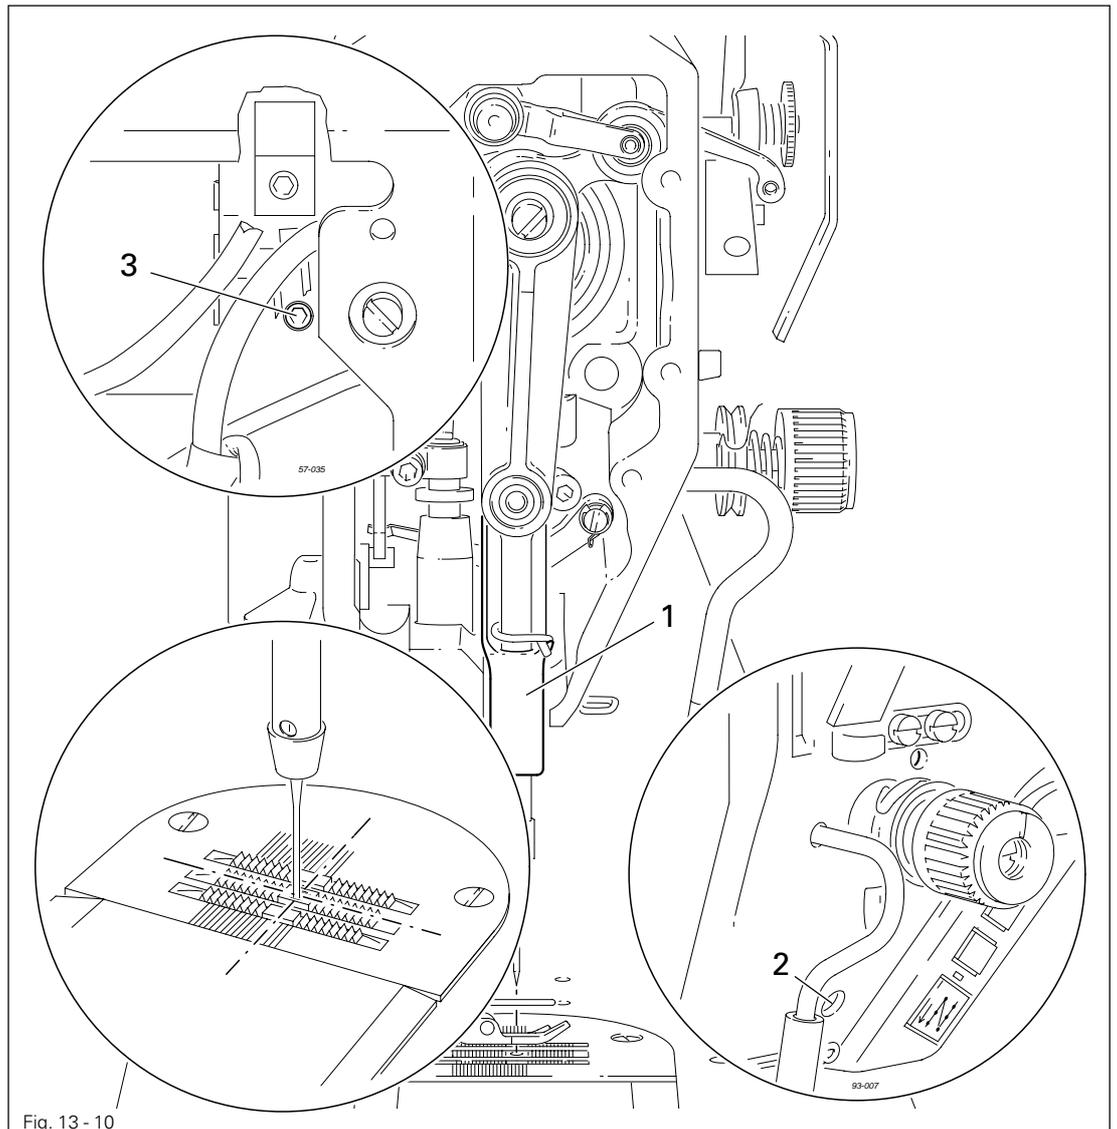

0.0

- Switch on the machine.
- On the control panel set the stitch length at "0" and turn the balance wheel until the stitch length control motor reacts.
- By turning the balance wheel position the needle in the needle hole.
- Adjust needle bar frame 1 (screws 2 and 3) according to the **requirement**.
- Switch off the machine.

13.05.10 Hook shaft bearing and toothed belt tension

Requirement

1. The front edge of the hook shaft **5** should be at a distance of **14.5 mm** from the centre of the needle, whereby the groove in the hook shaft bearing **1** (see arrow) should be parallel to the bed-plate and point in the opposite direction to the sewing direction.
2. The toothed belt should be tightened so that when the gauge is placed on it, the marking in the gauge window should match the marking on the bushing.

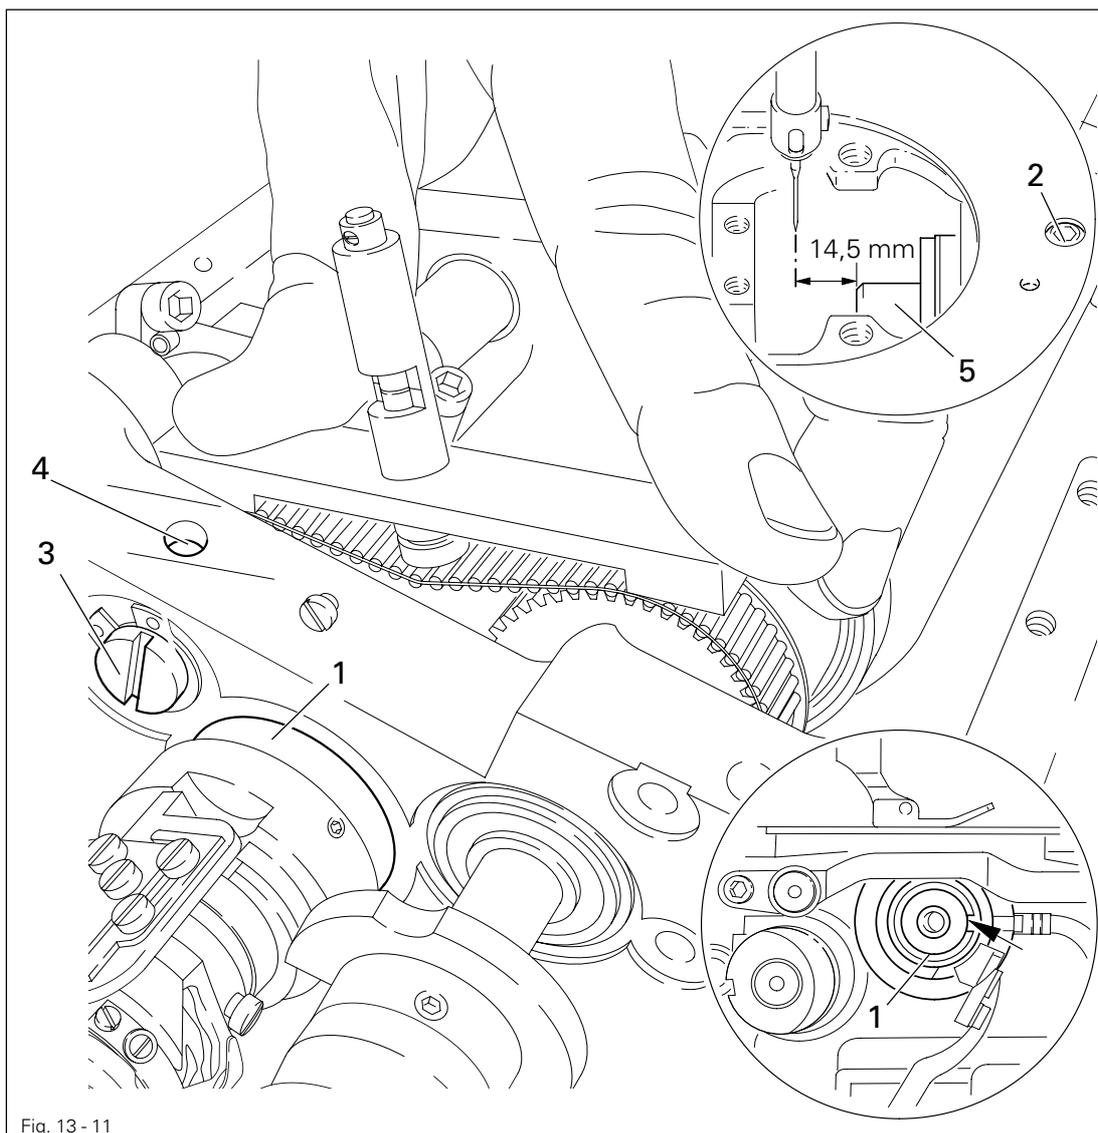


Fig. 13 - 11



- Align the hook bearing shaft **1** (screw **2**) in accordance with **requirement 1**.
- Press the gauge (part no. 61-111 639-76) onto the toothed belt, so that it is centred to it and touching the bearing on the rock shaft. The gauge window must point towards the hook.
- Turn eccentric **3** (screw **4**) clockwise in accordance with **requirement 2**, taking care that the axial position of eccentric **3** is not changed.

13.05.11 Hook lubrication

Requirement

1. The centrifugal disk **1** must be positioned **1.5 mm** in front of the oil ring **3**.
2. When the machine is running at full speed, **after approx. 10 seconds** a mark should be made by a fine stripe of oil on the strip of paper placed over the needle plate cutout.

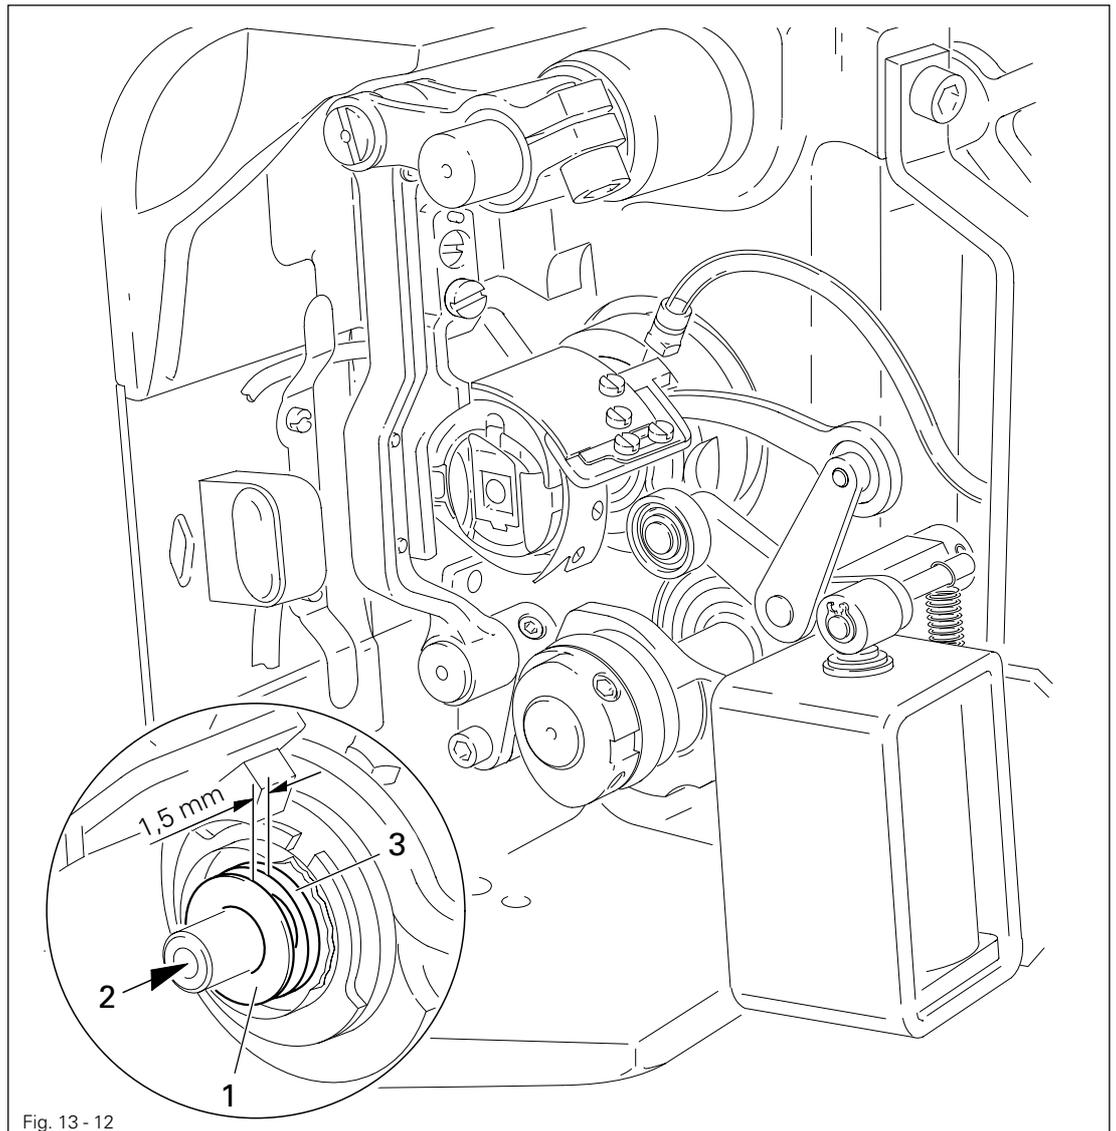


Fig. 13 - 12



The adjustment is only necessary if the wick has been replaced.
When replacing the wick, make sure that the new wick is impregnated with oil.



- Move the centrifugal disk **1** (screw **2**) according to **requirement 1**.
- Check **requirement 2**. If necessary, move centrifugal disk **1**.

Adjustment

13.05.12 Needle rise, hook-to-needle clearance, needle height and bobbin case position finger

Requirement

With the needle at 1.8 mm after BDC,

1. the hook point **6** must point to the middle of the needle and be at a distance of **0.05 mm - 0.1 mm** to the clearance cut of the needle, and
2. the top edge of the needle eye must be **0.8 mm** below the hook point.
3. Between the projection of the bobbin case position finger **4** and the bottom of the retaining groove there should be a distance of **0.5 mm**.


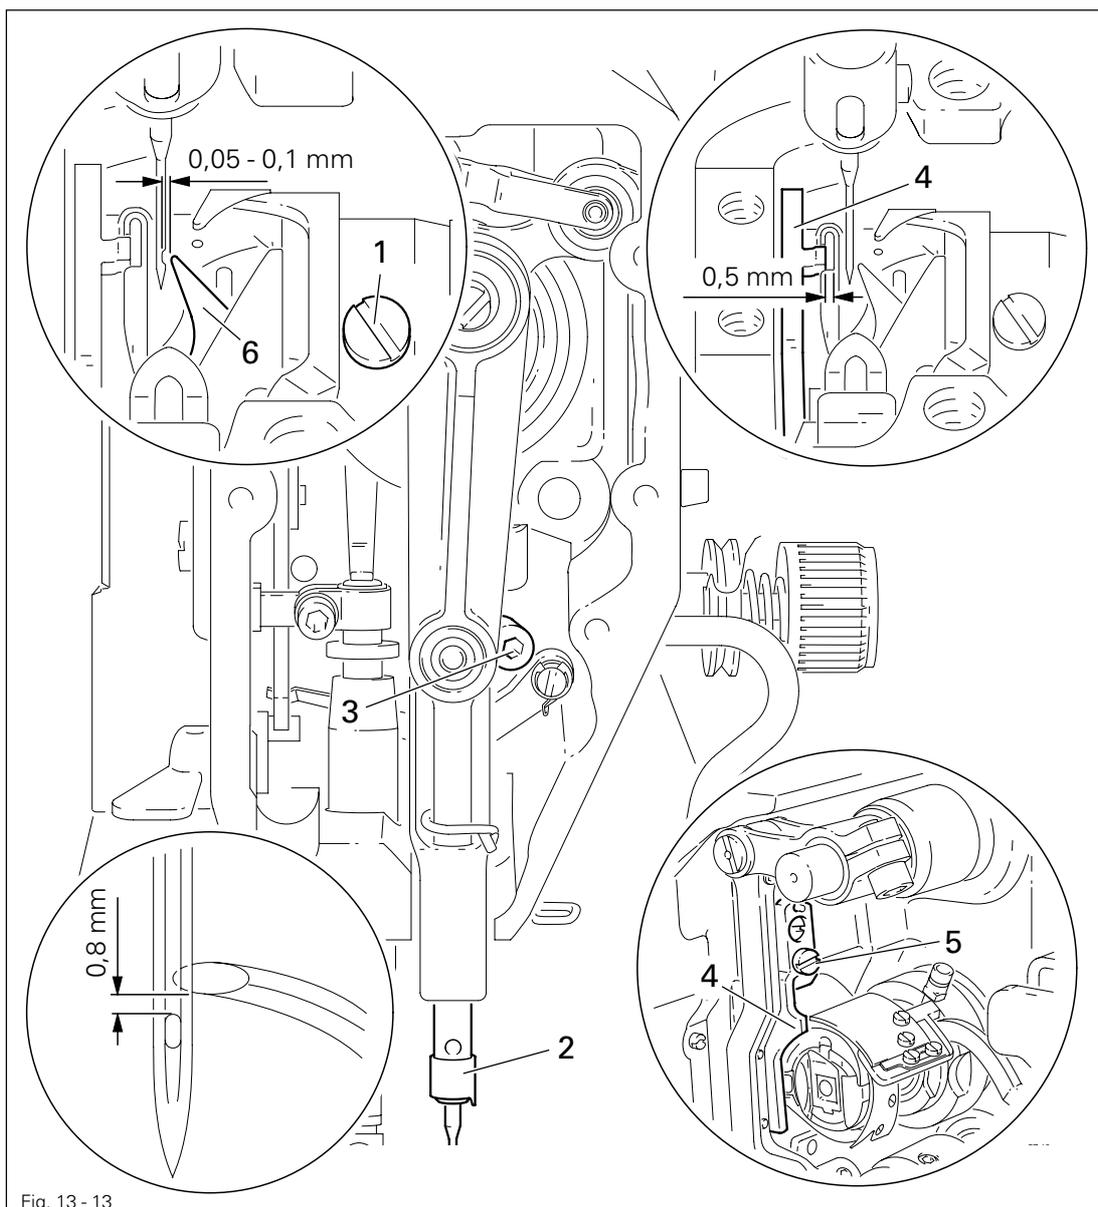


Fig. 13 - 13



- Switch on the machine.



- On the control panel set the stitch length at "0" and turn the balance wheel until the stitch length control motor reacts.

- Switch off the machine.

- Using the adjustment pin, position the needle bar at 1.8 mm after BDC.
- Adjust the hook according to **requirement 1**.
- Tighten screw **1**.
- Move needle bar **2** (screw **3**) without turning it according to **requirement 2**.
- Align bobbin case position finger **4** (screw **5**) according to **requirement 3**.

13.05.13 Thread check spring and slack thread regulator

Requirement

1. The motion of the thread check spring must be completed when the needle point enters the material (spring stroke approx. **7 mm**).
2. When the thread loop is at its largest when going around the hook, the thread check spring must have moved by approx. **1 mm**.

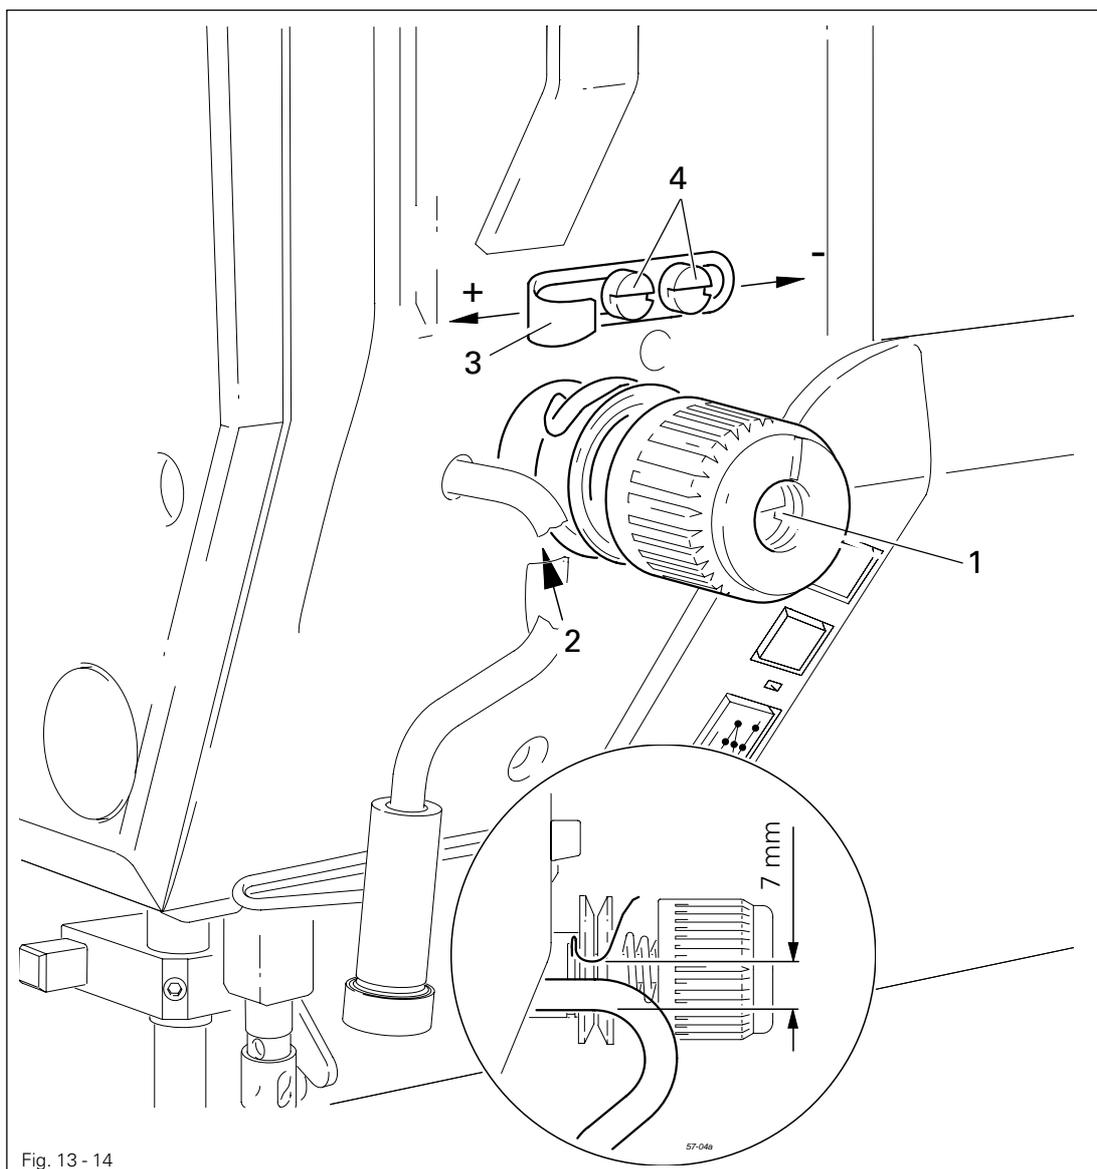


Fig. 13 - 14



- Turn thread tension **1** (screw **2**) according to **requirement 1**.
- Turn thread tension **3** (screw **4**) according to **requirement 2**.



Due to technical sewing reasons it may be necessary to deviate from the spring stroke indicated above.

Move the slack thread regulator **3** (screw **4**) toward the "+" (= more thread) or toward the "-" (= less thread)

13.05.14 Presser foot clearance

Requirement

1. When the automatic presser foot lift is operated, the clearance between the presser foot and the needle plate should be **7 mm**.
2. When the hand lever is raised, the clearance between the presser foot and the needle plate should be **5 mm**.

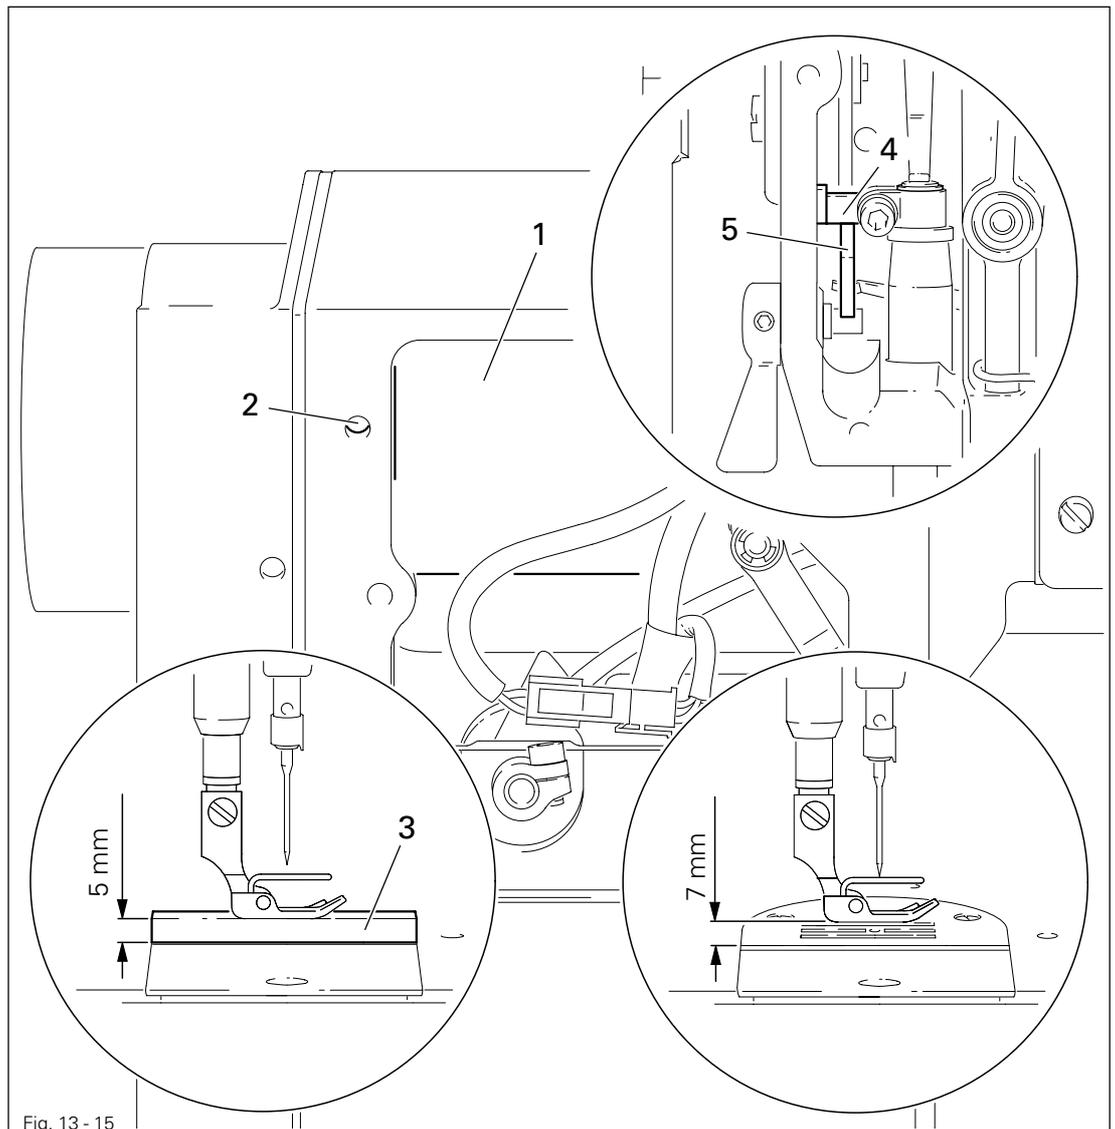


Fig. 13 - 15



- Adjust solenoid 1 (screw 2) in accordance with **requirement 1**.
- Raise the hand lever and place adjustment gauge 3 (part no. 61-111 639-70) under the presser foot in accordance with **requirement 2**.
- Move presser bar lifting lever 4 against lifting piece 5.



Make sure that the needle is in the centre of the presser foot.

13.05.15 Setting the zero point of the feed regulator

Requirement

When the stitch length is set at "0", at maximum speed (4500 spm) the needle should always penetrate in the same place.

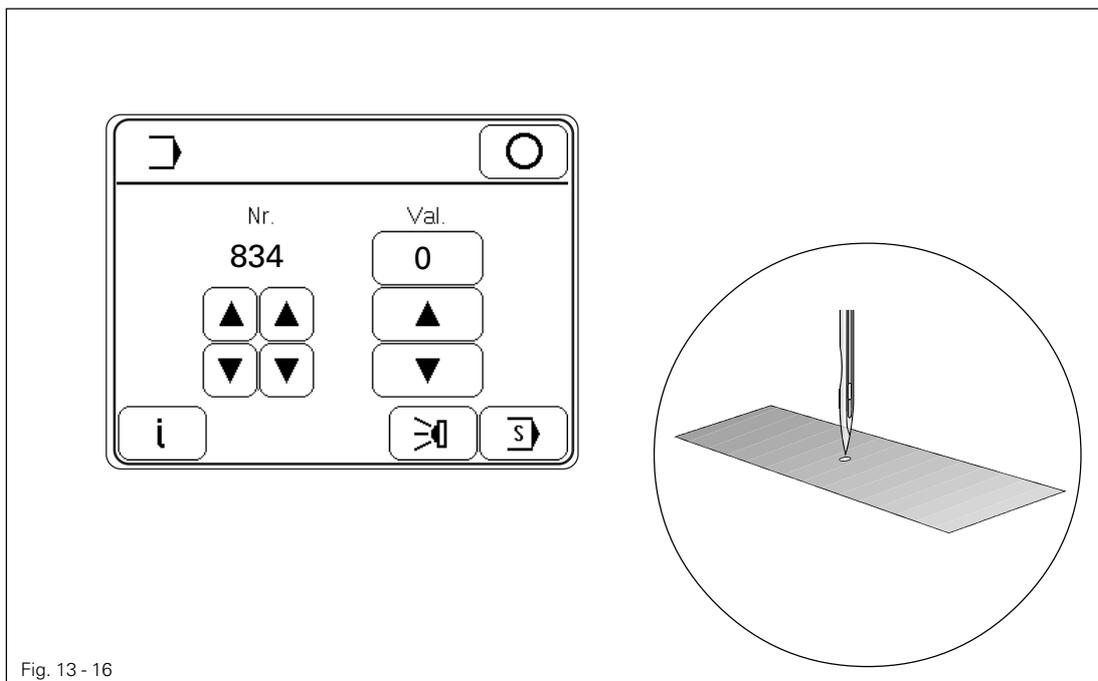


Fig. 13 - 16



- Unthread the machine.
- Switch on the machine.
- Place the workpiece under the presser foot.
- Let the machine sew at maximum speed and check the **requirement**.
(The workpiece should not move).
- Change the value for parameter **834** within the permissible values in accordance with the **requirement**.



The permissible values for parameter **834** are "1", "0" or "-1".

If the zero point of the feed regulator cannot be set by selecting one of the permissible values, the mechanical setting must be checked or corrected, see **Chapter 13.05.03 Zero position of the bottom feed dog**.



The zero position of the feed regulator is always recognisable in a range of 3 values. When making the adjustment, select the middle value.

- Switch off the machine.



Find more information on how to select and alter parameters and about descriptions (functions) of the individual parameters in **Chapter 13.11 Parameter settings**.

13.05.16 Stitch length adjustment forwards and in reverse

Requirement

At a maximum speed of 400 spm, the stitch length selected on the control panel should not differ from the actual stitch length when sewing forwards or in reverse.



- Thread the machine.
- Switch on the machine.
- Select the stitch length being used on the control panel.
- With parameter **607** limit the maximum speed to 400 spm.
- Set parameter **846** at **100**.
- Place the workpiece under the presser foot.
- Sew a seam with at least 20 stitches.
- Measure the length of the seam over 20 stitches and calculate the actual stitch length.
- If the difference, measured over 20 stitches, is larger than +/- 0.5 mm, the value for parameter 846 must be corrected.
- Take the value for parameter **846** from the table or calculate it with the aid of the formula:

$$\frac{\text{Set stitch length}}{\text{Actual stitch length}} \times 100$$

Stitch length 3,0 mm		Stitch length 2,5 mm		Stitch length 2,0 mm		Stitch length 1,5 mm	
Length over 20 stitches	Value for parameter 846 / 847	Length over 20 stitches	Value for parameter 846 / 847	Length over 20 stitches	Value for parameter 846 / 847	Length over 20 stitches	Value for parameter 846 / 847
58.5	102	48.5	103	38.5	104	28.5	105
59.0	102	49.0	102	39.0	103	29.0	103
59.5	101	49.5	101	39.5	101	29.5	102
60.0	100	50.0	100	40.0	100	30.0	100
60.5	99	50.5	99	40.5	99	30.5	98
61.0	98	51.0	98	41.0	97	31.0	97
61.5	98	51.5	97	41.5	96	31.5	95
62.0	97	52.0	96	42.0	95	32.0	94
62.5	96	52.5	95	42.5	94	32.5	92
63.0	95	53.0	94	43.0	93		
63.5	94	53.5	93	43.5	92		
64.0	94	54.0	93				
64.5	93	54.5	92				
65.0	92						

- Select the calculated value for parameter **846** and switch off the machine.





The adjustment of the reverse stitch length is carried out as described in the above work steps under parameter "847", with the reverse feed key pressed, see **Chapter 7.02 Keys on the machine head**. More information about selecting and changing parameters and explanations (functions) of the individual parameters is contained in **Chapter 13.11 Parameter settings**.

13.05.17 Bobbin winder

Requirement

1. With the bobbin winder on, the drive wheel 1 must engage reliably.
2. With the bobbin winder off, the friction wheel 5 must not be driven by the drive wheel 1.
3. The eccentric pin 3 should be positioned in the centre of the large bobbin chamber.

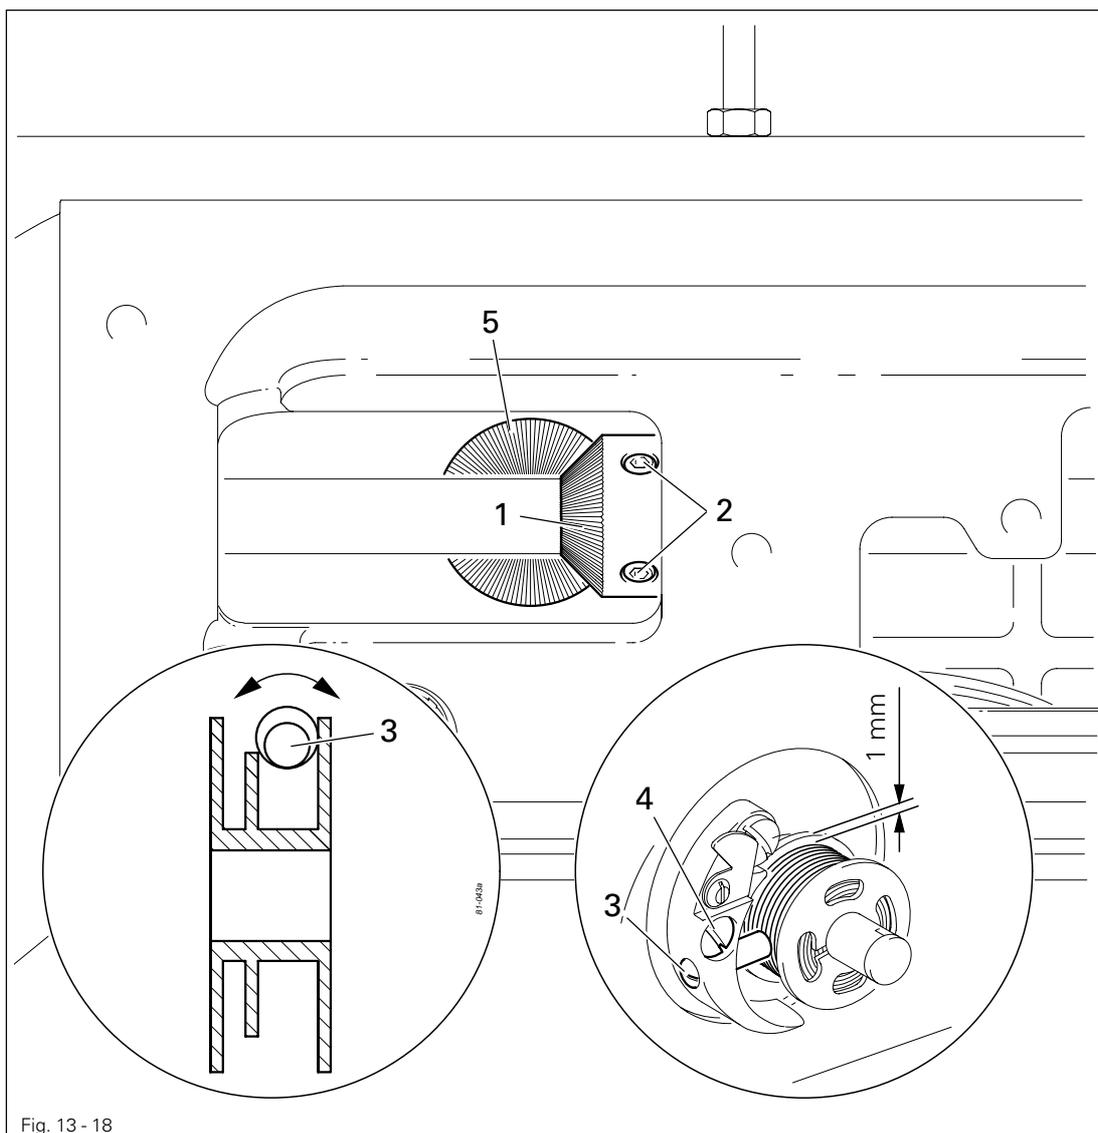

- Move drive wheel 1 (screws 2) in accordance with **requirement 1 and 2**.
- Place a bobbin on the bobbin winder, thread the bobbin and switch on the bobbin winder.
- Adjust pin 3 (screw 4) in accordance with **requirement 2** and turn it in accordance with **requirement 3**.

13.05.18 Mechanical limiting of the stitch length

Requirement

1. With the maximum stitch length set, the feed dog should not touch the needle plate cut-out when sewing forwards and in reverse.
2. The screws of the stops **1** (forwards sewing) and **3** (reverse sewing) should each have a clearance of **0.3 mm** to the corresponding metal edge.


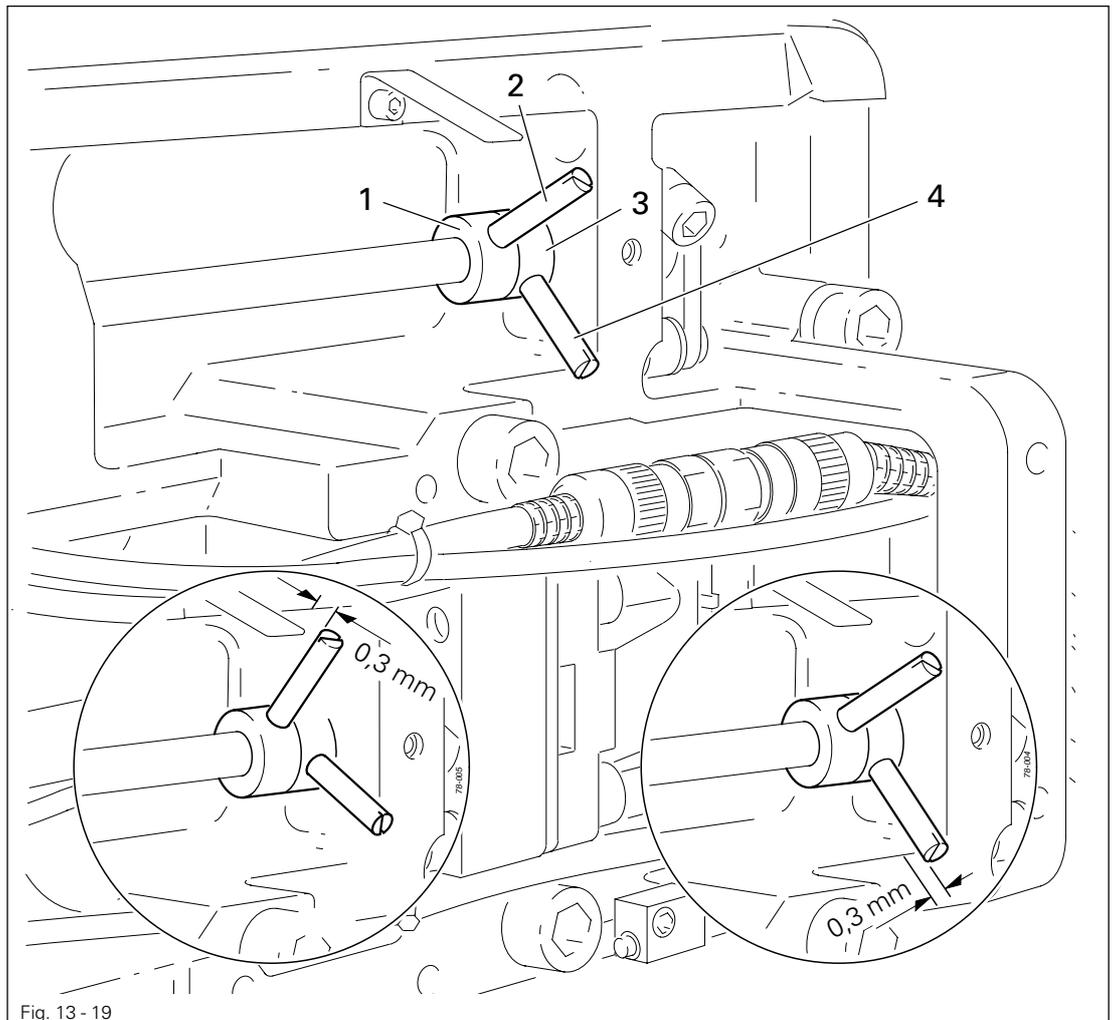


Fig. 13 - 19



- Switch on the machine and set parameter **849** in accordance with **requirement 1**, see **Chapter 13.11 Parameter settings**.



- Select the maximum stitch length on the control panel.
- Adjust stop **1** (screw **2**) in accordance with **requirement 2**.
- Holding down the reverse sewing key, sew 2 stitches, see **Chapter 7.02 Keys on the machine head**.
- Adjust stop **3** (screw **4**) in accordance with **requirement 2**.
- Switch off the machine.

Adjustment

13.05.19 Presser foot pressure

Requirement

The material must be fed reliably. In the process, pressure marks on the material must not be made.

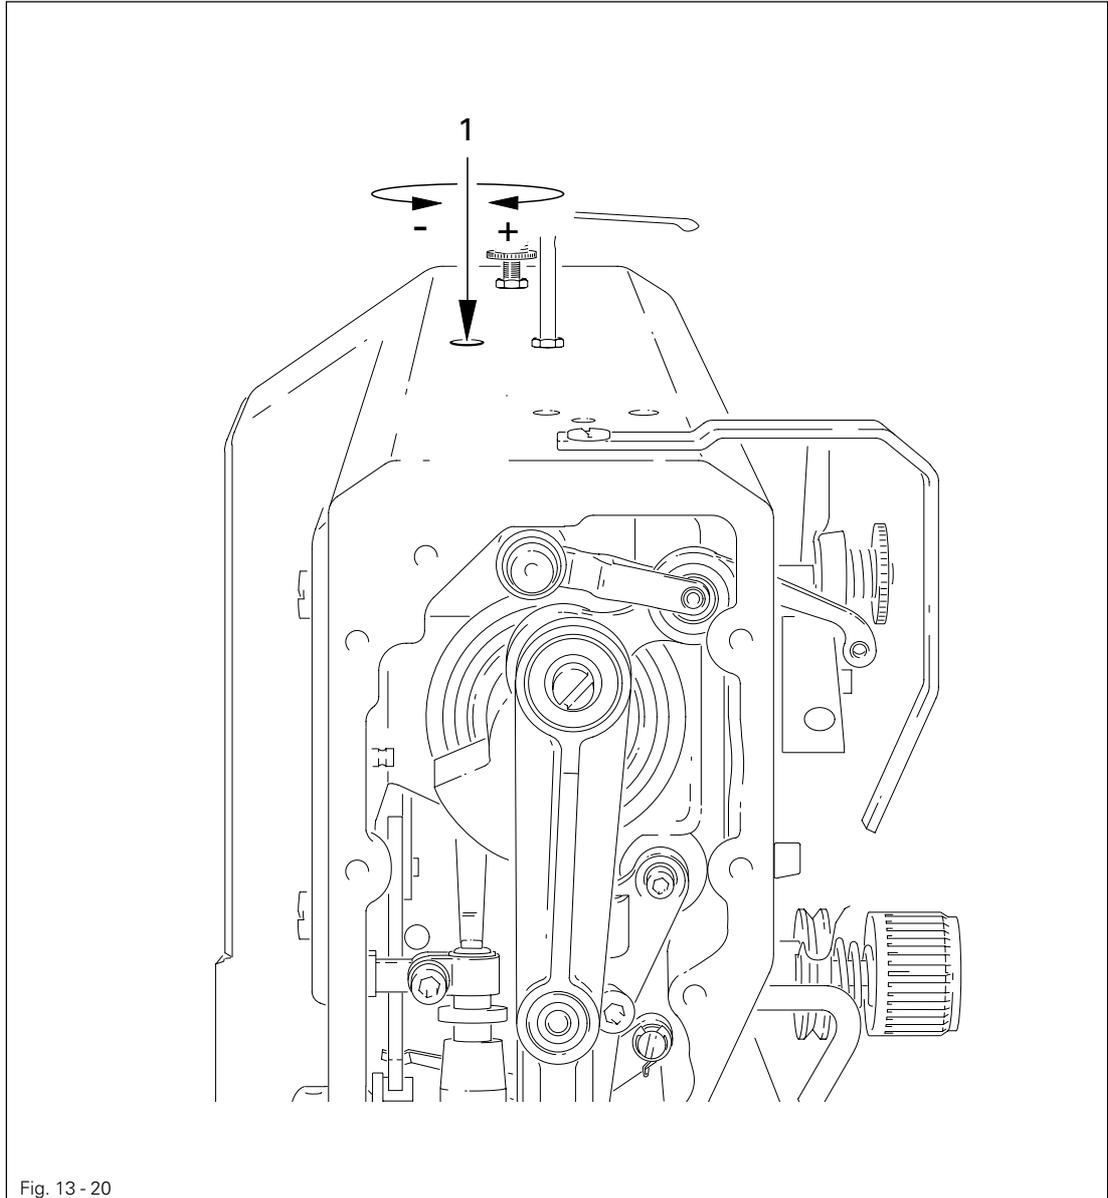


Fig. 13 - 20




- Turn screw 1 in accordance with the **requirement**.

13.06 Adjusting the thread trimming device -900/24

13.06.01 Adjusting the solenoid / preliminary adjustment of the control cam

Requirement

1. When solenoid **3** is completely extended, roller lever **4** should be at the lowest point of the control cam.
2. When the needle bar is positioned at 1.8 mm after b.d.c. (needle rise position), roller lever **4** should engage in the appropriate recess of the control cam.

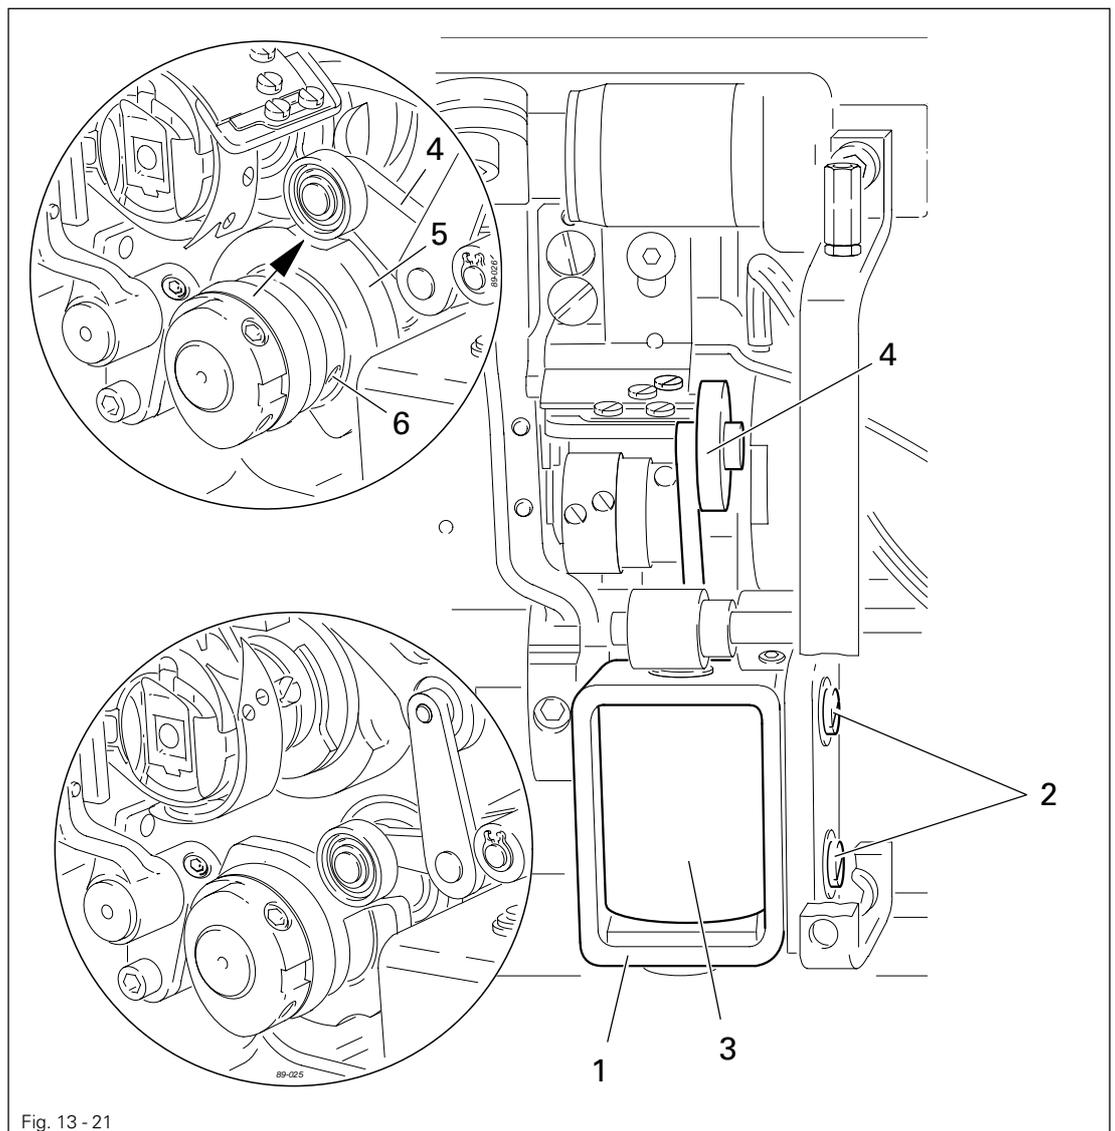


- Adjust solenoid holder **1** (screws **2**) in accordance with requirement 1.
- Adjust control cam **5** (screws **6**) in accordance with requirement 2.

13.06.02 Lateral alignment of the thread catcher

Requirement

1. The tip of the thread catcher 5 must point exactly to the center of the needle.
2. The thread catcher 5 must be horizontal. It must not graze anything when it is operating.

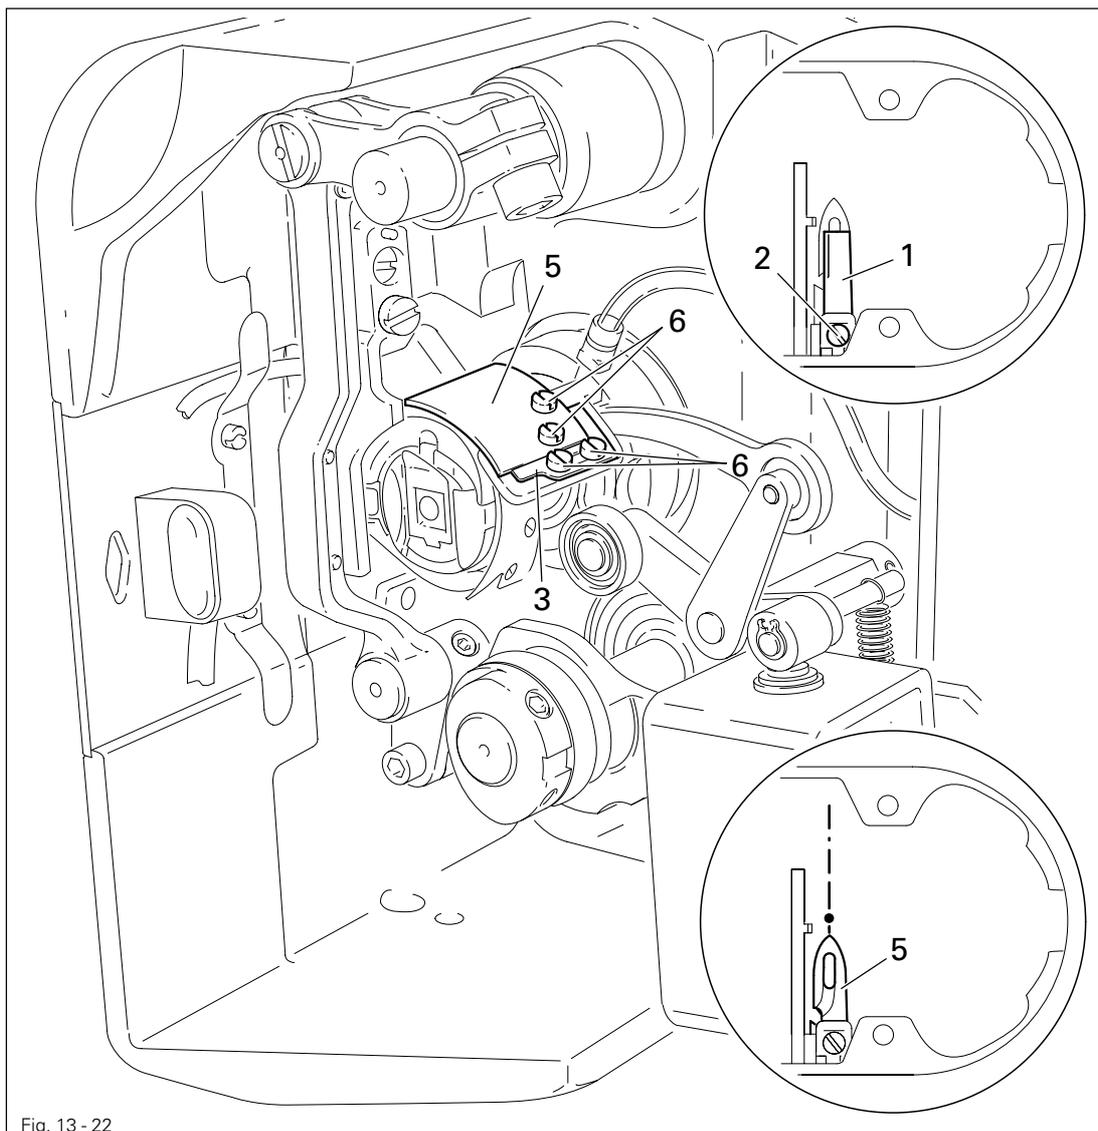

- Remove knife 1 (screw 2).
- Move needle bar to its BDC.
- Loosen stop 3 (screws 4).
- Position thread catcher 5 (screw 6) manually in front of the needle.
- Align thread catcher 5 (screws 7) according to the **requirements**.



For further adjustments, leave knife 1 removed and stop 3 loosened.

13.06.03 Knife position

Requirement

1. There must be a distance of **4 mm** between the cutting edge of the knife and the needle.
2. The right edge of the knife **1** must not extend beyond the right edge of the thread catcher (see arrow).

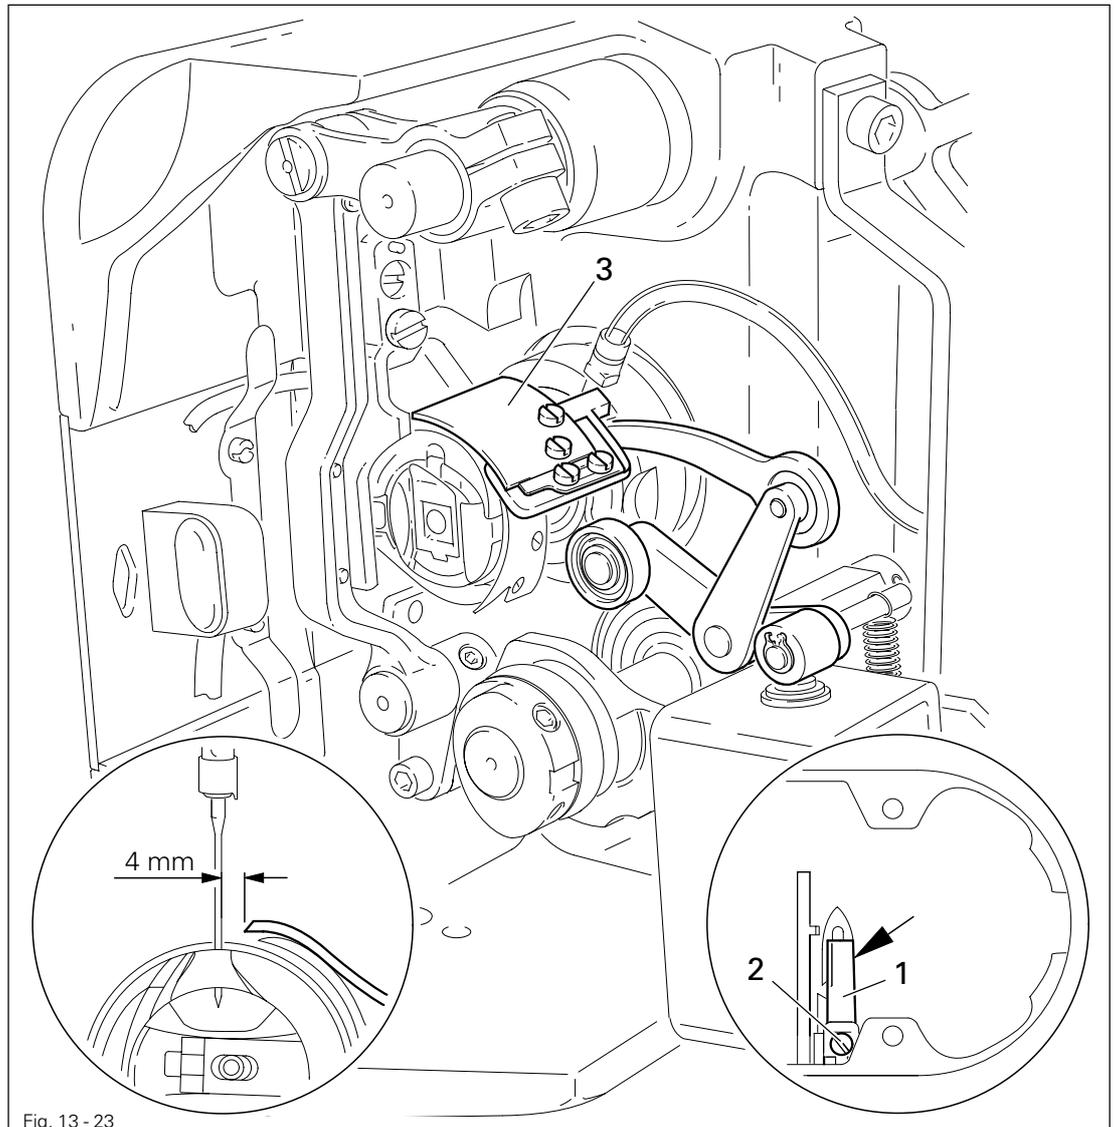


Fig. 13 - 23



- Bring the needle bar to BDC.
- Slide knife **1** under the locking tab and align according to **requirement 1**.
- Tighten screw **2** lightly.
- Adjust thread catcher carrier **3** by hand until the wedge point in the thread catcher is positioned just in front of the cutting edge of the knife.
- Align knife **1** according to **requirement 2** and tighten screw **2**.

Adjustment

13.06.04 Front point of reversal of the thread catcher

Requirement

At the front point of reversal of thread catcher 4, the tip of the thread catcher cutout should be 1 mm in front of the bobbin case position finger 5.

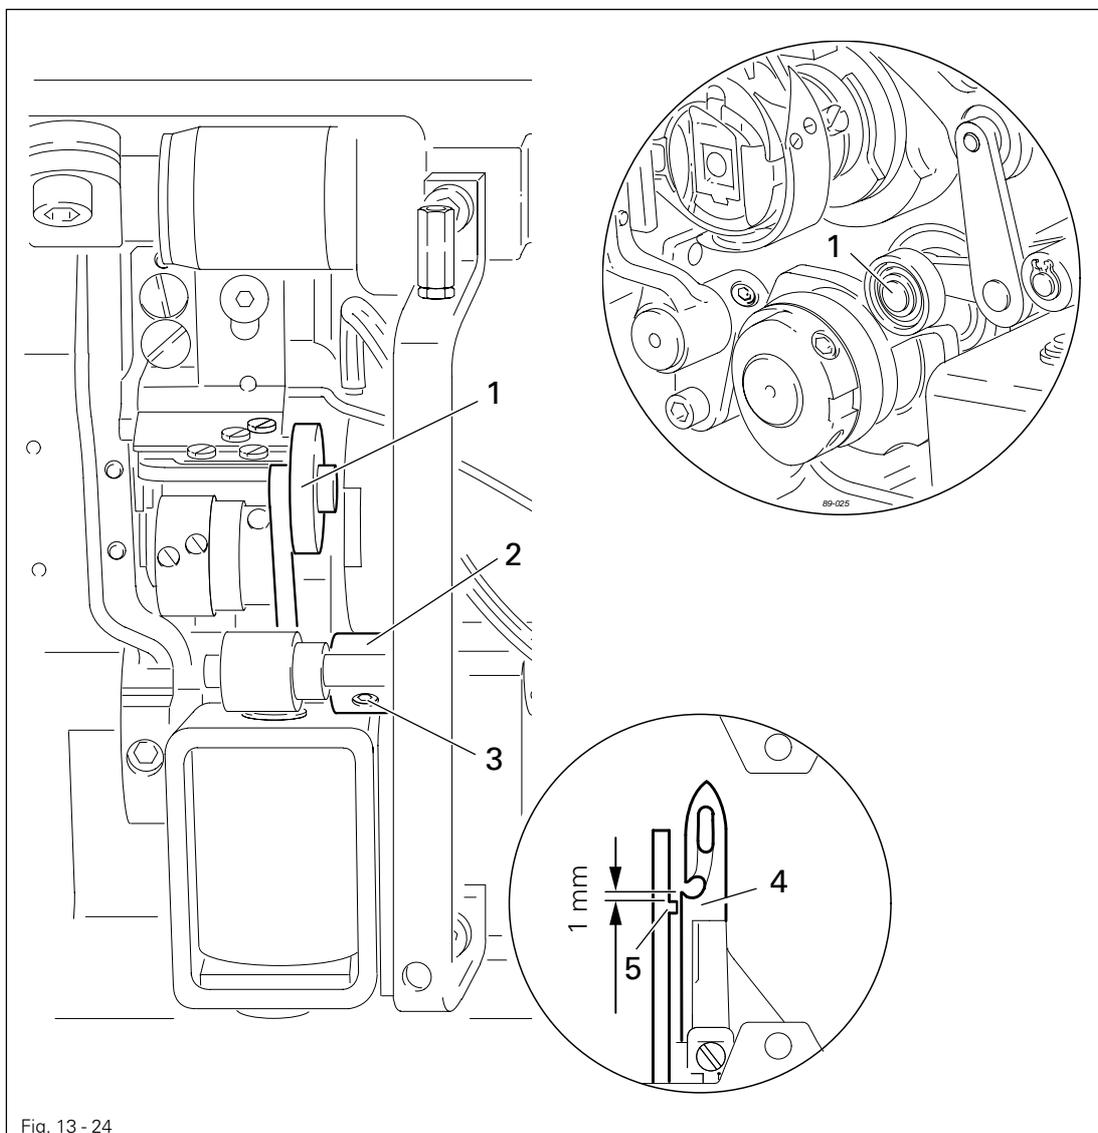


Fig. 13 - 24



- Position roller lever 1 at the lowest point of the control cam.
- Adjust bush 2 (screws 3) according to the requirement.

13.06.05 Manual trimming check

Requirement

Two threads must be cut perfectly both left and right in the cutout of thread catcher 1.

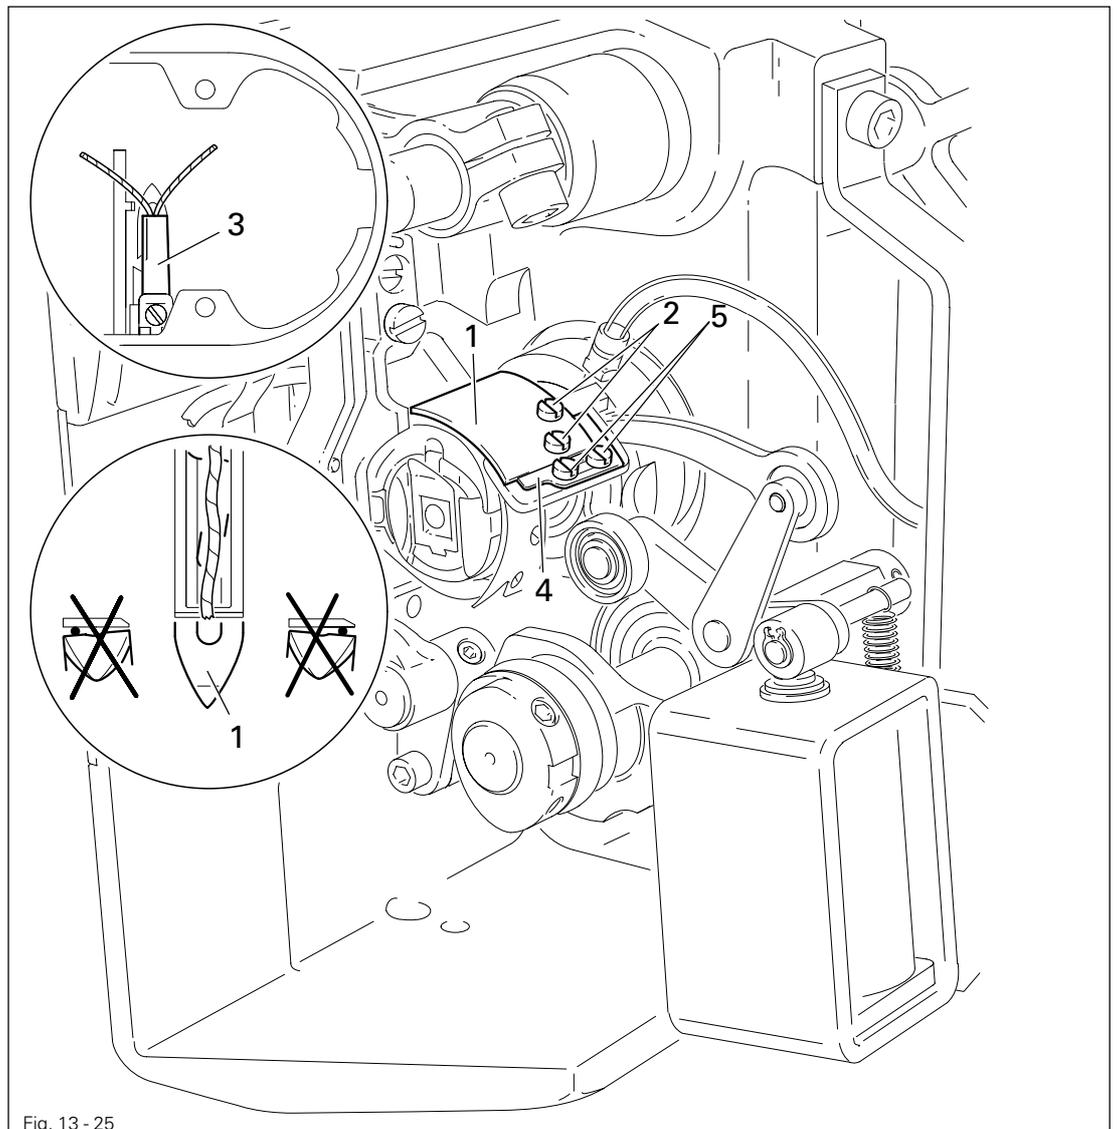


Fig. 13 - 25




- Move thread catcher 1 by hand to its front point of reversal.
- Double the thread and insert into catcher cutout.
- Carry out trimming operation manually.
- If the threads are not cut according to the **requirement**, align thread catcher 1 (screws 2) with knife 3 accordingly.
- Move stop 4 against thread catcher 1 and tighten screws 5.
- Check chapter 13.06.02 **Lateral alignment of the thread catcher**, and readjust if necessary.

Adjustment

13.06.06 Needle thread tension release

Requirement

1. The solenoid stroke should be **1.5 mm**.
2. When the solenoid **5** is operated by hand, there should be a distance of at least **0.5 mm** between the tension disks **6**.

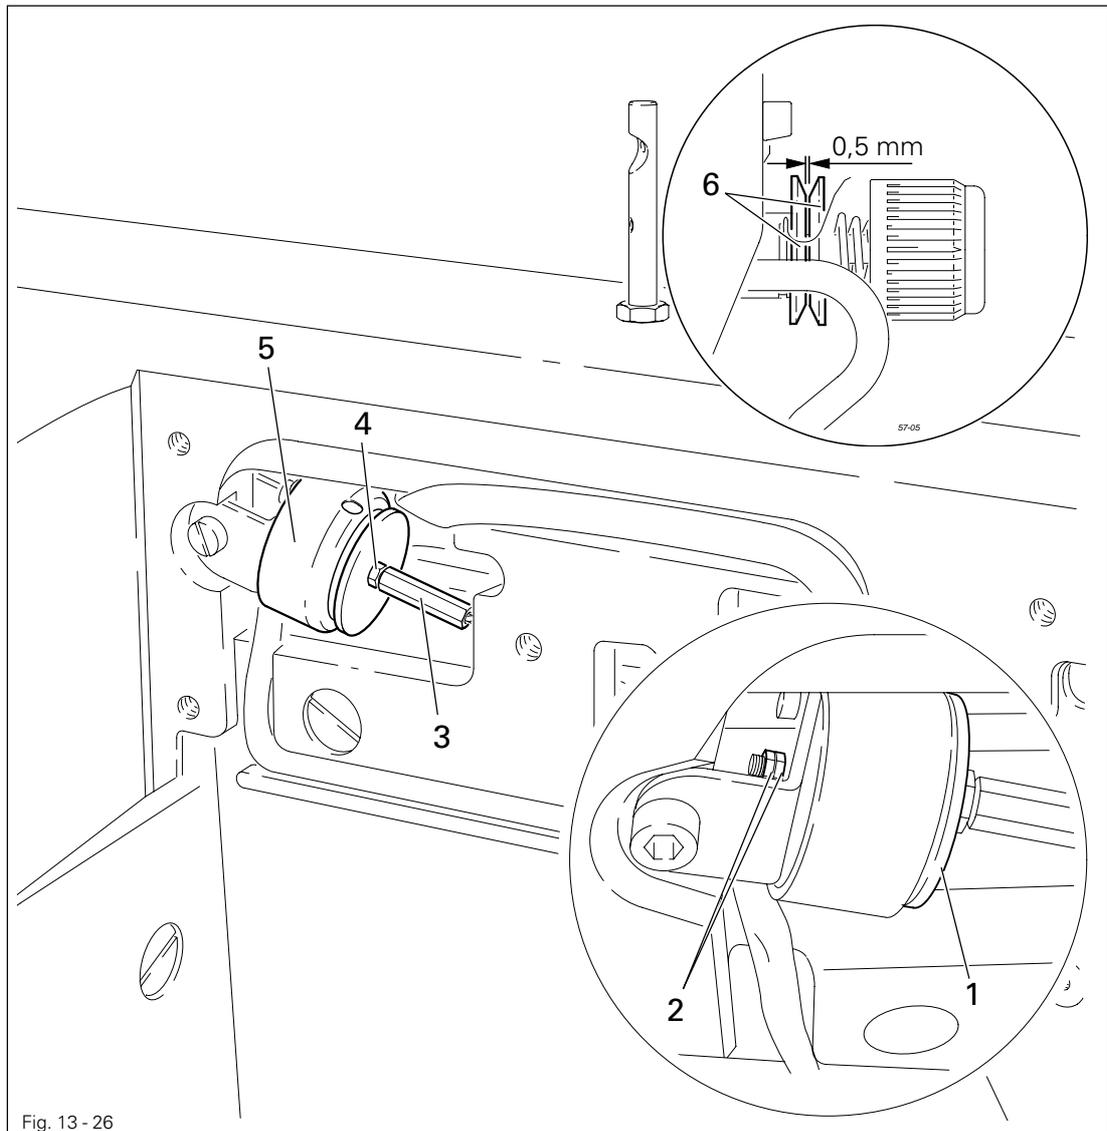


- Adjust disk **1** (nuts **2**) in accordance with **requirement 1**.
- Adjust screw **3** (nut **4**) in accordance with **requirement 2**.

13.06.07 Readjusting the control cam

Requirement

When the take-up lever is in its t.d.c., control cam 1 should have moved thread catcher 3.

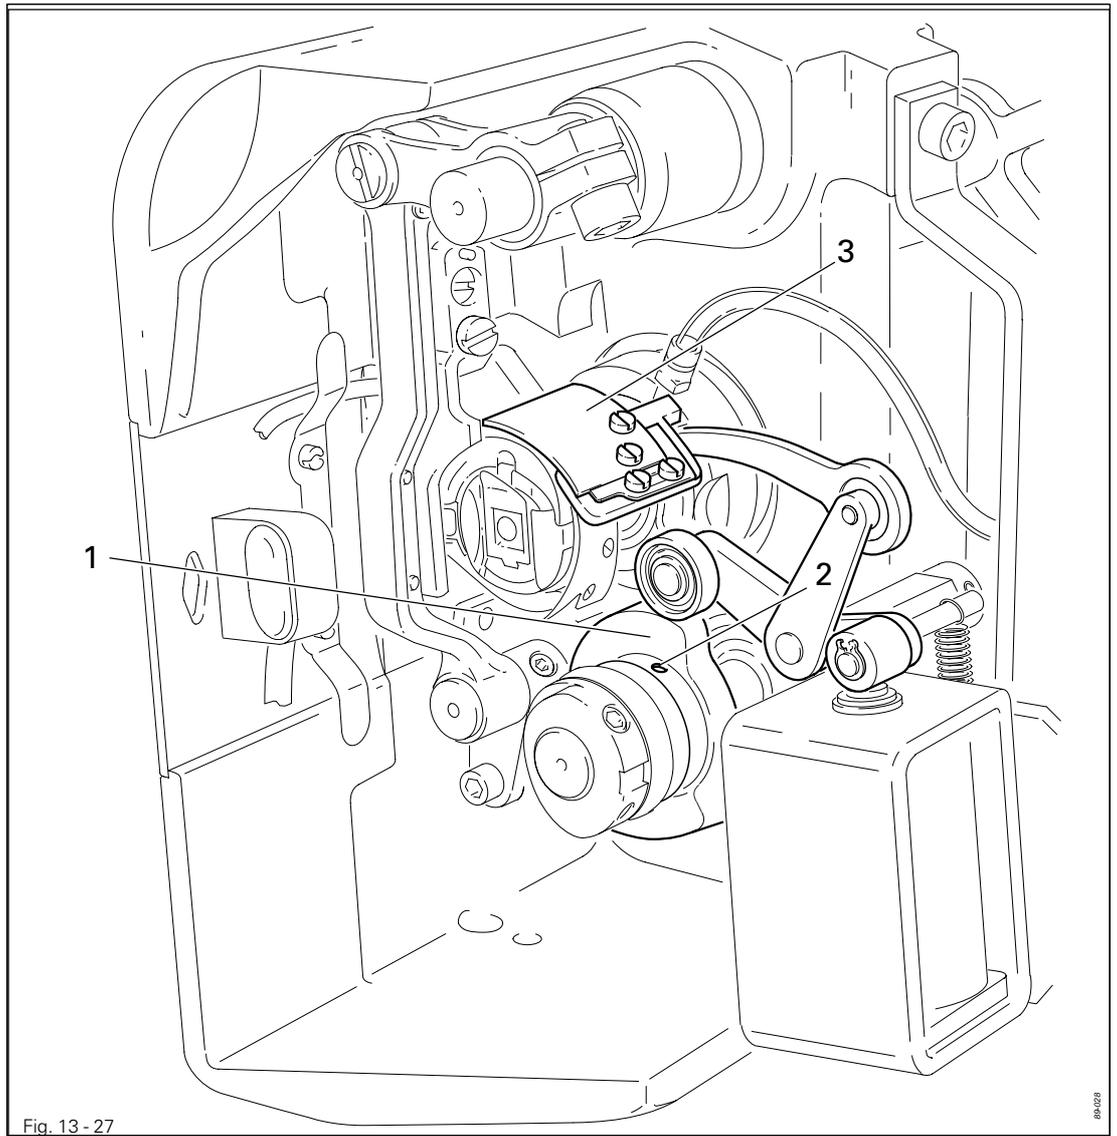

- Adjust control cam 1 (screws 2) according to the requirement.

13.07 Aligning the light transmitter

Requirement

When the workpiece is positioned, the transmitters **PS2** and **PS1** should display the same value (same receiving power).



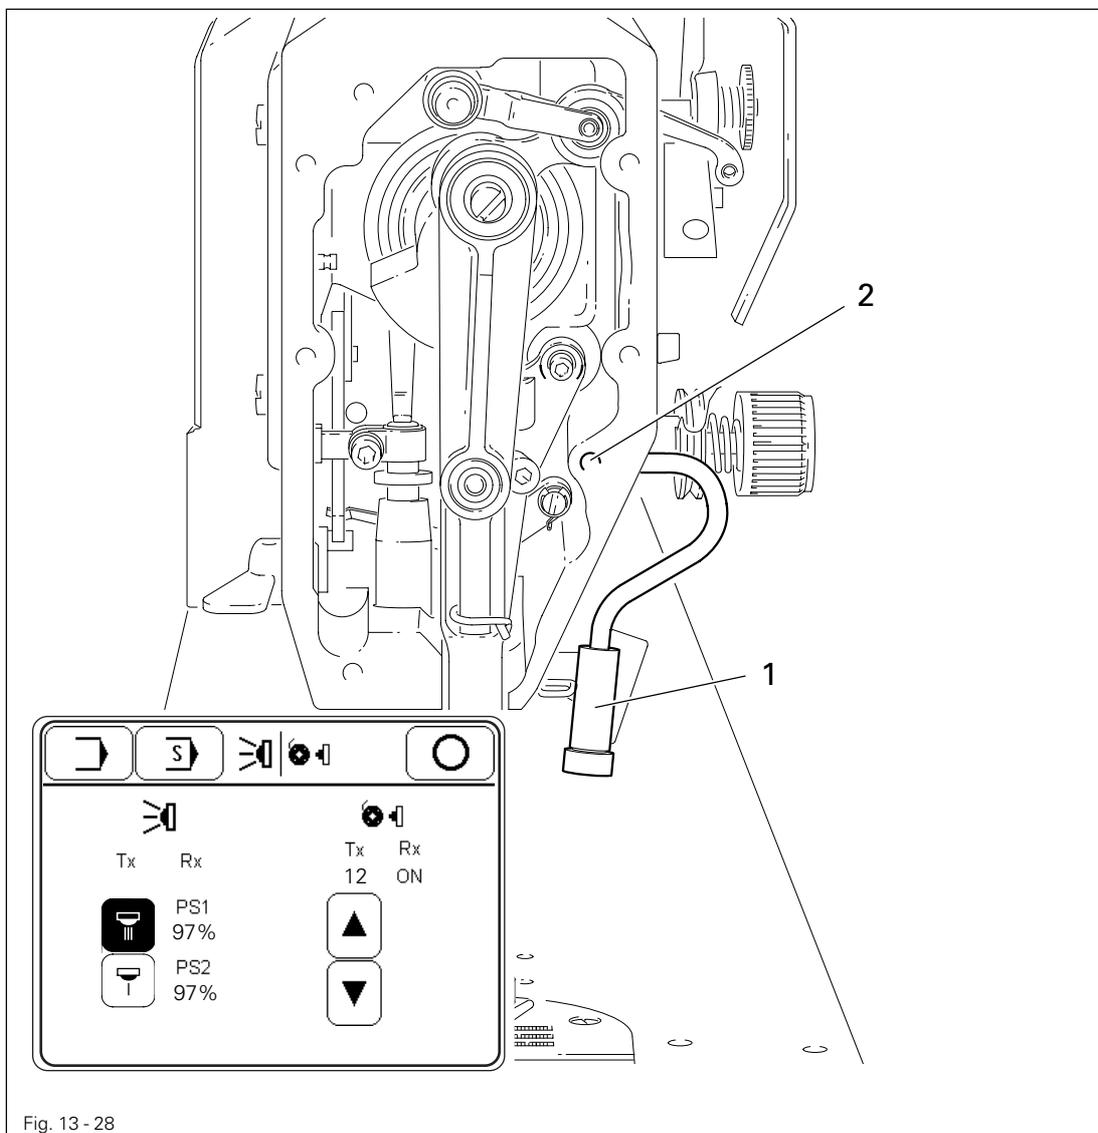


Fig. 13 - 28




- Switch on the machine.



- Call up the input mode.



- Call up the service menu.



- Call up the sensor menu.

- Adjust light transmitter **1** (screw **2**) in accordance with the **requirement**.
- Switch off the machine.

13.08 Adjustment of the transmitted light sensors


Requirement

The difference between one and several material plies should be recognised.



- Switch on the machine.



- Call up the input mode.

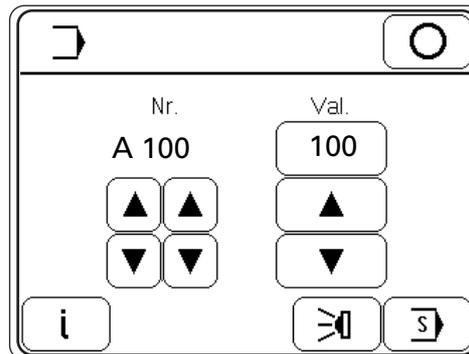

- Call up the menu for adjusting the transmitted light sensors.

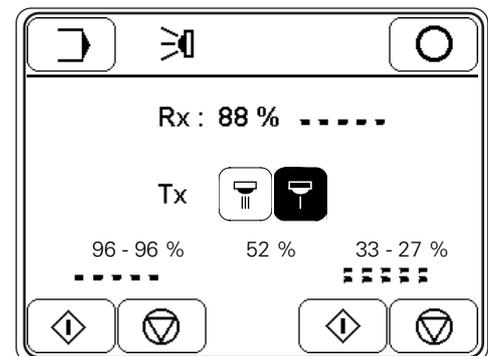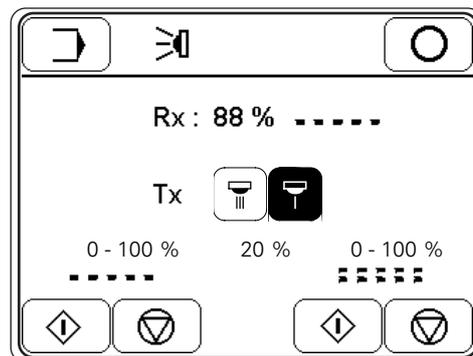



- Start the adjustment without material.



- End the adjustment without material.

=====



- Start the adjustment with material (e.g. cuff).

- Move the cuff to and fro under the sensors for a short time.



- End the adjustment for with material.



- If necessary, adjust the transmitting power.



- End the adjustment of the transmitted light sensors.

Requirement

When the thread is pulled, the value under "Rx" must change from "ON" to "OFF" (perfect transmission of the incoming signal of the bobbin thread sensor).


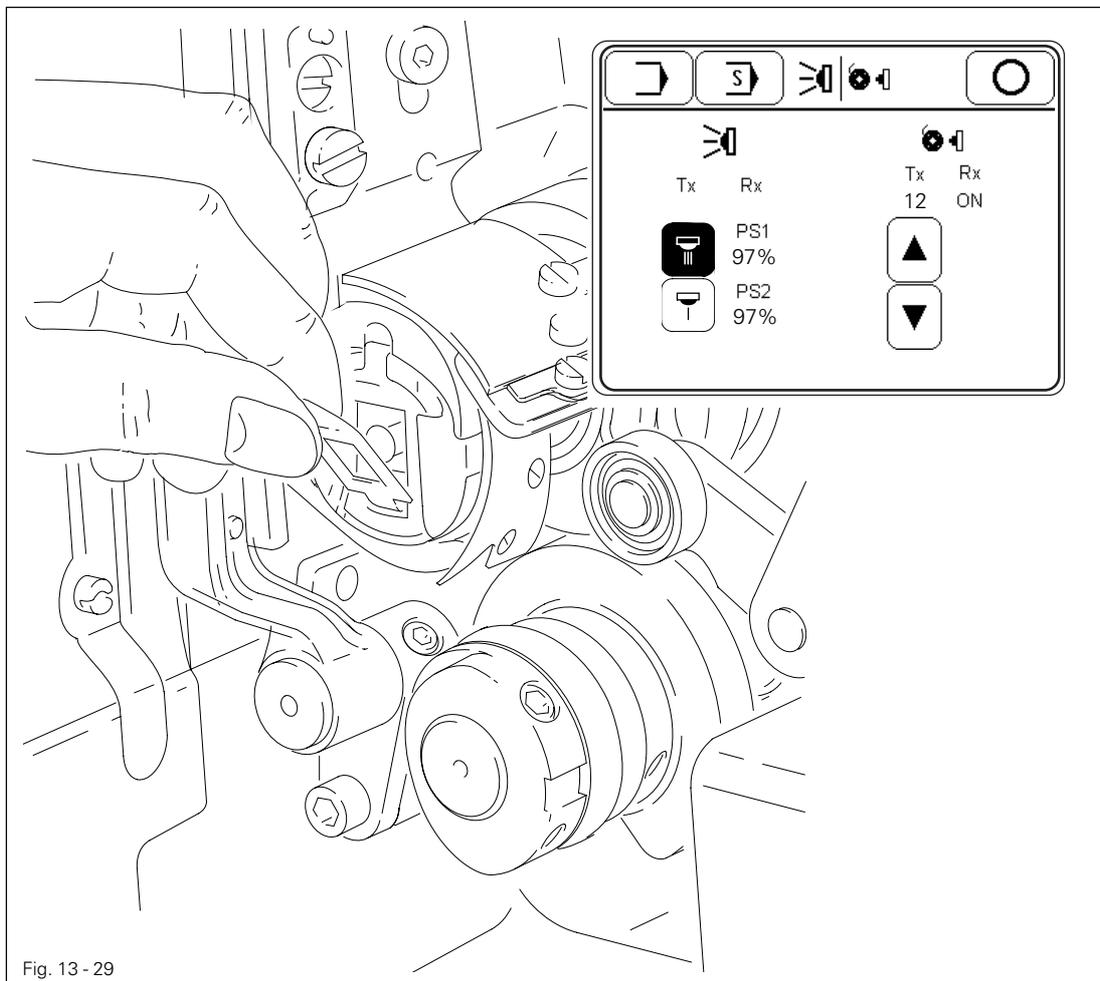


Fig. 13 - 29




- Place the bobbin in the bobbin case and the bobbin case in the hook.
- Switch on the machine.



- Call up the input mode.



- Call up the service menu.



- Call up the sensor menu.

- Pull the thread by hand and check the **requirement**.



- If necessary, increase or reduce the transmitting power (Tx).




- Switch off the machine.

13.10 Adjusting the electric edge guide

Requirement

When a seam depth of 1.0 mm is selected (using the control panel), guide unit 3 should be at a distance of **approximately 0.1 mm** from sewing foot 4.

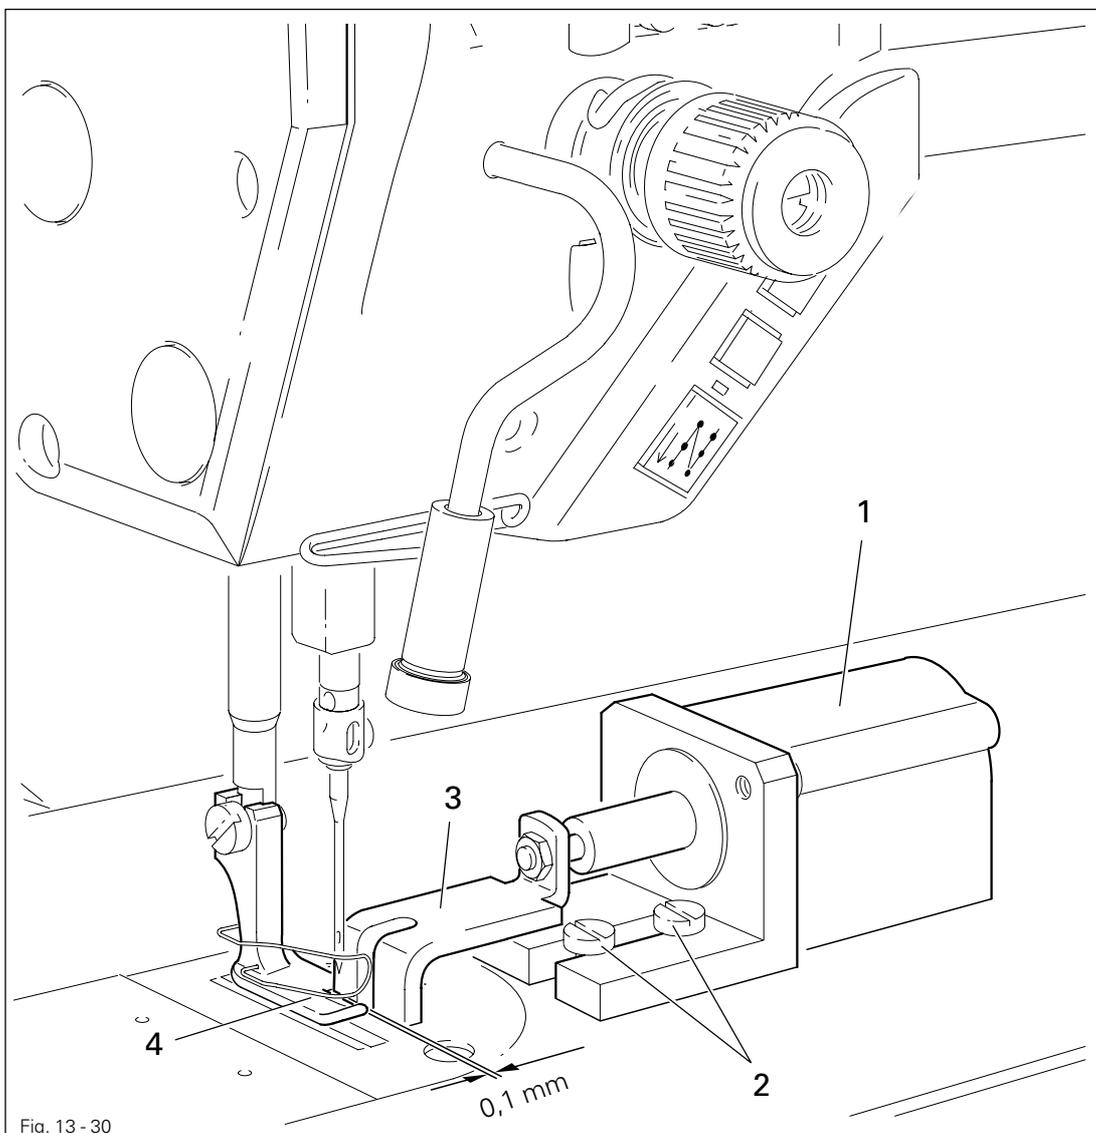


- Switch on the machine.
- Set the edge guide position at 1.0 mm, see **Chapter 9.07 Entering the edge guide position**.
- Adjust edge guide 1 (screws 2) according to the **requirement**.
- Switch off the machine.

Adjustment



13.11 Parameter settings

13.11.01 Example of a parameter input



- Switch on the machine.



- Call up the input mode.

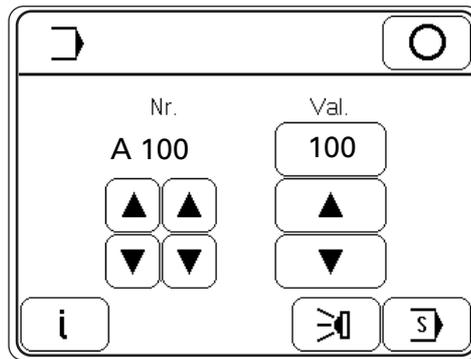

- Select parameter "660" (bobbin thread control).

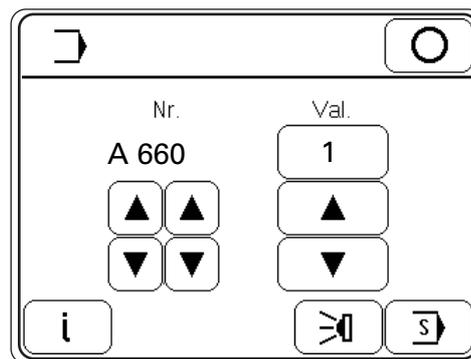


- Switch on the bobbin thread control (value "1").





- Conclude the parameter input.

13.11.02 Selecting the user level



- Switch on the machine.



- Call up the input mode.

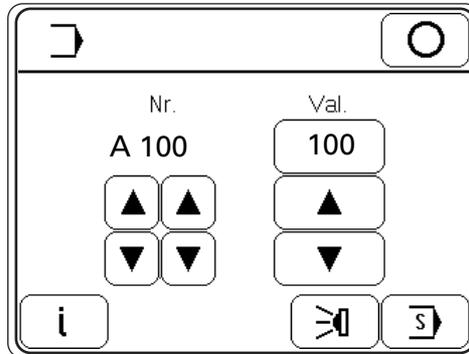

- Call up parameter "798".

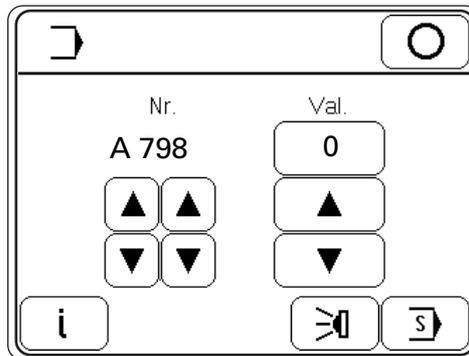

- By selecting the appropriate value for parameter **798**, the user level is determined and shown in the display in front of the current parameter.

- "0" = Operator level A
- "1" = Mechanic level B
- "11" = Service level C



- End the parameter input. The altered values are stored and the controller switches to the sewing mode.

Adjustment

13.11.03 List of parameters

Group	Parameter	Description	User level	Setting range	Set value
0	10	Bobbin thread monitor-current level	C	8 - 16	12
	11	Bobbin thread monitor-stitch counter (starting value)	C	0 - 255	32
1	100	Control panel contrast [%]	A	90 - 110	100
	101	Control panel key response signal 0=tone off/1=tone off/key inverted 2=tone on/3=tone on/key inverted	A	0 - 3	2
	102	Start backtacks forwards	C	0 - 9	3
	103	Start backtacks in reverse	C	0 - 9	3
	105	Start backtacks speed	B	100 - 1500	900
	106	Start backtacks speed ON = pedal-controlled OFF = set with param. "105"	C	ON - OFF	OFF
	107	Pedal-controlled speed start backtacks ON = limited with parameter "105" OFF = limited with parameter "607"	C	ON - OFF	OFF
	108	End backtacks in reverse	C	0 - 9	3
	109	End backtacks forwards	C	0 - 9	3
	110	End backtacks speed	B	100 - 1500	1000
	111	No. of stitches from bright light barrier to seam end in manual sewing	A	1 - 255	6
	113	Start with light barrier ON = only when light barrier is dark OFF = also when light barrier is bright	B	ON - OFF	ON
	114	After light barrier or stitch counting ON = stop OFF = autom. end backtacks and seam end	C	ON - OFF	OFF
	116	Soft start stitches (soft start)	A	0 - 10	1
	117	Speed for soft start stitches	B	180 - 1200	400
148	Start backtacks ON = double / OFF = single	A	ON - OFF	ON	
149	End backtacks ON = double / OFF = single	A	ON - OFF	ON	

Group	Parameter	Description	User level	Setting range	Set value
1	199	Speed for light barrier compensating stitches [min-1]	B	300 - 1500	1200
2	206	Seam interruption with Pedal -2	C	ON - OFF	OFF
	220	Speed level 12 (Poti-reserve) [min-1]	A	300 - 5000	4500
	221	Speed limitation for seam programs [min-1]	B	300 - 5000	4500
	222	Speed constant for seam programs [min-1]	B	300 - 5000	3000
	298	Number of reduced stitches	A	1 - 3	1
	299	Edge guide position in manual sewing [1/10 mm]	A	10 - 185	185
3	323	Edge guide position min [1/10 mm]	B	10 - 50	10
	325	Edge guide position max [1/10 mm]	B	165 - 185	185
4	419	Bartacks: ON = inverted OFF = suppressed	C	ON - OFF	ON
	478	Corner stitch ON = accurate OFF = fast	C	ON - OFF	ON
	492	Number of seam programs	B	1 - 99	99
	493	Number of seam segments per seam program	B	1 - 15	15
5	554	Presser foot after seam segment with pedal forwards: ON = raised / OFF = lowered	C	ON - OFF	ON
	584	Backtack stitches ON = fourfold / OFF = normal	C	ON - OFF	OFF
6	601	Cutting:	C	ON - OFF	ON
	602	ON = Cutting with pedal -1 OFF = Cutting with pedal -2	C	ON - OFF	OFF
	603	ON = Pedal stops after cutting OFF = immediate start after end of seam	C	ON - OFF	ON
	604	Cutting: ON = forwards after semi end backtack OFF = in reverse too	C	ON - OFF	ON
	605	Speed display	B	ON - OFF	OFF

Adjustment

Group	Parameter	Description	User level	Setting range	Set value
6	606	Speed level 1 (min.) [min-1]	B	30 - 550	180
	607	Speed level 12 (max.) [min-1]	B	300 - 5000	4500
	609	Cutting speed [min-1]	B	60 - 500	180
	618	Reversing angle	C	ON - OFF	OFF
	624	Start inhibitor:	C	ON - OFF	ON
	642	Presser foot – time from switch-on to tension reduction (tacting)	C	10 - 50	50
	651	Automatic lowering of presser foot	C	ON - OFF	ON
	660	Bobbin thread monitoring 0 = off 1 = on 2 = bobbin thread reverse counter on	A	0 - 2	1
	668	Thread wiper = 1, Thread clamp = 2, off = 0	B	0 - 2	2
7	700	Logical zero mark [increments]	B	0 - 127	0
	702	Needle position (needle lowered)	B	0 - 30	15
	703	Needle position (take-up lever raised)	B	100 - 127	113
	705	Needle position (end of cutting signal)	B	80 - 127	98
	706	Needle position (start of cutting signal)	B	40 - 80	68
	707	Needle position (start thread tension release)	B	40 - 80	70
	710	Needle position (needle raised without cutting)	B	80 - 127	106
	715	Operating time thread wiper [ms]	B	0 - 2550	120
	718	Moment of standstill brake (rest brake)	B	0 - 100	0
	719	Presser foot-holding current	B	0 - 50	40
	720	Cutting-holding current	B	0 - 50	40
	721	Feed converter-holding current	C	0 - 50	40
	722	Acceleration ramp: 1 = flat, 50 = steep	C	1 - 50	50
	723	Brake ramp: 1 = flat, 50 = steep	C	4 - 50	50

Group	Parameter	Description	User level	Setting range	Set value
7	729	Start delay after lowering presser foot [ms]	B	0 - 2550	120
	730	Lift delay for presser foot after seam end [ms]	B	0 - 2550	0
	731	Stitch count delay for end backtack	C	0 - 2550	70
	732	Delay time for cutting after single end backtack [ms]	C	0 - 2550	30
	733	Delay time from switch on feed conversion to speed start [ms]	C	0 - 200	30
	739	Delay time for speed after start backtack or stitch condensation [ms]	C	0 - 2550	200
	740	Stitch count delay for end backtack [ms]	C	0 - 2550	60
	760	Stitch count to bobbin thread monitor (machine stop in needle lowered position)	A	0 - 50000	1000
	761	Extension thread tension release/pull thread [ms]	B	0 - 2550	0
	791	Stitch count delay for start backtack [ms]	C	0 - 2550	30
	797	Hardware test	B	ON - OFF	OFF
	798	User level 0 = user level A 1 = mechanic level C 11 = service level C	A	0 - 11	0
	799	Selected machine class 1 = 2481-980 2 = 2483-980 3 = 2438-980 4 = 2481-906	C	1 - 4	1
800	Motor rotating direction when looking at V-Celt pulley 1= anti-clockwise, 0 = clockwise	C	ON - OFF	ON	
8	801	Reversing angle (618 = ON)	C	5 - 106	16
	831	Start delay for stepping motor 2 [increments]	B	0 - 10	5
	832	Needle position (feed start)	B	0 - 127	15
	833	Needle position (feed end)	B	0 - 127	67

Adjustment

Group	Parameter	Description	User level	Setting range	Set value
8	834	Feed regulator-balance [1 semi-step = 5/100mm]	B	-5 - 5	0
	835	Reduced single stitch [%]	A	0 - 100	50
	843	Distance sensor 1 to sensor 2 [1/10mm]	B	75 - 85	80
	844	Distance sensor 1 to needle [2/10mm]	B	80 - 300	200
	845	Speed-controlled stitch length adjustment [% pro 1000 min-1]	B	0 - 3	1
	846	Feed regulator characteristic line adjustment for forward stitch length [%]	A	80 - 110	▲
	847	Feed regulator characteristic line adjustment for reverse stitch length [%]	A	80 - 110	▲
	849	Maximum stitch length [1/10 mm]	A	0 - 60	25
	862	Current for stepping motor axis 1	A	16 - 63	32
	863	Current for current reduction of stepping motor axis 1	A	8 - 63	32
	864	Proportional amplification of the speed control (general)	B	0 - 2500	20
	880	Starting current main drive	C	1 - 10	8
	881	Filter parameter for position controller	C	0 - 12	5
	884	Proportional amplification of the speed control (general)	C	1 - 50	25
	885	Integral amplification of the speed control	C	1 - 50	35
	886	Proportional amplification of the position controller	C	1 - 50	30
	887	Differential amplification of the position controller	C	1 - 50	30
	889	Time for position control (0 = permanently)	C	0 - 2550	200
	890	Proportional amplification of higher ranking speed controller for standstill brake (rest brake)	C	1 - 50	25
891	Proportional amplification of subordinate speed controller for standstill brake (rest brake)	C	1 - 50	20	

▲ = By the factory adjusted

Group	Parameter	Description	User level	Setting range	Set value
9	901	Cutting release-speed	C	180 - 500	400
	956	Current for stepping motor axis 2	B	30 - 63	56
	957	Current for current reduction of stepping motor axis 2	B	15 - 48	39
	958	Current reduction time stepping motor axis 2	B	0 - 2500	2000
	978	Delay power off stepping motor 2	C	0 - 99	0
	979	Delay power off stepping motor 1	C	0 - 99	0
	985	Position for thread clamp on	B	0 - 127	34
	986	Position for thread clamp off	B	0 - 127	103

13.12 Explanation of the error messages

Message	Description
E001	Pedal not in neutral position
E003	SM 1 (for reference)
E004	SM 2 (for reference)
E009	Start inhibitor at standstill
E010	Incorrect machine class
E040	Transmitted light sensors
E045	Bobbin thread monitoring
E062	Short circuit 24V
E063	Overload switch power supply
E064	Network monitoring
E065	Extint low in operation
E066	Short circuit
E067	Power off
E068	Extint low in operation
E069	No increments
E070	Motor blocking
E071	No incremental connector
E072	No set value connector
E073	Motor running interrupted
E075	Controller locked
E092	Start inhibitor when motor running
E151	System
E155	Sewing motor
E156	Time out communication
E157	Stepping motor ramps

Message	Description
E158	Stepping motor frequency
E170	Incorrect main drive transmission
E171	Logical zero mark invalid
E172	Communication error main drive
E175	Main drive start
E200	Brake path too short
E201	Main drive position
E222	Time-out monitoring

13.13 Service menu

In the service menu information is displayed about the machine's inputs and outputs, the values of both pedals and the balance wheel position.

In addition the following functions can also be carried out.


- Switch on the machine.



- Call up the input mode.



- Call up the service menu.

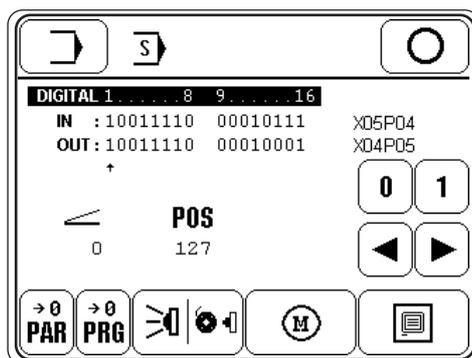

Description of the functions



Input mode

Quit the service menu and call up the input mode.



Sewing mode

Quit the service menu and call up the sewing mode.



Set/reset outputs

Using the arrow functions select the desired output and set "function 1" or reset "function 2".




Parameter reset

All parameters are reset to the default values.




Program reset

All programs are reset to the default values.



Sensor menu

After this function has been called up, the transmitted light sensors and the bobbin thread monitor sensors can be set.



Motors

After this function has been called up, the stepping motors for the feed band, the feed wheel and the sewing motor can be moved.



Control panel

See Chapter 9.12 Adjusting the control panel.

Plug assignment**CAN**

Pin-No.	Comment	Function	Plug marking	Signal marking
X11A.2	CAN	CAN-	CAN_HIGH	CAN_TxD
X11A.3	CAN			Gnd
X11A.7	CAN	CAN+	CAN_LOW	CAN_RxD

Set value transmitters

Pin-No.	Comment	Function	Plug marking	Signal marking
X11B.4	pedal			+5V
X11B.5	pedal			+5V
X11B.6	pedal			Gnd
X11B.7	pedal 2	set value		SW2 (analog)
X11B.8	pedal 1	set value		SW1 (analog)
X11B.9	pedal			Gnd

Sensors

Pin-No.	Comment	Function	Plug marking	Signal marking
X15.1	Sensors	current source UFW		P7.3
X15.2	Sensors	DLS outside (LS2)		P5.3 (analog)
X15.3	Sensors	DLS inside (LS1)		P5.6 (analog)
X15.4	Sensors	ZZ-Sensor 2438	E9	E9/Port_E9
X15.5	Sensors	current source DLS	A10/PortA10	O10
X15.6	Sensors		+5V	+5V
X15.7	Sensors	UFW-Out		UFW_MESS
X15.8	Sensors		+24V	+24V
X15.9	Sensors		0V	0V

RS232

Pin-No.	Comment	Function	Plug marking	Signal marking
X1A.1	BDF-S2/T1		+24V	+24V
X1A.2	BDF-S2/T1		RxD	RxD
X1A.3	BDF-S2/T1		TxD	TxD
X1A.4	BDF-S2/T1		+5V	+5V
X1A.5	BDF-S2/T1		Gnd	Gnd
X1A.6	BDF-S2/T1		-	
X1A.7	BDF-S2/T1		RTS	RTS
X1A.8	BDF-S2/T1		CTS	CTS
X1A.9	BDF-S2/T1		Gnd	Gnd

Adjustment

OTE

Pin-No.	Comment	Function	Plug marking	Signal marking
X1B.1	OTE			Gnd
X1B.2	OTE	SSI-Out (TxD)		SSOut
X1B.3	OTE	SSI-Clock		SSClk
X1B.4	OTE			+24V
X1B.5	OTE			+5V
X1B.6	OTE	SSI-strobe (Mode)		SSStr
X1B.7	OTE	SSI-In (Rx/D)		SSIn
X1B.8	OTE	(light barrier 1)		(LS1)
X1B.9	OTE			

Incremental transmitter

Pin-No.	Comment	Function	Plug marking	Signal marking
X3.1	incr.transm.	track A 256inc./rev.		FA_MINI
X3.2	incr.transm.	track B 256inc./rev.		FB_MINI
X3.3	incr.transm.	SyMa 360°/256		
X3.4	incr.transm.	Autodetect		ADTC
X3.5	incr.transm.			+5V
X3.6	incr.transm.			+5V
X3.7	incr.transm.			Gnd
X3.8	incr.transm.	Ext. SyMa 180°		EXTSM_MINI
X3.9	incr.transm.			Gnd

Stepping motor 1 (edge guide)

Pin-No.	Comment	Function	Plug marking	Signal marking
X4B.1	SM1/FSL	phase A.2	A11	
X4B.2	SM1/FSL	phase A.1	A12	
X4B.3	SM1	phase B.2	A21	
X4B.4	SM1	phase B.1	A22	
X4B.5	SM1			
X4B.6	SM1			
X4B.7	SM1	+5V (with 120R ?)		
X4B.8	SM1	reference SM1	SM_REF1	SM_REF1
X4B.9	SM1	Gnd		

Stepping motor 2 (stitch length)

Pin-No.	Comment	Function	Plug marking	Signal marking
X4A.1	SM2	Phase A.2	B11	
X4A.2	SM2	Phase A.1	B12	
X4A.3	SM2	Phase B.2	B21	
X4A.4	SM2	Phase B.1	B22	
X4A.5	SM2			
X4A.6	SM2			
X4A.7	SM2	+5V (with 120R ?)		
X4A.8	SM2	reference SM2	SM_REF2	SM_REF2
X4A.9	SM2	Gnd		

Outputs

Pin-No.	Comment	Function	Plug marking	Signal marking
X13.01	PWM	FSL-solenoid(Y8)	A1	O1.1
X13.02		FSL-solenoid(Y8+)	A1	O1.2
X13.03	PWM	PFH-solenoid(Y4)	A2	O2.1
X13.04		PFH-solenoid(Y4+)	A2	O2.2
X13.05		WI-solenoid(Y3)	A3	O3
X13.06	PWM	SN-solenoid(Y2)	A4	O4
X13.07			A5	O5
X13.08		RAFI-LED(H1)	A6	O6
X13.09			A7	O7
X13.10			A8	O8
X13.11			A9	O9
X13.12	(from DX)	current source DLS	A10/PortA10	O10
X13.13			A11	O11
X13.14			+24V	+24V
X13.15			+24V	+24V
X13.16			A14	O14
X13.17			A15	O15
X13.18			A16	O16
X13.19		SN-solenoid(Y2+)	+24V	+24V
X13.20		WI-solenoid(Y3+)	+24V	+24V
X13.21			+24V	+24V
X13.22		RAFI-LED(H1+)	+24V	+24V
X13.23			+24V	+24V
X13.24			A13	O13
X13.25			A12	O12

Inputs

Pin-No.	Comment	Function	Plug marking	Signal marking
X5.01		TUM-key(S1)	E1	E7
X5.02		NPW-key(S2)	E2	E8
X5.03		EST-key(S2)	E3	E2
X5.04		ANLSP-switch(S14)	E4	E4
X5.05		EST-knee switch(S13)	E5	E5
X5.06		knee switch2	E15	E15
X5.07			E16	E16
X5.08			E14	E14
X5.09	(from DX)	ZZ-Sensor 2438	E9	E9/Port_E9
X5.10			E10	E10
X5.11			E11	E11
X5.12			E12	E12
X5.13			E13	E13
X5.14			E6	E6
X5.15			E7	E1
X5.16			E8	E3
X5.17		S1-S2-S3(Gnd)	0V	0V
X5.18			0V	0V
X5.19		ANLSP-switch(Gnd)	0V	0V
X5.20		EST-knee switch(Gnd)	0V	0V
X5.21			0V	0V
X5.22			0V	0V
X5.23			+24V	+24V
X5.24			A16	output_A16
X5.25			+24V	+24V

13.14 Internet update of the machine software

The machine software can be updated with PFAFF flash programming. For this purpose the PFP boot program and the appropriate control software for the machine type must be installed on a PC. To transfer the data to the machine, the PC and the machine control unit must be connected with an appropriate null modem cable (part no. 91-291 998-91).



The PFP boot program and the control software of the machine type can be downloaded from the PFAFF-homepage using the following path:
www.pfaff-industrial.com/de/service/download/steuerungssoftware.html

To update the machine software carry out the following steps:



While the machine software is being updated, no setting up, maintenance or adjustment work may be carried out on the machine!

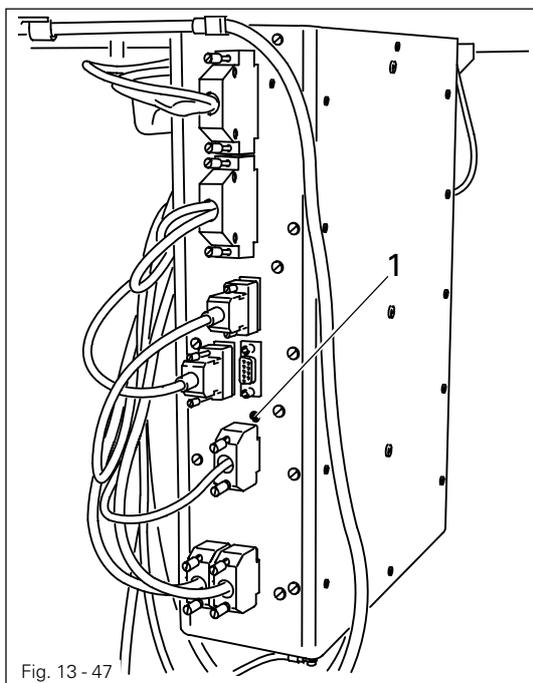


Fig. 13 - 47

- Switch off the machine.
- Connect the PC (serial interface or appropriate USB-adapter) and the machine control unit (RS232). To do so disconnect the plug of the control panel.
- Switch on the PC and start the PFP boot program.
- Select the machine type.
- Press the "programming" button.
- Hold down boot key 1 and switch on the machine.
- Press the "OK" button.

- The software update is carried out, the update progress is shown on the bar display of the PFP boot program.
- During the up-dating procedure the machine must not be switched off.
- When the update has been completed, switch off the machine and end the PFP boot program.
- End the connection between the PC and the machine control unit and reconnect the control panel to the machine control unit.
- Switch on the machine.

A plausibility control is carried out and, if necessary, a cold start.




More information and assistance is at your disposal in the file "PFPHILFE.TXT", which can be called up from the PFP boot program by pressing the "help" button.

14 Wearing parts




This list indicates the most important wearing parts.



You can request a detailed parts list for the complete machine under parts number 296-12-18 760.

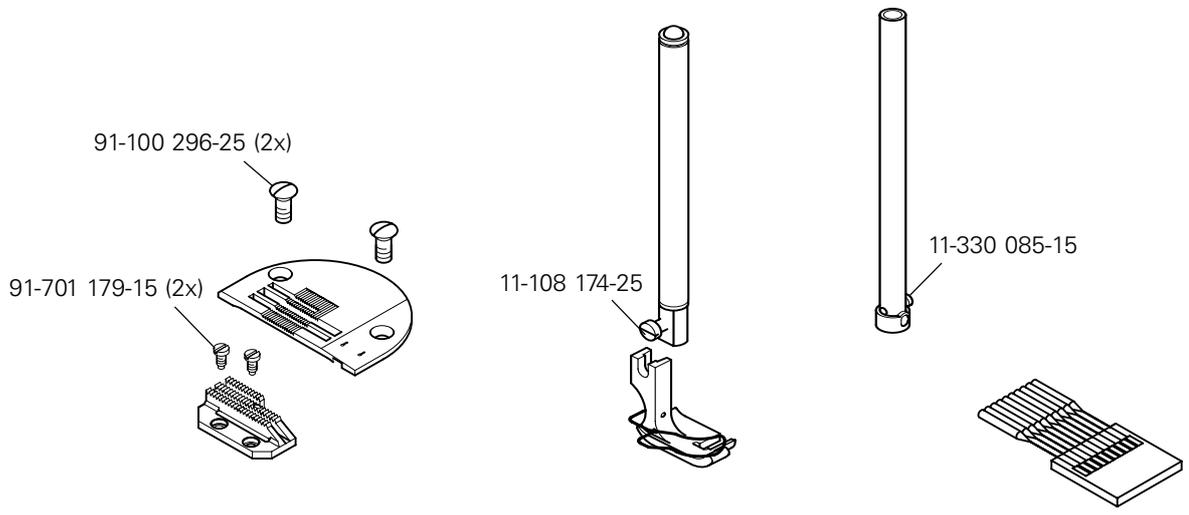

System 134 KK

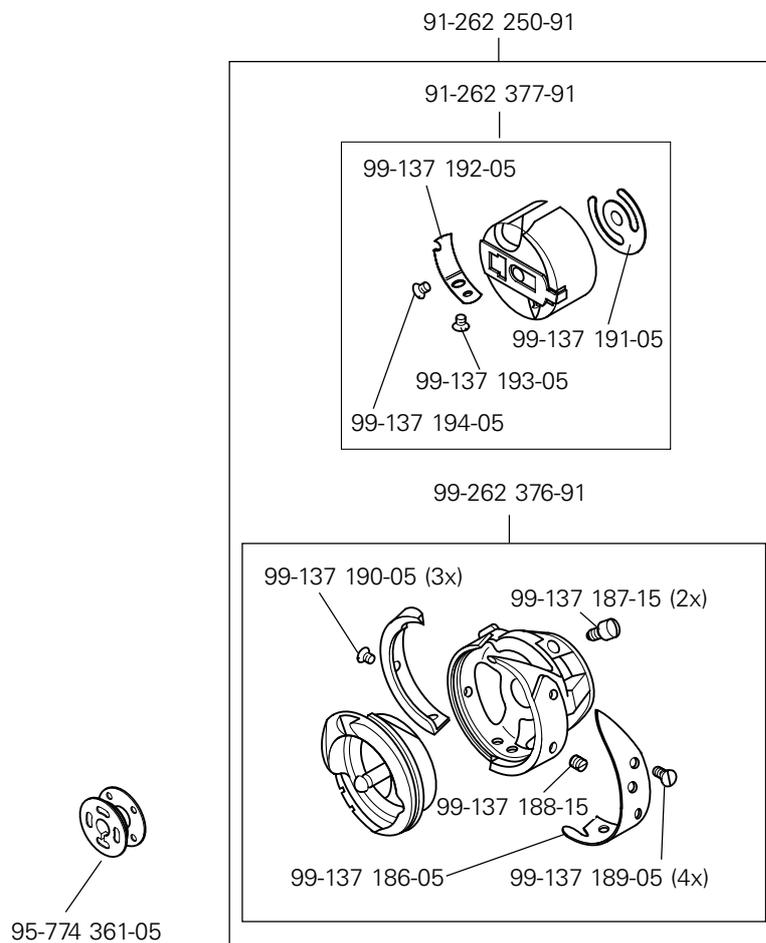



Wearing parts

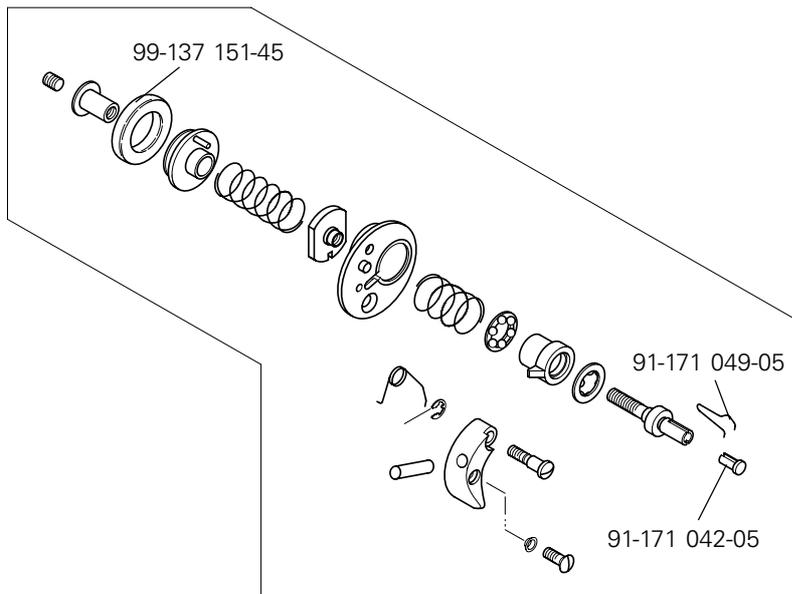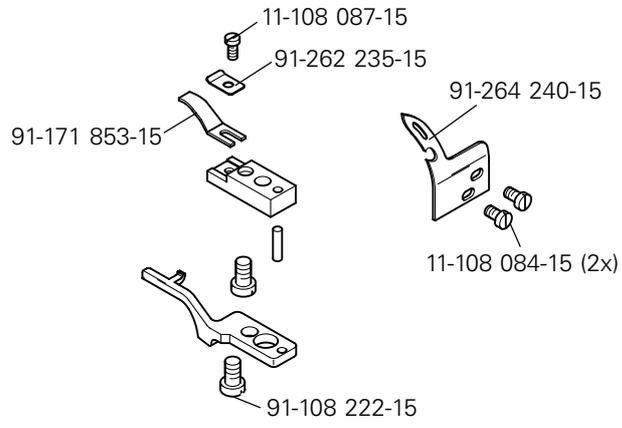


15 Circuit diagrams**Reference list for circuit diagrams**

A1	Controller Quick P322MS
A2	Control panel BDF T1
A3	Incremental transmitter (included in M1)
A4	Keyboard
A11	Light transmitter
A12	Light receiver
or	
A12	Light receiver
A13	Bobbin thread monitor
A14	Sewing head identification
S1	Set value transmitter
S10	Single stitch (included in A4)
S11	Backtacking by hand (backtack) (included in A4)
S12	Needle position (included in A4)
S13	Knee switch (single stitch)
S14	Start inhibitor
S15	2 nd knee switch
H1	Sewing lamp
H10	Bobbin thread alarm (included in A4)
Q1	Main switch
M1	Sewing motor
M10	Stepping motor (feed regulator)
M11	Stepping motor (edge guide)
B10	Hybrid light barrier (included in M10)
Y2	900 (thread trimmer)
Y3	W1 (thread wiper)
Y4	Automatic presser foot lift
Y8	Thread tension release
X40	Zigzag sensor
X41	Light transmitter
X42	Light receiver
X43	Bobbin thread monitor

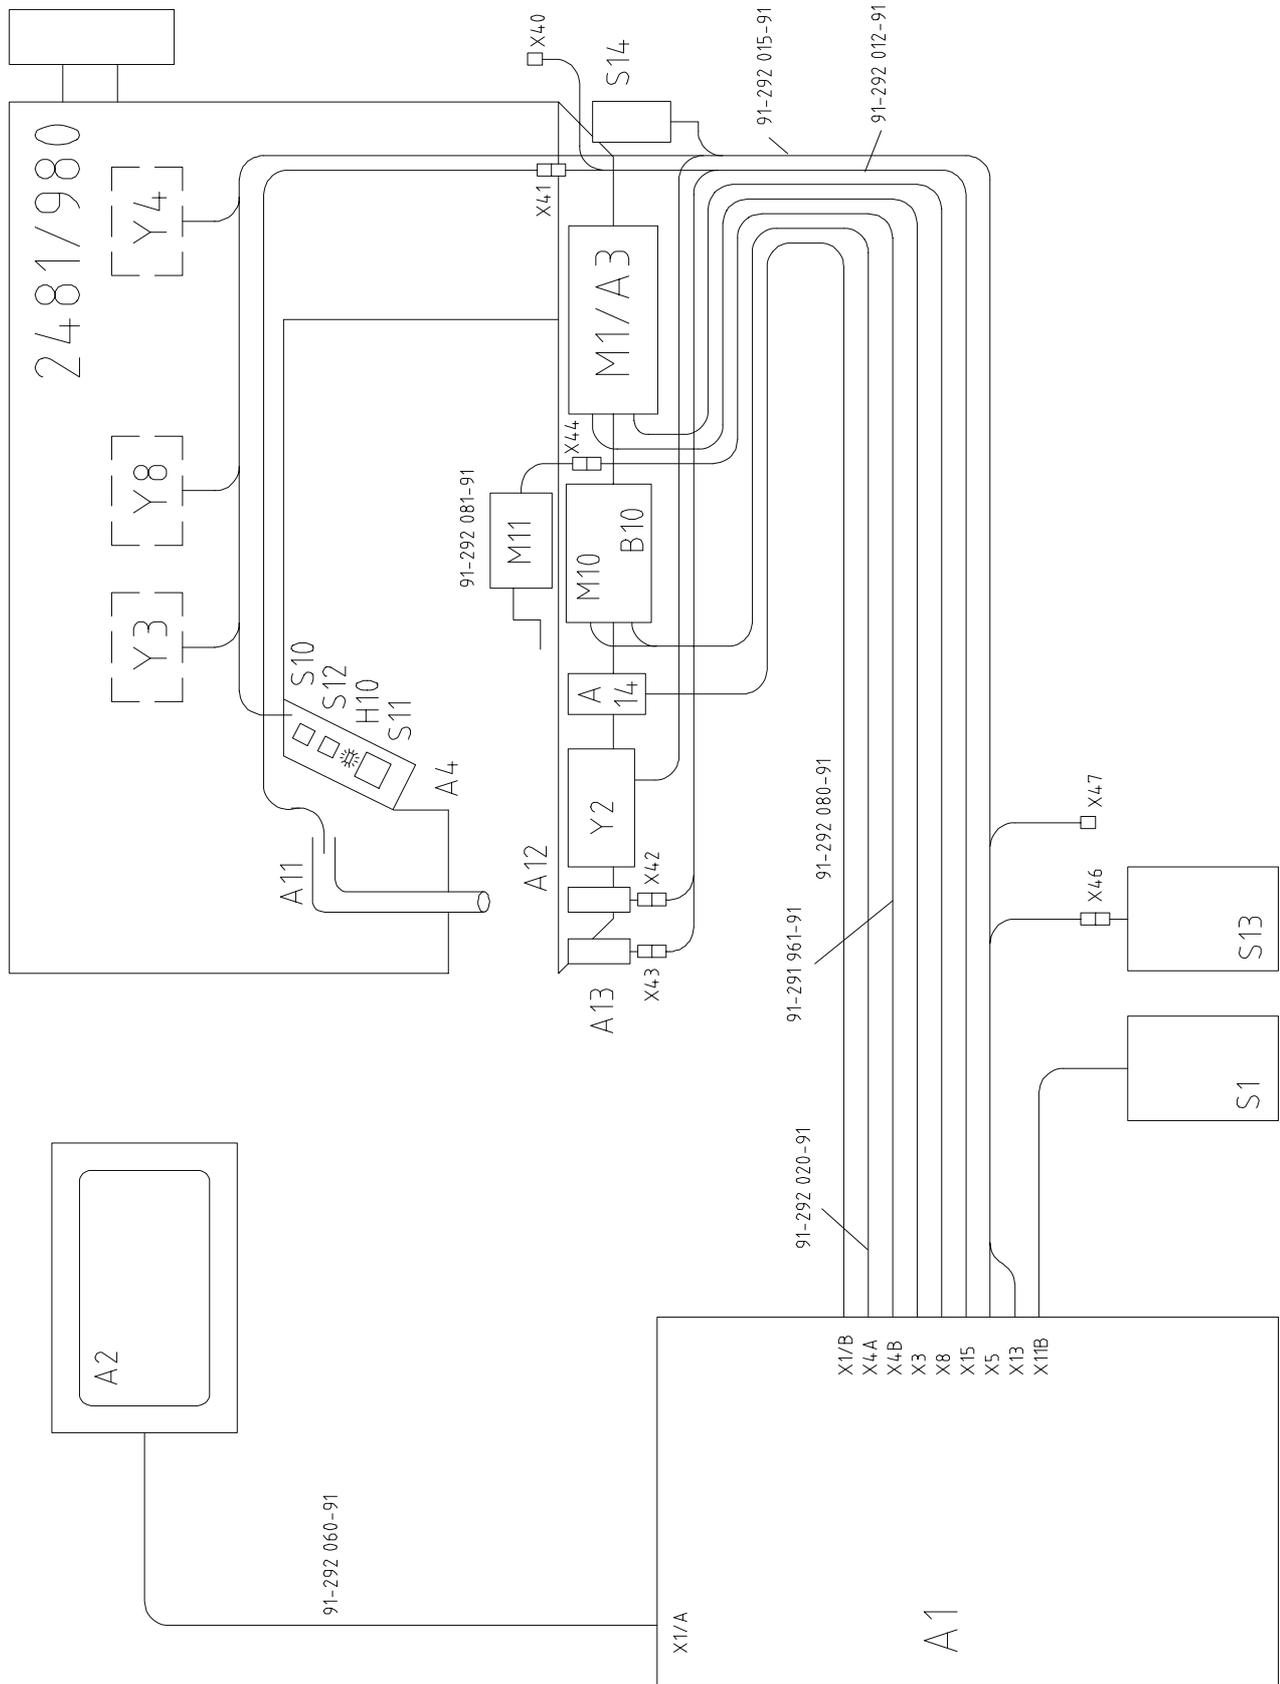

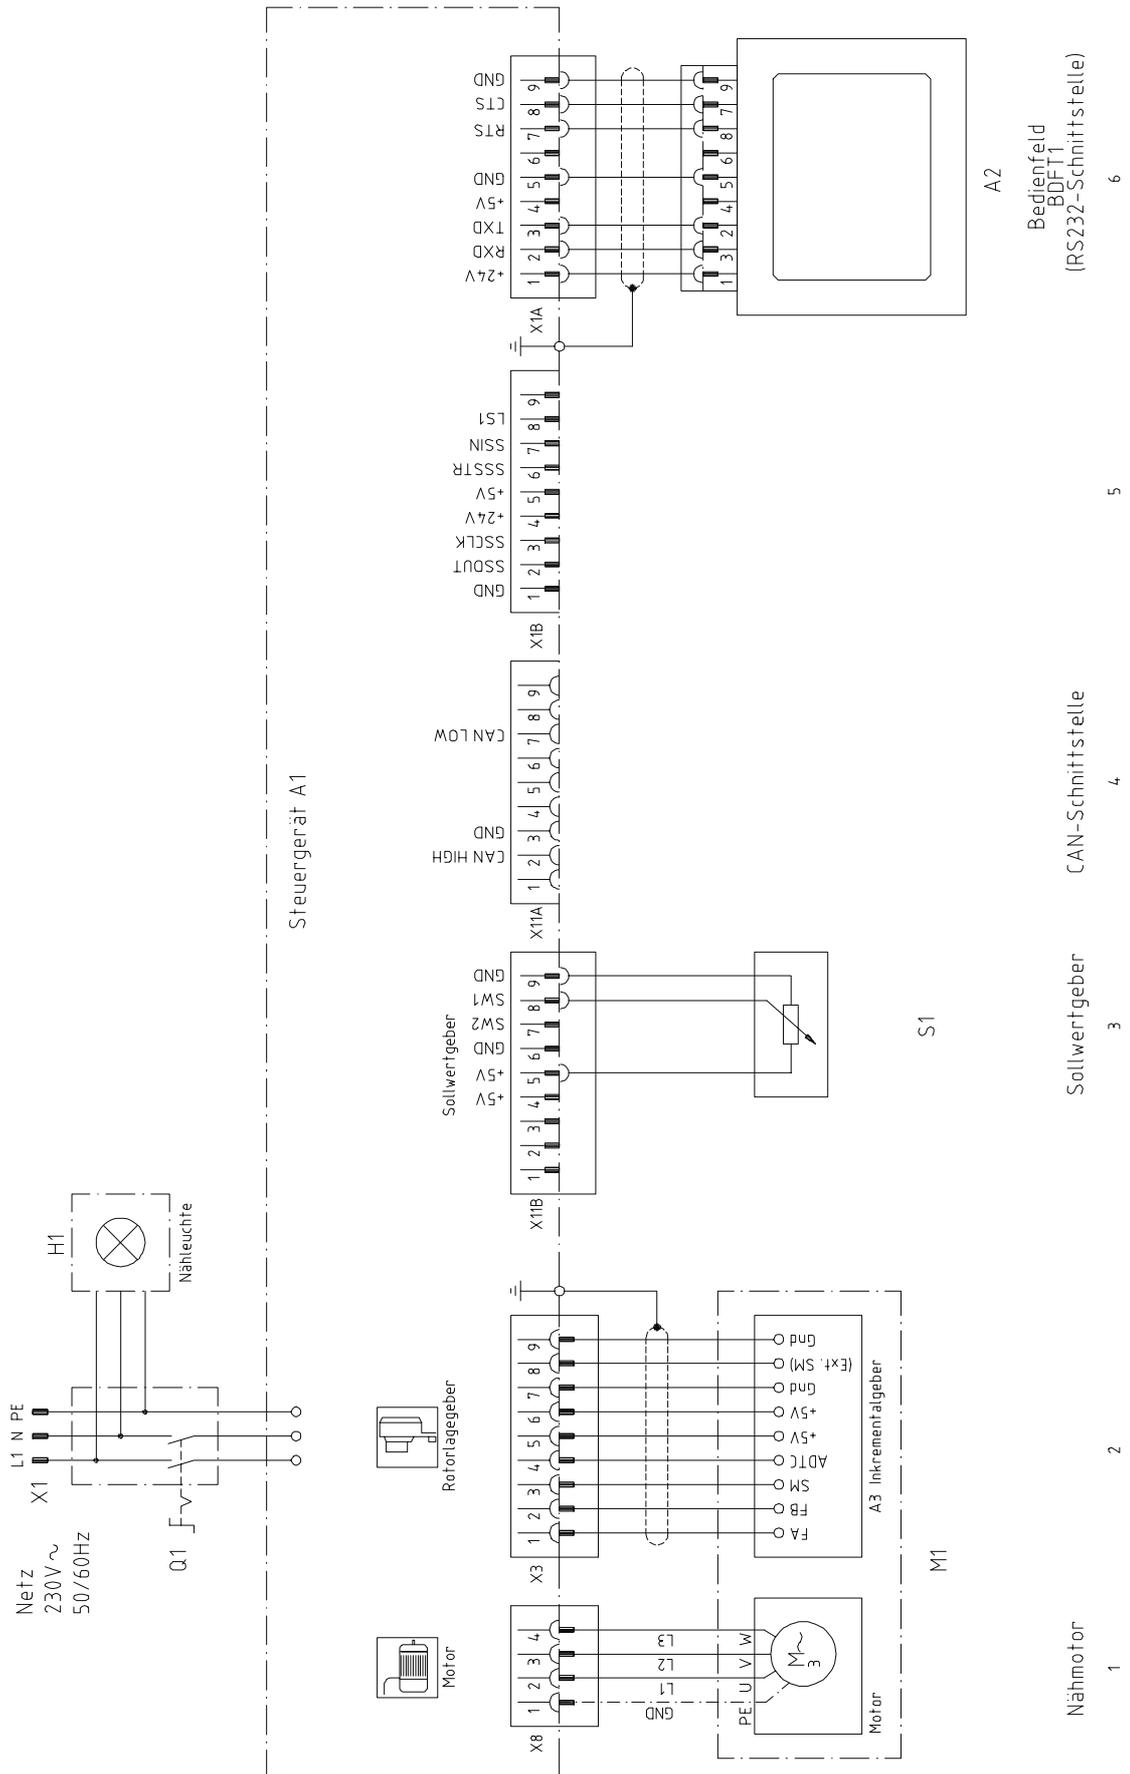

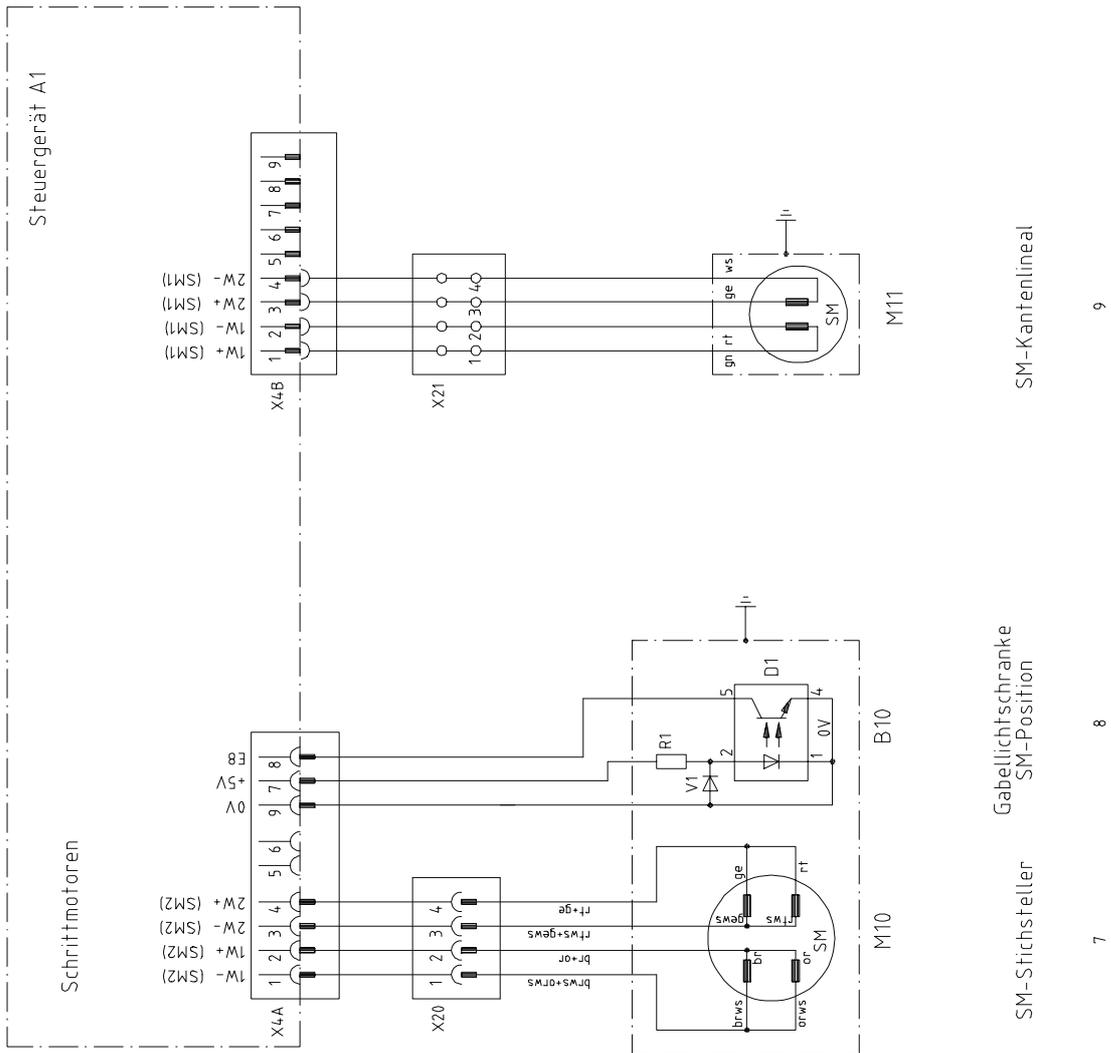



Europäische Union
Wachstum durch Innovation – EFRE



PFAFF Industriesysteme und Maschinen AG

Hans-Geiger-Str. 12 - IG Nord
D-67661 Kaiserslautern

Telefon: +49-6301 3205 - 0
Telefax: +49-6301 3205 - 1386
E-mail: info@pfaff-industrial.com